

DVA-5205P

DVD/VIDEO CD/CD PLAYER

ALPINE

68P30540Y5-O

Printed in Japan (S)

(RCS PONTOISE B 338 101 280)
Sankei Kikaku Co., Ltd.
1-13-38, Hinodai, Hino, Tokyo, Japan

English

- GUIDE FOR INSTALLATION AND CONNECTIONS**
- Please read this GUIDE FOR INSTALLATION AND CONNECTIONS and the OWNER'S MANUAL thoroughly to familiarize yourself with each control and function. We at ALPINE hope that your new DVA-5205P will give you many years of listening enjoyment.
- In case of problems when installing your unit, please contact your authorized ALPINE dealer.

Points to Observe for Safe Usage

- Read this manual carefully before starting operation and use this system safely. We cannot be responsible for problems resulting from failure to observe the instructions in this manual.
- This manual uses various pictorial displays to show how to use this product safely and to avoid harm to yourself and others and damage to your property. Here is what these pictorial displays mean. Understanding them is important for reading this manual.

Meaning of displays

Warning	This symbol means important instructions. Failure to heed them can result in serious injury or death.
Caution	This symbol means important instructions. Failure to heed them can result in injury or property damage.

Warning

DO NOT DISASSEMBLE OR ALTER. Doing so may result in an accident, fire or electric shock.

KEEP SMALL OBJECTS SUCH AS BATTERY OUT OF THE REACH OF CHILDREN. Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES. Failure to do so may result in fire or electric shock.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND. (Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL. Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT SPLICE INTO ELECTRICAL CABLES. Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS. Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES. When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS. Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause much more damage.

MAKE THE CORRECT CONNECTIONS. Failure to make the proper connections may result in fire or product damage.

DO NOT BLOCK VENTS OR RADIATOR PANELS. Doing so may cause heat to build up inside and may result in fire.

Caution

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY. Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST. Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS. The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE. Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.


Precautions

IMPORTANT
Please record the serial number of your unit in the space provided on the back cover of Owner's Manual and keep it as a permanent record. The serial plate is located on the bottom of the unit.

- Be sure to disconnect the cable from the (-) battery post before installing your DVA-5205P. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the color coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage the vehicle's electrical system.
- When making connections to the car's electrical system, be aware of the factory installed components (e.g. on-board computer). Do not tap into these leads to provide power for this unit. When connecting the DVA-5205P to the fuse box, make sure the fuse for the intended circuit of the DVA-5205P has the appropriate amperage. Failure to do so may result in damage to the unit and/or the vehicle. When in doubt, consult your ALPINE dealer.

1. Preparation/Préparatifs/Preparativos

1 Check accessory parts./Vérifier les accessoires./Compruebe los accesorios.

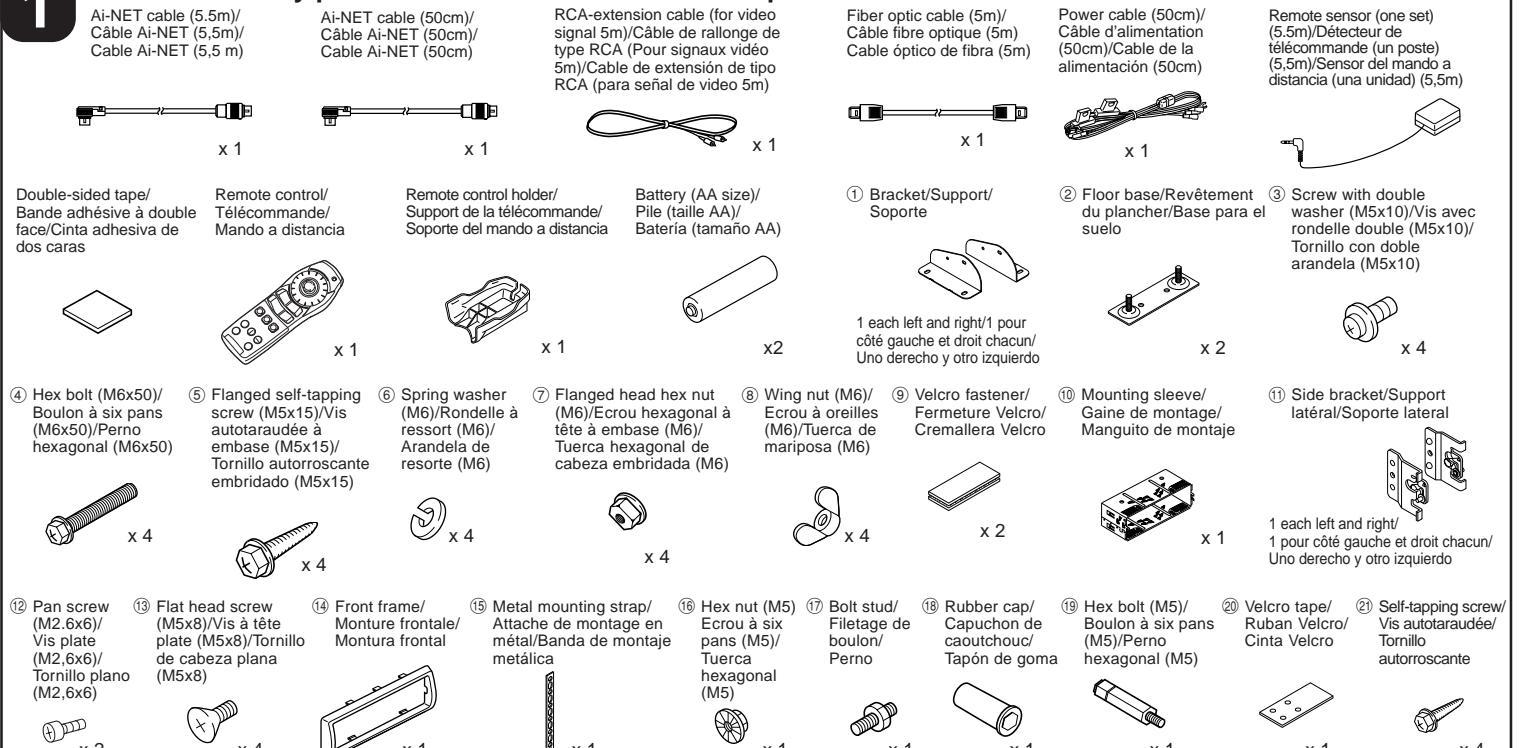


● When mounting with floor base brackets/
Lors de la fixation avec des supports de revêtement de plancher/
Cuando se monte con los soportes de base para el suelo

1 Mount the brackets ① on the unit.

Mount the brackets ① at both sides of the unit with screws with double washer (M5x10) ③.

Fixer les supports ① sur l'appareil.

Fixer les supports ① sur les deux côtés de l'appareil à l'aide de vis avec rondelle double (M5x10) ③.

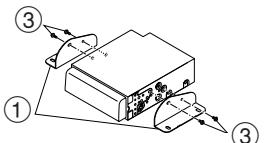

Fije los soportes ① en la unidad.

Fije los soportes ① en ambos lados de la unidad con los tornillos con doble arandela (M5 x 10) ③.

3 Connections/Connexions/Conexiones

① Switched Power Lead (Ignition) (Red)

Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.

When connecting with the Ai-NET compatible AV head unit or the Ai-NET incompatible AV head unit, do not connect the ignition lead.

Lors de la connexion avec une unité principale AV compatible-Ai-NET ou une unité principale compatible avec Ai-NET, ne pas connecter le fil d'allumage.

② Fuse Holder (1A)

Ground Lead (Black)

Connect this lead to a good chassis ground on the vehicle.

Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.

④ Battery Lead (+)

Connect this lead to the positive (+) post of the vehicle's battery.

⑤ Fuse Holder (5A)

⑥ Remote Control Input Lead (White/Brown)

This lead is used in combination with an ALPINE product with a remote control output lead.

⑦ Video Output Connector

This connector is used in combination with the video inputs of another video product (TV monitor).

⑧ Ai-NET Connector (Black)

Connect this to the output or input connector of other product equipped with Ai-NET.

Connect this connector to the Digital Audio Processor (PXA-H510) or Ai-NET connector of the Head unit (when Digital Audio Processor is not connected).

⑨ Ai-NET Connector (Gray)

Connect this to the output or input connector of other product equipped with Ai-NET.

Connect this connector to the Head unit (when the Digital Audio Processor is connected) or to the Ai-NET connector of the Head unit (when the Digital Audio Processor is not connected).

⑩ Remote Control Eye Jack

Connect this to the remote control sensor unit. Not used when using a monitor with a built-in remote control sensor unit. A remote control sensor unit is needed when a monitor or navigation unit made by other company is connected.

⑪ Digital Output Terminal (Optical)

This terminal is used to connect DVA-5205P to ALPINE digital products such as the PXA-H510.

These products include a fiber optic cable that will plug directly into the Digital Output Terminal of the DVA-5205P.

⑫ RCA Extension Cable (Included with DVD video player)

⑬ Ai-NET Cable 5.5m (Included with DVD video player)

Use a proper Ai-NET cable (refer to ⑯) depending on a mounting location.

⑭ Ai-NET Cable 50cm (Included with DVD video player)

Use a proper Ai-NET cable (refer to ⑯) depending on a mounting location.

⑮ Fiber Optic Cable (Included with DVD video player)

⑯ Remote sensor

Not used when a monitor with a remote sensor is used. A remote sensor is needed when a monitor or navigation unit made by other company is connected.

⑰ AUX Video Input (AUX1) Terminal

Connect video output lead of a DVA-5205P to this terminal.

⑱ Digital Input Terminal (Optical)

Connect this terminal to the digital output terminal, fiber optic.

⑲ Ai-NET Cable (Included with CD Shuttle)

⑳ Ai-NET (Inclus avec le changeur de CD)

Connect this to the output or input connector of other product equipped with Ai-NET.

⑳ System Switch

When connecting a digital audio processor using Ai-NET feature, place this switch in the EQ/DIV position.

When no digital audio processor is connected, leave the switch in the OFF position.

⑳ Audio Output Connector

This output may be connected to a Rear Monitor with a volume control or an auxiliary audio preamp. This is used to monitor the DVD audio while the main audio system is being driven by another source (such as Radio or CD).

⑳ RCA Extension Cable (Sold separately)

⑳ AUX Audio Input (AUX1) Terminal

Connect audio output lead of a DVA-5205P to this terminal.

⑳ Borne de sortie optique (Inclus avec le lecteur DVD vidéo)

⑳ DéTECTEUR DE TÉLÉCOMMANDE

Not used when a monitor with a remote sensor is used. A remote sensor is needed when a monitor or navigation unit made by other company is connected.

⑳ JACK DE L'ÉMETTEUR DE LA TÉLÉCOMMANDE

Brancher ce jack à l'unité de réception de la télécommande. N'est pas utilisé lorsque l'unité de réception de la télécommande intégrée. Une unité de réception de télécommande est nécessaire lorsqu'un moniteur ou un appareil de navigation fabriqué par une autre firme est connecté.

⑳ BORNE DE SORTIE NUMÉRIQUE (OPTIQUE)

Brancher cette borne à la borne de sortie numérique, avec le câble de fibre optique du DVA-5205P.

⑳ Câble de sortie numérique (Optique)

⑳ Câble de fibre optique (Inclus avec le lecteur DVD vidéo)

⑳ Câble de fibre optique (Inclus avec le lecteur DVD)

⑳ SENSOR DEL MANDO A DISTANCIA

No se utiliza este terminal para conectar a un DVA-5205P a un producto digital de fibra óptica (Procesador audio digital PXA-H510). Estos productos incluyen un cable de fibra óptica que se encuadrará directamente en el terminal de salida de fibra óptica.

⑳ CABLE DE SALIDA DE FIBRA ÓPTICA (DVA-5205P)

⑳ CABLE DE SALIDA DE FIBRA ÓPTICA