



- NOTES
- S1 SELECTOR SWITCH-TAPE
  - S2 SELECTOR SWITCH-PHONO
  - S3 SELECTOR SWITCH-FM AUTO
  - S4 SELECTOR SWITCH-AM
  - S5 MONO SWITCH
  - S6 MONITOR SWITCH
  - S7 LOUDNESS SWITCH
  - S8 HIGH FILTER SWITCH
  - S9 FM AFC SWITCH
  - S10 MUTING SWITCH
  - S11 POWER SWITCH
  - S12 SPEAKER SELECTOR SWITCH-A
  - S13 SPEAKER SELECTOR SWITCH-B
  - V NO INPUT SIGNAL DC VOLTAGE
  - (V) MAX INPUT SIGNAL DC VOLTAGE



**RANK ARENA**  
**R 1020**  
**MR 20**  
**MR 25**