


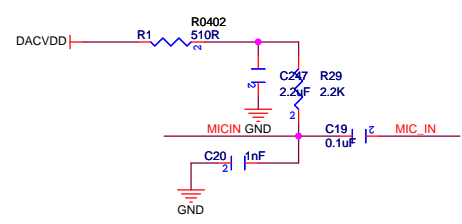
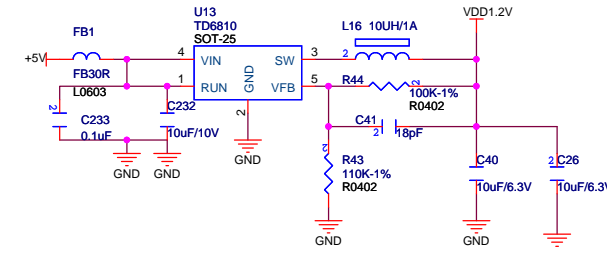
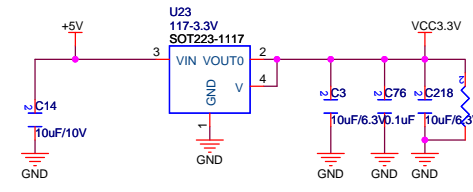
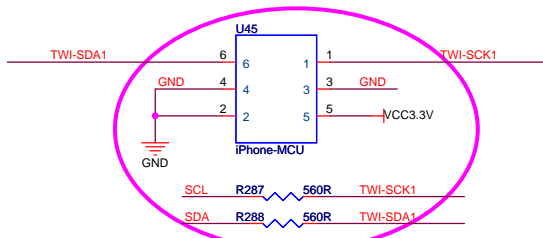
 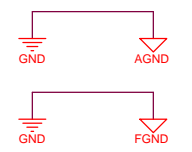
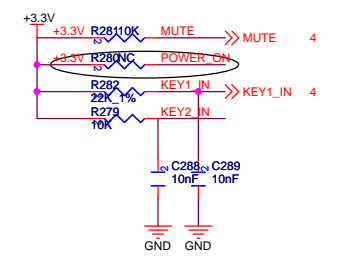
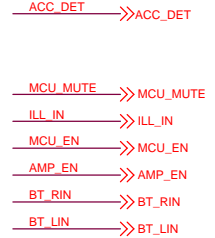

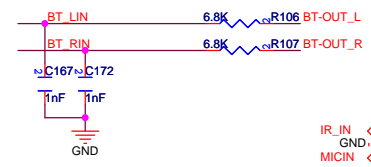
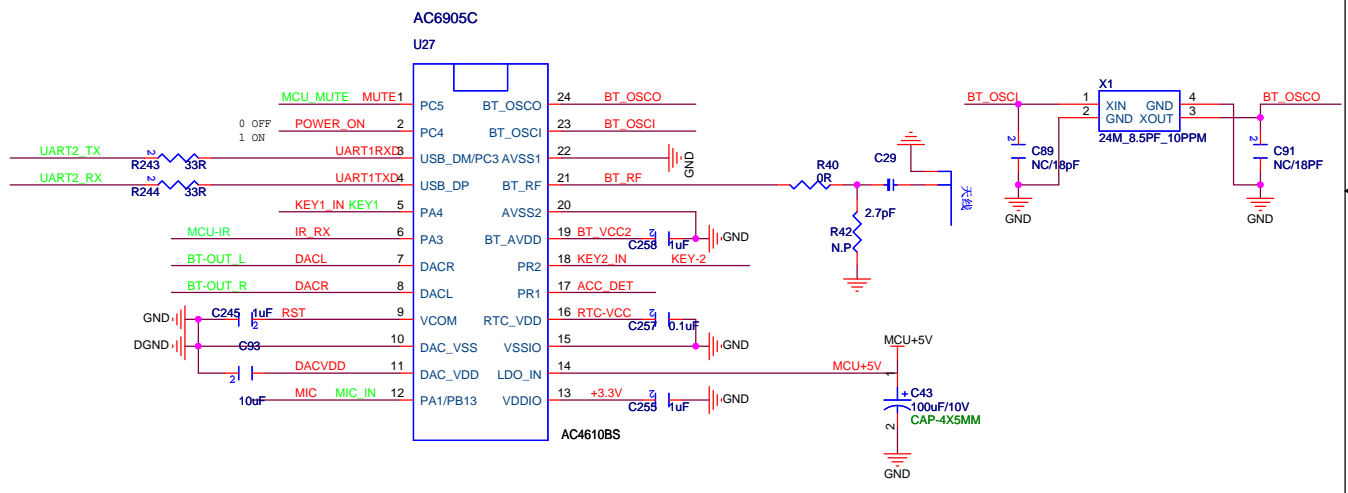



VGH/VGL

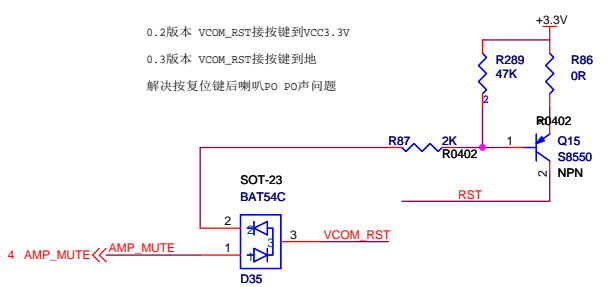

0.2版本 VCOM_RST接按键到VCC3.3V
 0.3版本 VCOM_RST接按键到地
 解决按复位键后喇叭PO声问题

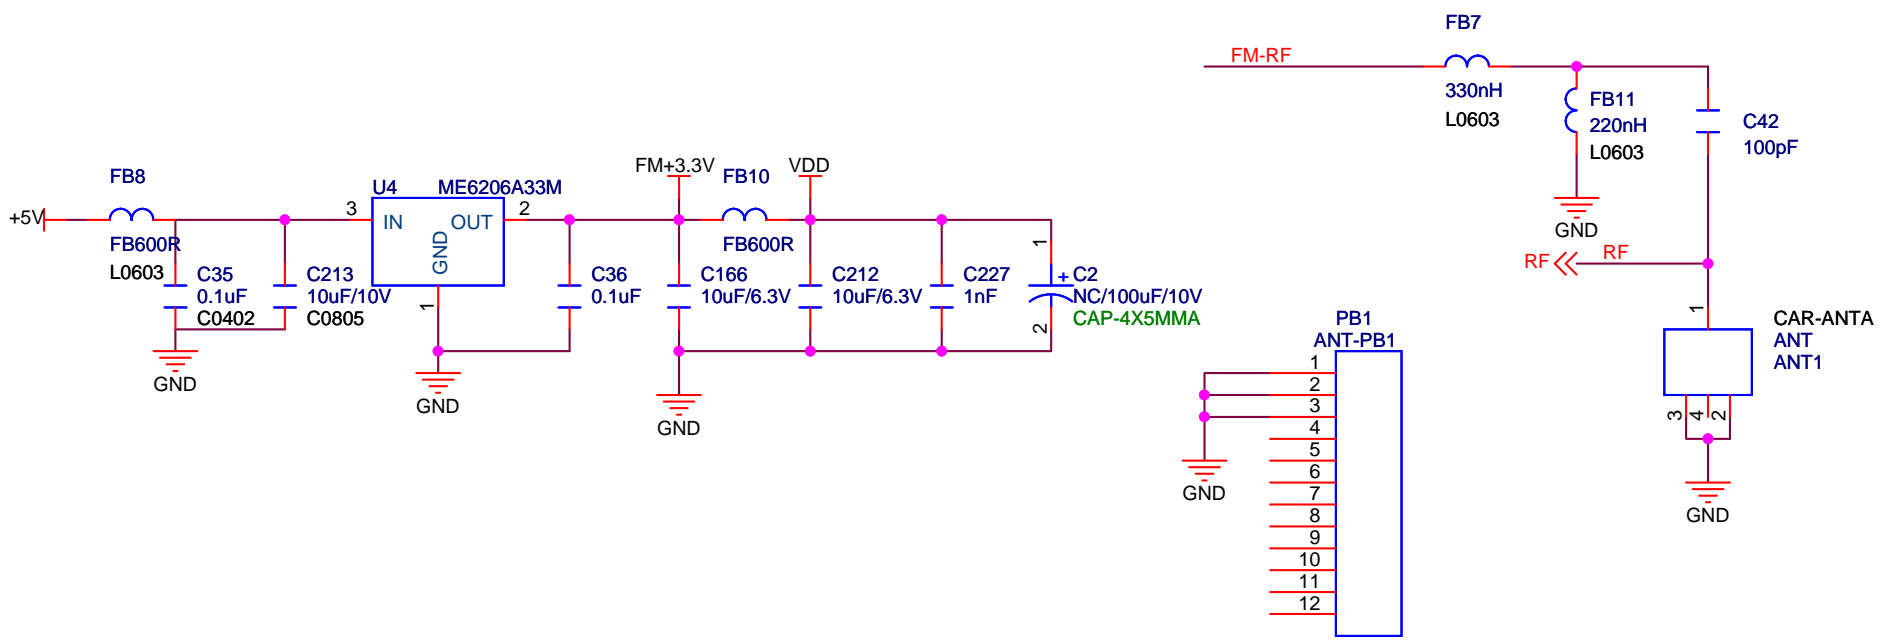

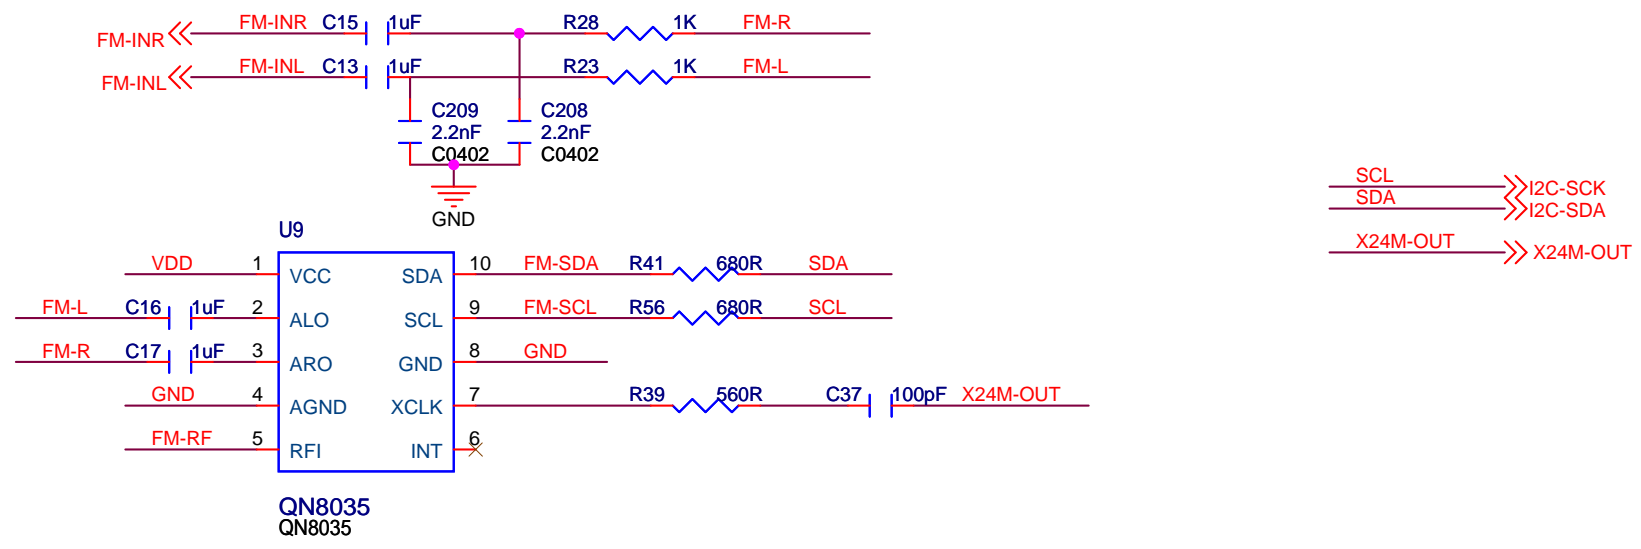

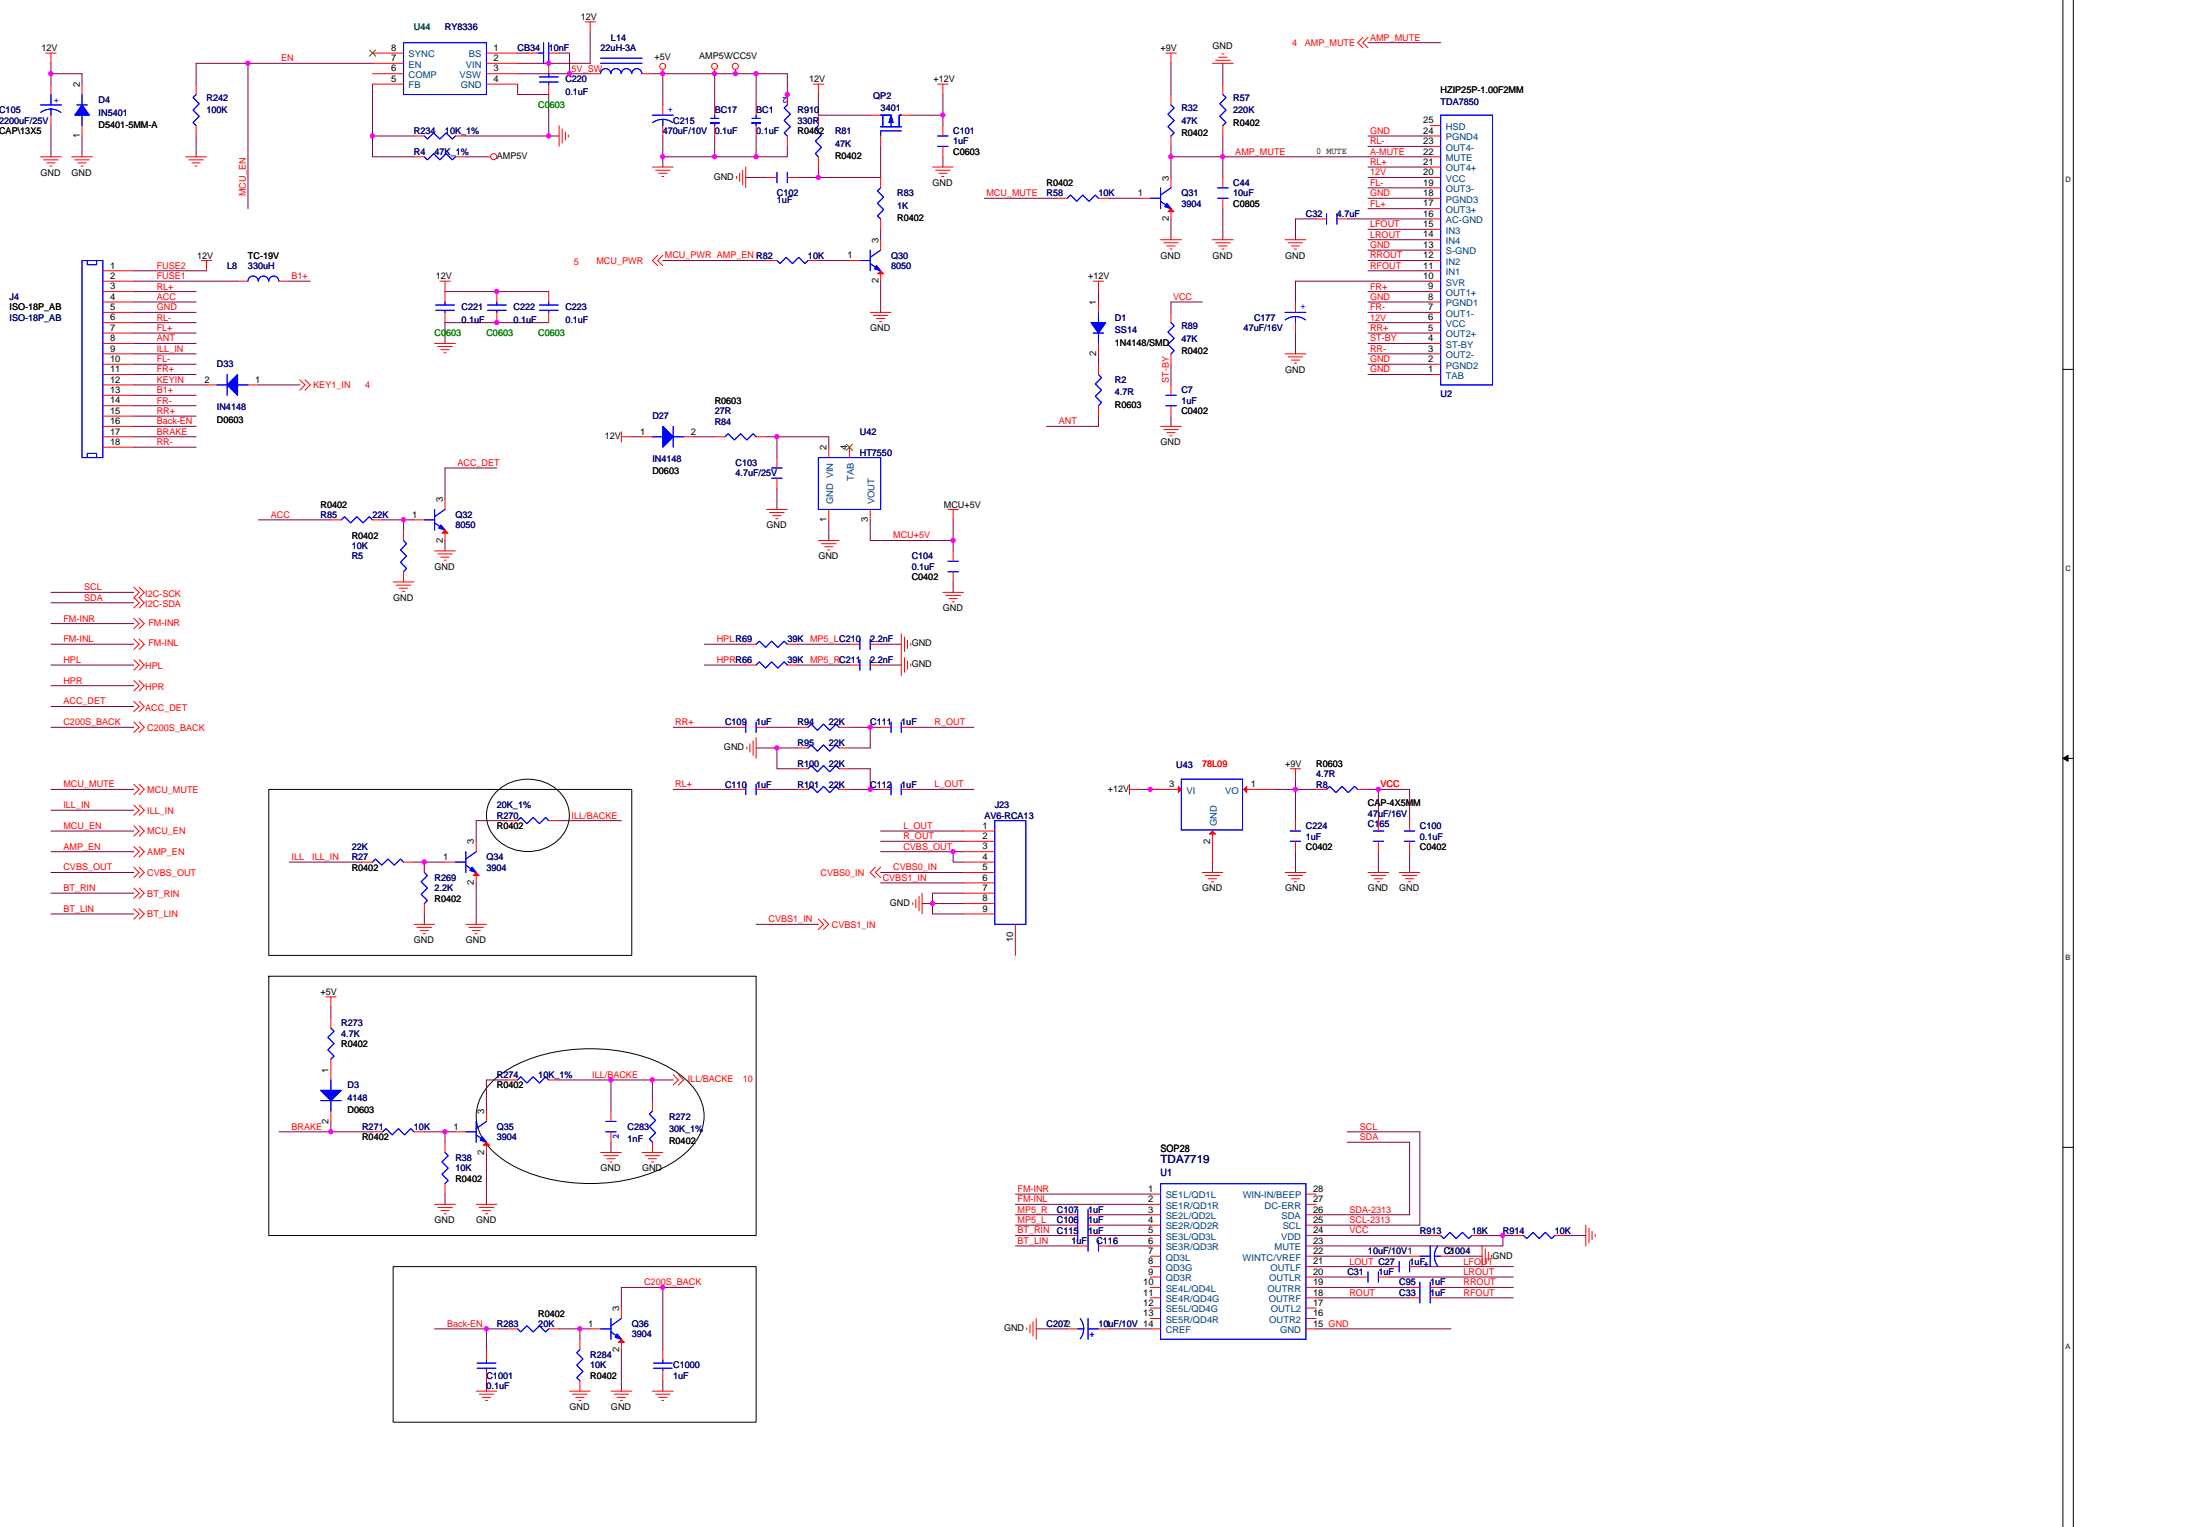

- SCL >>> I2C-SCK
- SDA >>> I2C-SDA
- FM-INR >>> FM-INR
- FM-INL >>> FM-INL
- HPL >>> HPL
- HPR >>> HPR
- ACC_DET >>> ACC_DET
- C200S_BACK >>> C200S_BACK

- MCU_MUTE >>> MCU_MUTE
- ILL_IN >>> ILL_IN
- MCU_EN >>> MCU_EN
- AMP_EN >>> AMP_EN
- CVBS_OUT >>> CVBS_OUT
- BT_RIN >>> BT_RIN
- BT_LIN >>> BT_LIN

