


Service Manual

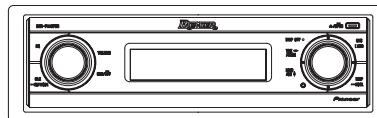

ORDER NO.
CRT3650

DEH-P880PRS/XN/UC

MULTI-CD CONTROL HIGH POWER CD/MP3/WMA/AAC PLAYER WITH FM/AM TUNER

DEH-P880PRS/XN/UC
DEH-P80RS/XN/ES

MULTI-CD CONTROL DSP HIGH POWER CD/MP3/WMA/AAC PLAYER WITH RDS TUNER

DEH-P88RS/XN/EW5

This service manual should be used together with the following manual(s):

Model No.	Order No.	Mech.Module	Remarks
CX-3164	CRT3583	S10.5COMP1	CD Mech. Module : Circuit Descriptions, Mech. Descriptions, Disassembly



For details, refer to "Important Check Points for Good Servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2006

SAFETY INFORMATION

CAUTION

- A This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

- B Health & Safety Code Section 25249.6 - Proposition 65

● Safety Precautions for those who Service this Unit.

- When checking or adjusting the emitting power of the laser diode exercise caution in order to get safe, reliable results.

Caution:

1. During repair or tests, minimum distance of 13cm from the focus lens must be kept.
2. During repair or tests, do not view laser beam for 10 seconds or longer.

C

**CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE
SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

CAUTION

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

D The following caution label appears on your unit.

Location: on the bottom of the unit



En

E

F

WARNING!

The AEL (accessible emission level) of the laser power output is less than CLASS 1 but the laser component is capable of emitting radiation exceeding the limit for CLASS 1.

A specially instructed person should do servicing operation of the apparatus.

A

Laser diode characteristics

Wave length : 785~814nm

Maximum output : 1190μW(Emitting period : unlimited)

B

Additional Laser Caution

Transistors Q101 in PCB drive the laser diodes.

When Q101 is shorted between their terminals, the laser diodes will radiate beam. If the top cover is removed with no disc loaded while such short-circuit is continued, the naked eyes may be exposed to the laser beam.

C

● Service Precautions

1. You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.
2. This product memorizes every audio setting value during operating product such as VOL position and EQ setting. As the setting value is recorded in the built-in EEPROM, it does not return to the initial setting value even if you press RESET key.
If you return it to the initial setting value, execute the Audio Reset in the initial setting menu.
However, if you execute it, the user setting is deleted.
If you change the audio setting when repairing the product, the product is returned to the user with that setting, so take care of it.

D

Method of Audio Reset

After pressing MULTI-CONTROL key for two seconds, select Audio Reset by right and left rotation.

After shifting to the reset confirmation screen by right-pressing MULTI-CONTROL key and execute the reset by center-pressing.

E



F

A [Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

A. 1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

B. 2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

C. 3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

D. 4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

E. 5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

CONTENTS

SAFETY INFORMATION.....	2
1. SPECIFICATIONS	6
2. EXPLODED VIEWS AND PARTS LIST.....	12
2.1 PACKING(UC, ES MODEL).....	12
2.2 PACKING(EW5 MODEL).....	14
2.3 EXTERIOR(1)(UC, ES MODEL).....	16
2.4 EXTERIOR(1)(EW5 MODEL).....	18
2.5 EXTERIOR(2).....	20
2.6 CD MECHANISM MODULE	22
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	24
3.1 BLOCK DIAGRAM.....	24
3.2 OVERALL CONNECTION DIAGRAM(UC, ES MODEL)(GUIDE PAGE)	28
3.3 OVERALL CONNECTION DIAGRAM(EW5 MODEL)(GUIDE PAGE)	34
3.4 KEYBOARD UNIT	40
3.5 CD MECHANISM MODULE(GUIDE PAGE).....	42
4. PCB CONNECTION DIAGRAM	52
4.1 TUNER AMP UNIT	52
4.2 KEYBOARD UNIT	56
4.3 CD CORE UNIT(S10.5COMP1)	58
4.4 SWITCH UNIT	60
5. ELECTRICAL PARTS LIST	61
6. ADJUSTMENT	76
6.1 OEL ADJUSTMENT	76
6.2 CD ADJUSTMENT	77
6.3 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT.....	79
6.4 ERROR MODE	81
6.5 E.VOL IC OSCILLATING FREQUENCY ADJUSTMENT.....	82
6.6 SYSTEM MICROCOMPUTER TEST PROGRAM.....	82
7. GENERAL INFORMATION	83
7.1 DIAGNOSIS	83
7.1.1 DISASSEMBLY	83
7.1.2 CONNECTOR FUNCTION DESCRIPTION	87
7.2 IC	88
7.3 OPERATIONAL FLOW CHART	103
8. OPERATIONS	104

A

B

C

D

E

F

1. SPECIFICATIONS

● DEH-P880PRS/XN/UC

General

Power source	14.4 V DC (10.8 V to 15.1 V allowable)
Grounding system	Negative type
Max. current consumption	10.0 A
Backup current	5 mA or less
Dimensions (W × H × D):	
DIN	
Chassis	178 × 50 × 159 mm (7 × 2 × 6-1/4 in.)
Nose	188 × 58 × 30 mm (7-3/8 × 2-1/4 × 1-1/8 in.)
D	
Chassis	178 × 50 × 164 mm (7 × 2 × 6-1/2 in.)
Nose	170 × 45 × 25 mm (6-3/4 × 1-3/4 × 1 in.)
Weight	1.6 kg (3.5 lbs)

Audio/DSP

Maximum power output	50 W × 4
Continuous power output ...	22 W × 4 (50 Hz to 15 000 Hz, 5% THD, 4 Ω load, both channels driven)
Load impedance	4 Ω (4 Ω to 8 Ω allowable)
Preout max output level/output impedance	5.0 V/100Ω
Loudness contour	+10 dB (100 Hz), +6.5 dB (10 kHz) (volume: -30 dB)
Equalizer (Left/Right independent 16-Band Graphic Equalizer):	
Frequency	20/31.5/50/80/125/200/315/ 500/800/1.25k/2k/3.15k/5k/ 8k/12.5k/20k Hz
Equalization range	±12 dB (2 dB step)
Auto equalizer: (Front & rear & subwoofer/High & mid & low)	
Frequency	20/31.5/50/80/125/200/315/ 500/800/1.25k/2k/3.15k/5k/ 8k/12.5k/20k Hz
Equalization range	+6 to -12 dB (2 dB step)
Network (standard mode):	
HPF (Front/rear):	
Frequency	50/63/80/100/125/160/200 Hz
Slope	0 (Pass)/-6/-12 dB/oct
Gain	0 to -24 dB/Mute (1 dB step)

Subwoofer (stereo/mono):

Frequency 50/63/80/100/125/160/200
Hz

Slope -6/-12/-18 dB/oct

Gain +6 to -24 dB/Mute (1 dB
step)

Phase Normal/Reverse

Network (3-way network mode):

High HPF:

Frequency 1.25/1.6/2/2.5/3.15/4/5/6.3/8/
10/12.5 kHz

Slope -6/-12/-18/-24 dB/oct

Gain 0 to -24 dB/Mute (1 dB
step)

Phase Normal/Reverse

Mid HPF/LPF:

Frequency (LPF) ... 1.25/1.6/2/2.5/3.15/4/5/6.3/8/
10/12.5 kHz

Frequency (HPF)

..... 25/31.5/40/50/63/80/100/125/
160/200/250 Hz

Slope (LPF) 0 (Pass)/-6/-12/-18/-24 dB/
oct

Slope (HPF) 0 (Pass)/-6/-12/-18/-24 dB/
oct

Gain 0 to -24 dB/Mute (1 dB
step)

Phase Normal/Reverse

Low LPF (stereo/mono):

Frequency 25/31.5/40/50/63/80/100/125/
160/200/250 Hz

Slope -12/-18/-24/-30/-36 dB/oct

Gain +6 to -24 dB/Mute (1 dB
step)

Phase Normal/Reverse

CD player

System Compact disc audio system

Usable discs Compact disc

Signal format:

Sampling frequency 44.1 kHz

Number of quantization bits
..... 16; linear

Frequency characteristics ... 5 Hz to 20 000 Hz (±1 dB)

Signal-to-noise ratio 105 dB (1 kHz) (IHF-A net-
work)

Dynamic range 100 dB (1 kHz)

Number of channels 2 (stereo)

MP3 decoding format MPEG-1 & 2 Audio Layer 3

WMA decoding format Ver. 7, 7.1, 8, 9, 10 (2ch
audio)

(Windows Media Player)

AAC decoding format MPEG-4 AAC (iTunes® encoded only)
 WAV signal format Linear PCM & MS ADPCM

A

FM tuner

Frequency range 87.9 MHz to 107.9 MHz
 Usable sensitivity 8 dBf (0.7 μ V/75 Ω , mono,
 S/N: 30 dB)
 50 dB quieting sensitivity 10 dBf (0.9 μ V/75 Ω , mono)
 Signal-to-noise ratio 75 dB (IHF-A network)
 Distortion 0.3 % (at 65 dBf, 1 kHz,
 stereo)
 0.05 % (at 65 dBf, 1 kHz,
 mono)
 Frequency response 30 Hz to 15 000 Hz (± 3 dB)
 Stereo separation 45 dB (at 65 dBf, 1 kHz)
 Selectivity 80 dB (± 200 kHz)
 Three-signal intermodulation (desired signal level)
 30 dBf (two undesired signal level: 100 dBf)

B

AM tuner

Frequency range 530 kHz to 1 710 kHz (10
 kHz)
 Usable sensitivity 18 μ V (S/N: 20 dB)
 Signal-to-noise ratio 67 dB (IHF-A network)

C



Note

Specifications and the design are subject to possible modifications without notice due to improvements.

D

E

F

● DEH-P88RS/XN/EW5

General

A	Power source	14.4 V DC (10.8 V to 15.1 V allowable)
	Grounding system	Negative type
	Max. current consumption	10.0 A
	Backup current	5 mA or less
	Dimensions (W × H × D):	
DIN	Chassis	178 × 50 × 159 mm
	Nose	188 × 58 × 30 mm
B	D	
	Chassis	178 × 50 × 164 mm
	Nose	170 × 45 × 25 mm
	Weight	1.6 kg

Audio/DSP

C	Maximum power output	50 W × 4
	Continuous power output ...	27 W × 4 (DIN 45324, +B=14.4 V)
	Load impedance	4 Ω (4 Ω to 8 Ω allowable)
	Preout max output level/output impedance	5.0 V/100Ω
	Loudness contour	+10 dB (100 Hz), +6.5 dB (10 kHz) (volume: -30 dB)
	Equalizer (Left/Right independent 16-Band Graphic Equalizer):	
	Frequency	20/31.5/50/80/125/200/315/ 500/800/1.25k/2k/3.15k/5k/ 8k/12.5k/20k Hz
	Equalization range	±12 dB (2 dB step)
D	Auto equalizer:	
	(Front & rear & subwoofer/High & mid & low)	
	Frequency	20/31.5/50/80/125/200/315/ 500/800/1.25k/2k/3.15k/5k/ 8k/12.5k/20k Hz
	Equalization range	+6 to -12 dB (2 dB step)
E	Network (standard mode):	
	HPF (Front/rear):	
	Frequency	50/63/80/100/125/160/200 Hz
	Slope	0 (Pass)/-6/-12 dB/oct
	Gain	0 to -24 dB/Mute (1 dB step)
	Subwoofer (stereo/mono):	
	Frequency	50/63/80/100/125/160/200 Hz
	Slope	-6/-12/-18 dB/oct
	Gain	+6 to -24 dB/Mute (1 dB step)
	Phase	Normal/Reverse

Network (3-way network mode):

High HPF:

Frequency	1.25/1.6/2/2.5/3.15/4/5/6.3/8/ 10/12.5 kHz
Slope	-6/-12/-18/-24 dB/oct
Gain	0 to -24 dB/Mute (1 dB step)
Phase	Normal/Reverse

Mid HPF/LPF:

Frequency (LPF) ...	1.25/1.6/2/2.5/3.15/4/5/6.3/8/ 10/12.5 kHz
Frequency (HPF)	25/31.5/40/50/63/80/100/125/ 160/200/250 Hz

Slope (LPF)	0 (Pass)/-6/-12/-18/-24 dB/ oct
Slope (HPF)	0 (Pass)/-6/-12/-18/-24 dB/ oct

Gain	0 to -24 dB/Mute (1 dB step)
Phase	Normal/Reverse

Low LPF (stereo/mono):	Frequency	25/31.5/40/50/63/80/100/125/ 160/200/250 Hz
	Slope	-12/-18/-24/-30/-36 dB/oct

Gain	+6 to -24 dB/Mute (1 dB step)
Phase	Normal/Reverse

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal format:	
Sampling frequency	44.1 kHz
Number of quantization bits	16; linear
Frequency characteristics ...	5 Hz to 20 000 Hz (±1 dB)
Signal-to-noise ratio	105 dB (1 kHz) (IEC-A network)
Dynamic range	100 dB (1 kHz)
Number of channels	2 (stereo)
MP3 decoding format	MPEG-1 & 2 Audio Layer 3
WMA decoding format	Ver. 7, 7.1, 8, 9, 10 (2ch audio) (Windows Media Player)
AAC decoding format	MPEG-4 AAC (iTunes® encoded only)
WAV signal format	Linear PCM & MS ADPCM

FM tuner

Frequency range	87.5 MHz to 108.0 MHz
-----------------------	-----------------------

Usable sensitivity 8 dBf (0.7 μ V/75 Ω , mono,
S/N: 30 dB)
 50 dB quieting sensitivity 10 dBf (0.9 μ V/75 Ω , mono)
 Signal-to-noise ratio 75 dB (IEC-A network)
 Distortion 0.3 % (at 65 dBf, 1 kHz,
stereo)
 0.05 % (at 65 dBf, 1 kHz,
mono)
 Frequency response 30 Hz to 15 000 Hz (\pm 3 dB)
 Stereo separation 45 dB (at 65 dBf, 1 kHz)
 Selectivity 80 dB (\pm 200 kHz)

A

MW tuner

Frequency range 531 kHz to 1 602 kHz (9 kHz)
 Usable sensitivity 18 μ V (S/N: 20 dB)
 Signal-to-noise ratio 67 dB (IEC-A network)

B

LW tuner

Frequency range 153 kHz to 281 kHz
 Usable sensitivity 30 μ V (S/N: 20 dB)
 Signal-to-noise ratio 67 dB (IEC-A network)

**Note**

Specifications and the design are subject to pos-
sible modifications without notice due to im-
provements. ■

C

D

E

● DEH-P80RS/XN/ES

General

A	Rated power source	14.4 V DC (allowable voltage range: 12.0 V to 14.4 V DC)
	Grounding system	Negative type
	Max. current consumption	10.0 A
	Backup current	5 mA or less
	Dimensions (W × H × D):	
B	DIN	
	Chassis	178 × 50 × 159 mm
	Nose	188 × 58 × 30 mm
D		
	Chassis	178 × 50 × 164 mm
	Nose	170 × 45 × 25 mm
	Weight	1.6 kg

Audio/DSP

C	Maximum power output	50 W × 4
	Continuous power output ...	22 W × 4 (50 Hz to 15 000 Hz, 5% THD, 4 Ω load, both channels driven)
	Load impedance	4 Ω (4 Ω to 8 Ω allowable)
	Preout max output level/output impedance	5.0 V/100Ω
	Loudness contour	+10 dB (100 Hz), +6.5 dB (10 kHz) (volume: -30 dB)
	Equalizer (Left/Right independent 16-Band Graphic Equalizer):	
D	Frequency	20/31.5/50/80/125/200/315/ 500/800/1.25k/2k/3.15k/5k/ 8k/12.5k/20k Hz
	Equalization range	±12 dB (2 dB step)
E	Auto equalizer: (Front & rear & subwoofer/High & mid & low)	
	Frequency	20/31.5/50/80/125/200/315/ 500/800/1.25k/2k/3.15k/5k/ 8k/12.5k/20k Hz
	Equalization range	+6 to -12 dB (2 dB step)
F	Network (standard mode):	
	HPF (Front/rear):	
	Frequency	50/63/80/100/125/160/200 Hz
	Slope	0 (Pass)/-6/-12 dB/oct
	Gain	0 to -24 dB/Mute (1 dB step)
	Subwoofer (stereo/mono):	
	Frequency	50/63/80/100/125/160/200 Hz
	Slope	-6/-12/-18 dB/oct

Gain +6 to -24 dB/Mute (1 dB
step)

Phase Normal/Reverse

Network (3-way network mode):

High HPF:

 Frequency 1.25/1.6/2/2.5/3.15/4/5/6.3/8/
10/12.5 kHz

 Slope -6/-12/-18/-24 dB/oct

 Gain 0 to -24 dB/Mute (1 dB
step)

 Phase Normal/Reverse

Mid HPF/LPF:

 Frequency (LPF) ... 1.25/1.6/2/2.5/3.15/4/5/6.3/8/
10/12.5 kHz

 Frequency (HPF)

..... 25/31.5/40/50/63/80/100/125/
160/200/250 Hz

 Slope (LPF) 0 (Pass)/-6/-12/-18/-24 dB/
oct

 Slope (HPF) 0 (Pass)/-6/-12/-18/-24 dB/
oct

 Gain 0 to -24 dB/Mute (1 dB
step)

 Phase Normal/Reverse

Low LPF (stereo/mono):

 Frequency 25/31.5/40/50/63/80/100/125/
160/200/250 Hz

 Slope -12/-18/-24/-30/-36 dB/oct

 Gain +6 to -24 dB/Mute (1 dB
step)

 Phase Normal/Reverse

CD player

System Compact disc audio system

Usable discs Compact disc

Signal format:

 Sampling frequency 44.1 kHz

 Number of quantization bits

..... 16; linear

Frequency characteristics ... 5 Hz to 20 000 Hz (±1 dB)

Signal-to-noise ratio 105 dB (1 kHz) (IHF-A net-
work)

Dynamic range 100 dB (1 kHz)

Number of channels 2 (stereo)

MP3 decoding format MPEG-1 & 2 Audio Layer 3

WMA decoding format Ver. 7, 7.1, 8, 9, 10 (2ch
audio)
(Windows Media Player)

AAC decoding format MPEG-4 AAC (iTunes® en-
coded only)

WAV signal format Linear PCM & MS ADPCM

FM tuner

Frequency range 87.5 MHz to 108.0 MHz
 Usable sensitivity 8 dBf (0.7 μ V/75 Ω , mono,
 S/N: 30 dB)
 50 dB quieting sensitivity 10 dBf (0.9 μ V/75 Ω , mono)
 Signal-to-noise ratio 75 dB (IHF-A network)
 Distortion 0.3 % (at 65 dBf, 1 kHz,
 stereo)
 0.05 % (at 65 dBf, 1 kHz,
 mono)
 Frequency response 30 Hz to 15 000 Hz (± 3 dB)
 Stereo separation 45 dB (at 65 dBf, 1 kHz)

A

AM tuner

Frequency range 531 kHz to 1 602 kHz (9 kHz)
 530 kHz to 1 640 kHz (10
 kHz)
 Usable sensitivity 18 μ V (S/N: 20 dB)
 Signal-to-noise ratio 67 dB (IHF-A network)

B

Infrared remote control

Wavelength 940 nm ± 50 nm
 Output typ; 12 mw/sr per Infrared
 LED

C

**Note**

Specifications and the design are subject to pos-
 sible modifications without notice due to im-
 provements. ■

D

E


F

2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screw adjacent to  mark on the product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING(UC, ES MODEL)

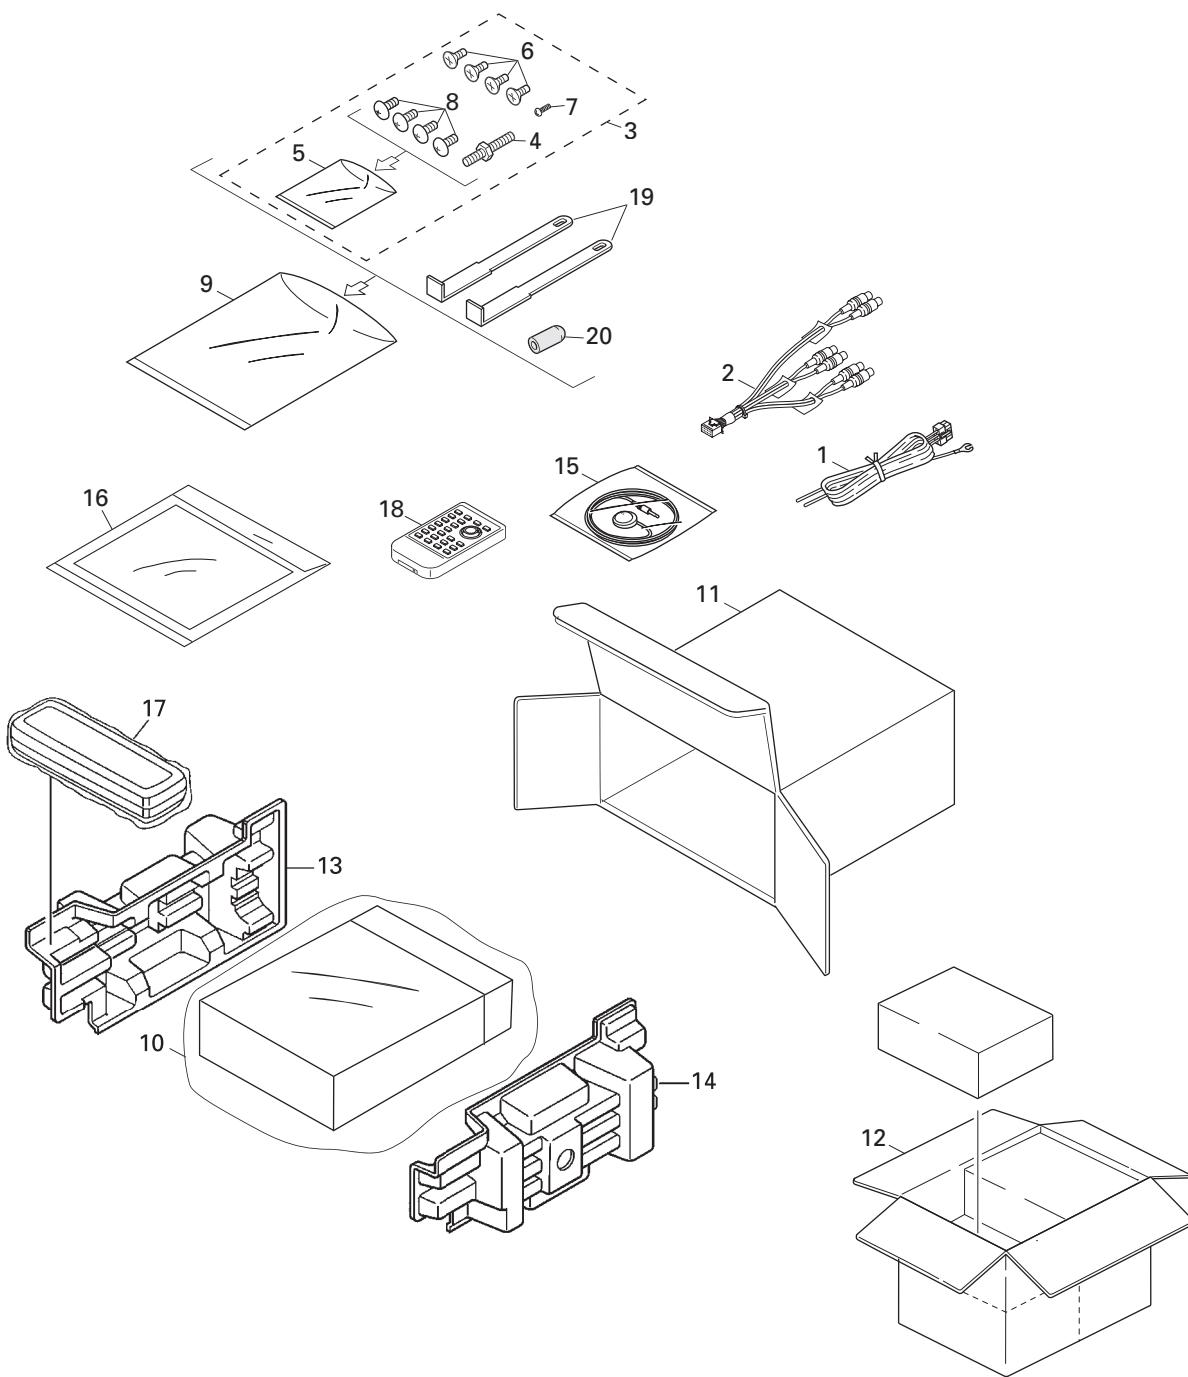

(1) PACKING(UC, ES MODEL) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDE7701	15	Microphone Assy	CPM1054
2	Cord Assy	CDE8275			A
3	Screw Assy	See Contrast table(2)	16-1	Polyethylene Bag	CEG1116
4	Screw	CBA1650	16-2	Owner's Manual	See Contrast table(2)
*	5 Polyethylene Bag	CEG-127	16-3	Owner's Manual	See Contrast table(2)
			16-4	Owner's Manual	See Contrast table(2)
			16-5	Installation Manual	See Contrast table(2)
6	Screw	CRZ50P090FTC			
7	Screw	See Contrast table(2)	16-6	Caution Card	CRP1310
8	Screw	TRZ50P080FTC	*	16-7 Warranty Card	See Contrast table(2)
*	9 Polyethylene Bag	CEG-158	*	16-8 Caution Card	XRP7002
10	Polyethylene Bag	See Contrast table(2)	17	Case Assy	CXB3520
11	Carton	See Contrast table(2)	18	Remote Control Unit	CXC5717
12	Contain Box	See Contrast table(2)	19	Handle	CNC5395
13	Protector	XHP7007	20	Bush	CNV3930
14	Protector	XHP7008			

(2) CONTRAST TABLE

DEH-P880PRS/XN/UC and DEH-P80RS/XN/ES are constructed the same except for the following:



Mark	No.	Description	DEH-P880PRS/XN/UC	DEH-P80RS/XN/ES
	3	Screw Assy	CEA5322	CEA3849
	7	Screw	JPZ20P060FTB	Not used
	10	Polyethylene Bag	CEG1368	CEG1227
	11	Carton	CHG5735	CHG5736
	12	Contain Box	CHL5735	CHL5736
	16-2	Owner's Manual	CRD4080	CRD4082
	16-3	Owner's Manual	Not used	CRD4083
	16-4	Owner's Manual	Not used	CRB2177
*	16-5	Installation Manual	CRD4081	CRD4084
*	16-7	Warranty Card	CRY1070	Not used

Owner's Manual, Installation Manual



Part No.	Language
CRD4080	English, French
CRD4081	English, French
CRD4082	English, Spanish
CRD4083	Portuguese(B), Traditional Chinese
CRB2177	Arabic
CRD4084	English, Spanish, Portuguese(B), Traditional Chinese, Arabic

1 2 3 4 2.2 PACKING(EW5 MODEL)



A

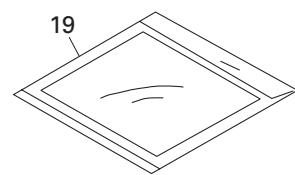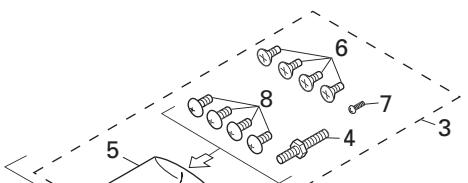



B

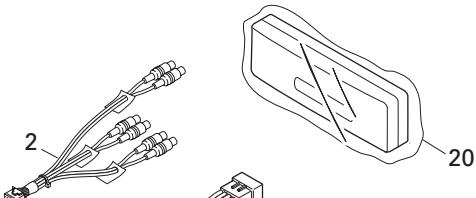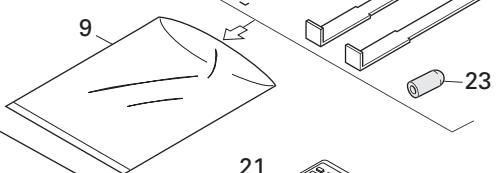

C

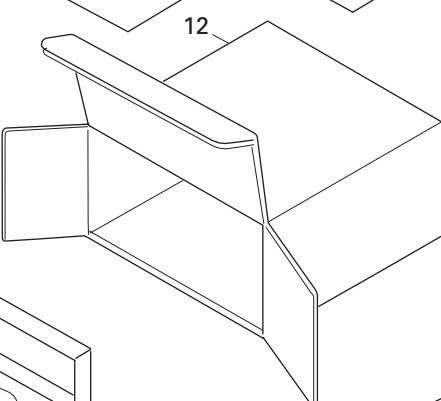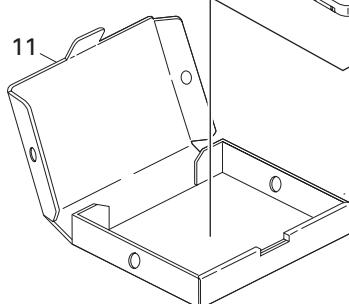

D

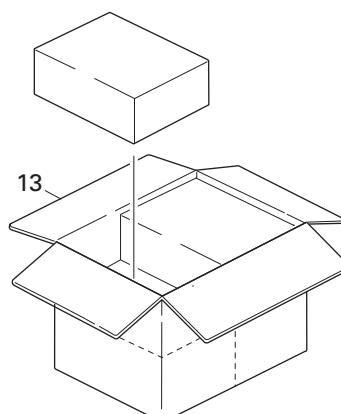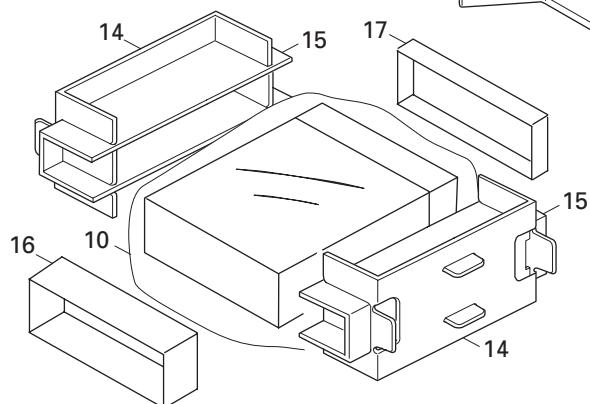

E

F

(1)PACKING(EW5 MODEL) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDE6562	17	Protector	CHP3184
2	Cord Assy	CDE8274	18	Microphone Assy	CPM1054
3	Screw Assy	CEA5322	* 19-1	Polyethylene Bag	E36-634
4	Screw	CBA1650	19-2	Owner's Manual	CRB2176
*	5 Polyethylene Bag	CEG-127	19-3	Owner's Manual	CRD4076
6	Screw	CRZ50P090FTC	19-4	Owner's Manual	CRD4077
7	Screw	JPZ20P060FTB	19-5	Owner's Manual	CRD4078
8	Screw	TRZ50P080FTC	19-6	Installation Manual	CRD4079
*	9 Polyethylene Bag	CEG-158	* 19-7	Caution Card	CRP1335
10	Polyethylene Bag	CEG-162	* 19-8	Passport	CRY1013
11	Sub Carton	CHG5195	* 19-9	Warranty Card	CRY1157
12	Carton	CHG5882	20	Case Assy	CXB3520
13	Contain Box	CHL5882	21	Remote Control Unit	CXC5717
14	Protector	CHP2797	22	Handle	CNC5395
15	Protector	CHP2798	23	Bush	CNV3930
16	Protector	CHP2812			

Owner's Manual, Installation Manual

<u>Part No.</u>	<u>Language</u>
CRD4076	English, Spanish
CRD4077	German, French
CRD4078	Italian, Dutch
CRB2176	Russian
CRD4079	English, Spanish, German, French, Italian, Dutch, Russian

C

D

E

F

1


2

3



4

2.3 EXTERIOR(1)(UC, ES MODEL)


A

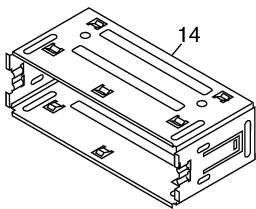


B

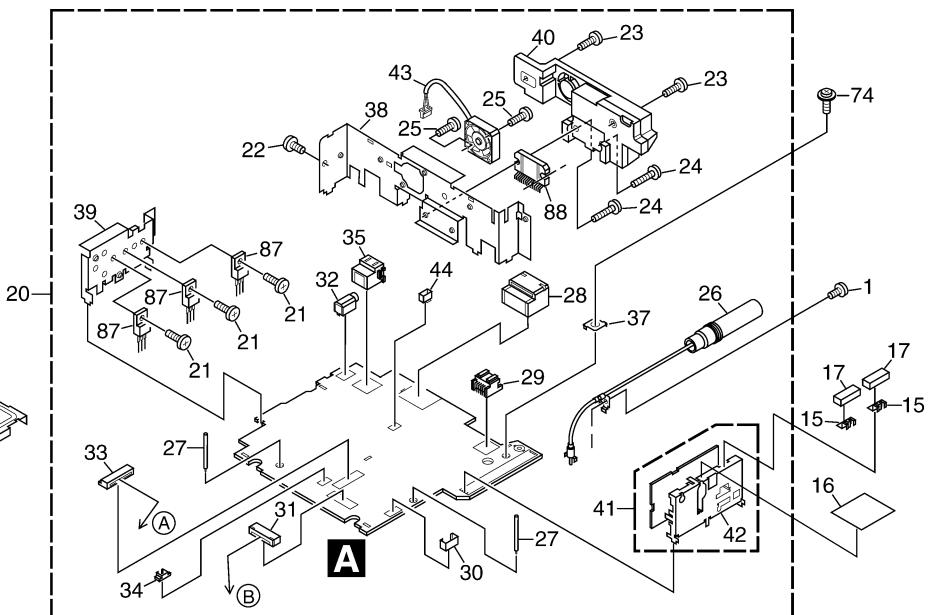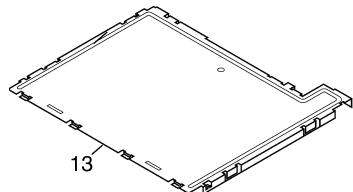

C

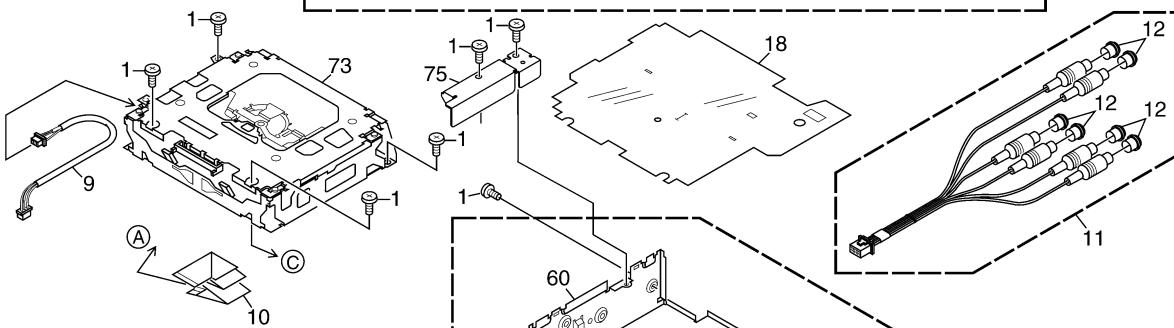


D

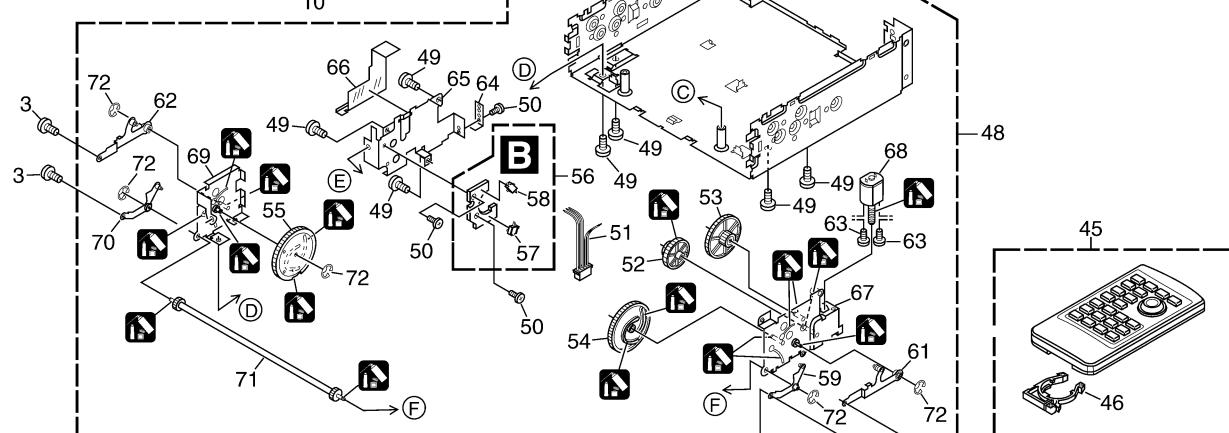


: GEM1024

E

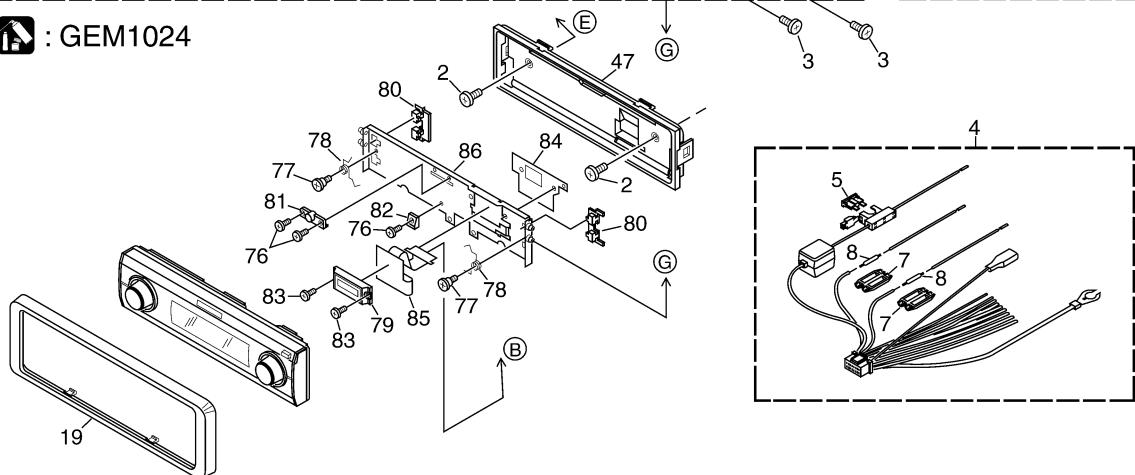

F

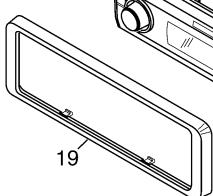


DEH-P880PRS/XN/UC

EXTERIOR(1)(UC, ES MODEL) SECTION PARTS LIST



<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	BSZ26P060FTC	48	Drive Unit	CXC6620
2	Screw(M2.6 x 4)	CBA1828	49	Screw	BMZ26P040FTC
3	Screw(M2 x 2.5)	CBA1924	50	Screw(M2 x 2)	CBA1871
4	Cord Assy	CDE7701	51	Cord	CDE7392
⚠ 5	Fuse(10 A)	CEK1136	52	Gear	CNV7752
6	*****		53	Gear	CNV7753
7	Cap	CNS1472	54	Gear	CNV7754
8	Resistor	RS1/2PMF102J	55	Gear	CNV7755
9	Cord Assy	CDE7817	56	Switch Unit	CWS1389
10	Cable	CDE8067	57	Switch(S1)	CSN1051
11	Cord Assy	CDE8275	58	Spring Switch(S2)	CSN1052
12	Cap	CNV6727	59	Arm Unit	CXC2199
13	Case Assy	CXC6908	* 60	Chassis Unit	CXC5680
14	Holder	CNC8659	61	Arm Unit	CXC6623
15	Earth Plate	CND2171	62	Arm Unit	CXC6624
16	Insulator	CNM8790	63	Screw	JFZ20P020FTC
17	Cushion	CNM9126	64	Spring	XBL7003
18	Insulator	CNM9936	* 65	Holder	XNC7017
19	Panel	CNS8516	* 66	Insulator	XNM7119
20	Tuner Amp Unit(UC)	CWN1478	* 67	Holder Unit	XXA7399
	Tuner Amp Unit(ES)	CWN1479	* 68	Motor Unit(M10)	XXA7400
21	Screw	ASZ26P060FTC	* 69	Holder Unit	XXA7401
22	Screw	BMZ26P040FTC	* 70	Arm Unit	XXA7403
23	Screw	BMZ26P120FTC	* 71	Gear Unit	XXA7424
24	Screw	BMZ26P180FTC	72	Washer	YE15FTC
25	Screw(M2.6 x 14)	CBA1632	73	CD Mechanism Module(S10.5)	CXK5753
26	Antenna Cable	CDH1336	74	Screw	ISS26P055FTC
27	Clamper	CEF1040	75	Holder	CND3606
28	Plug(CN901)	CKM1278	76	Screw(M2 x 2)	CBA1871
29	Connector(CN351)	CKM1389	77	Screw	CBA1935
30	Plug(CN871)	CKS-786	78	Spring	CBH2530
31	Connector(CN471)	CKS3834	79	Connector	CKS5273
32	Connector(CN581)(UC)	CKS4124	80	Arm	CNV6962
33	Connector(CN801)	CKS4811	81	Guide	CNV6967
34	Connector(CN472)	CKS4822	82	Guide	CNV8048
35	Connector(CN101)	CKS5271	83	Screw(M2 x 3.5)	XBA7002
36	*****		84	Holder	XNC7019
37	Holder(CN402)	CNC5399	85	Flexible PCB	XNP7026
38	Holder(UC)	CND3158	86	Case Unit	XXA7426
	Holder(ES)	CND3159	87	Transistor(Q462,701,711)	2SD2396
39	Holder	CND3133	88	IC(IC331)	PAL007B
40	Heat Sink	CNR1837			
41	FM/AM Tuner Unit(Y401)	CWE1802			
42	Holder	CND2144			
43	Fan Motor	CXM1288			
44	Connector(CN591)	VKN1928			
45	Remote Control Unit	CXC5717			
46	Cover	CZN5357			
47	Panel Unit	CXC5737			

2.4 EXTERIOR(1)(EW5 MODEL)


A

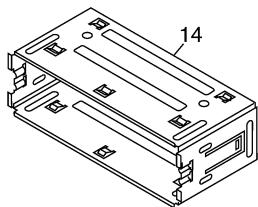


B

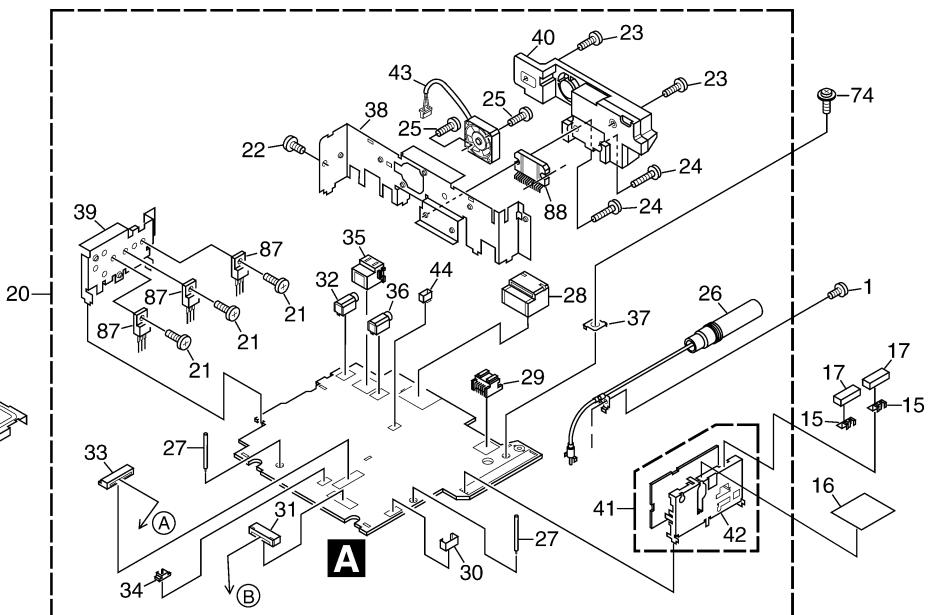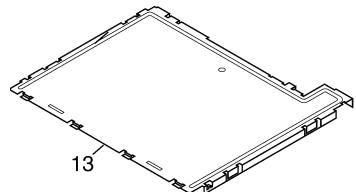

C

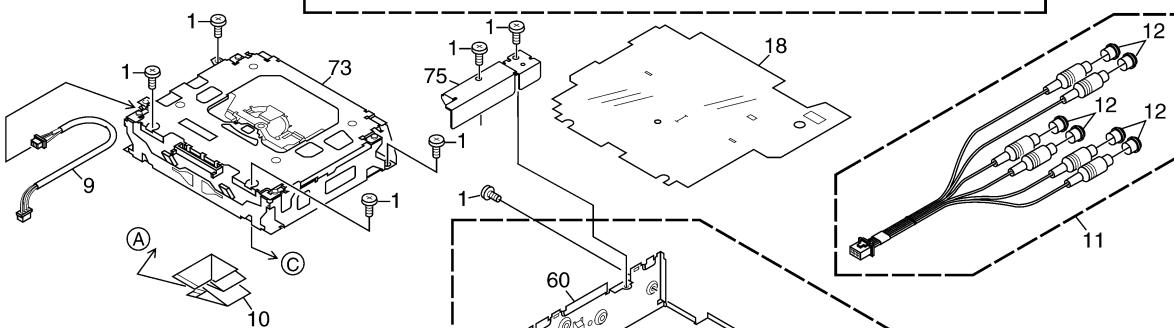


D

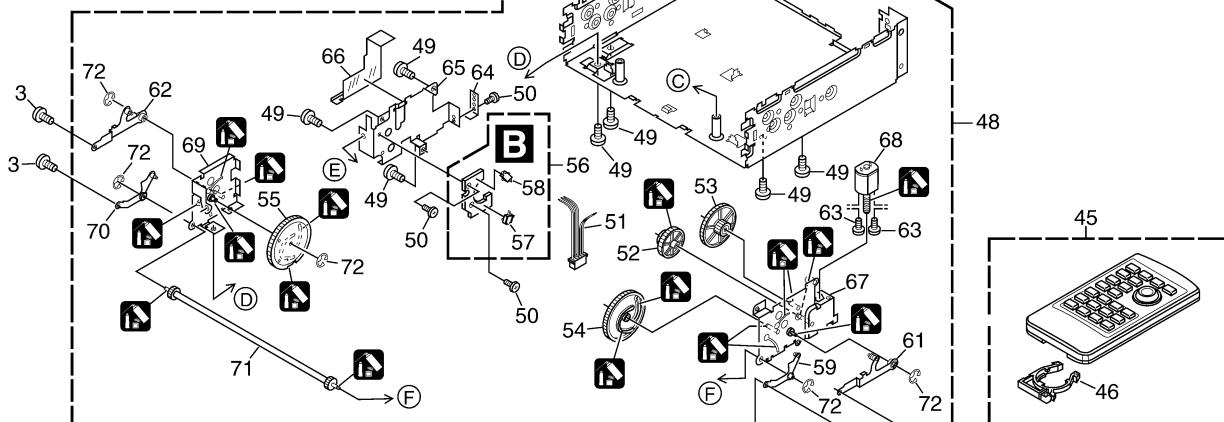

: GEM1024

E

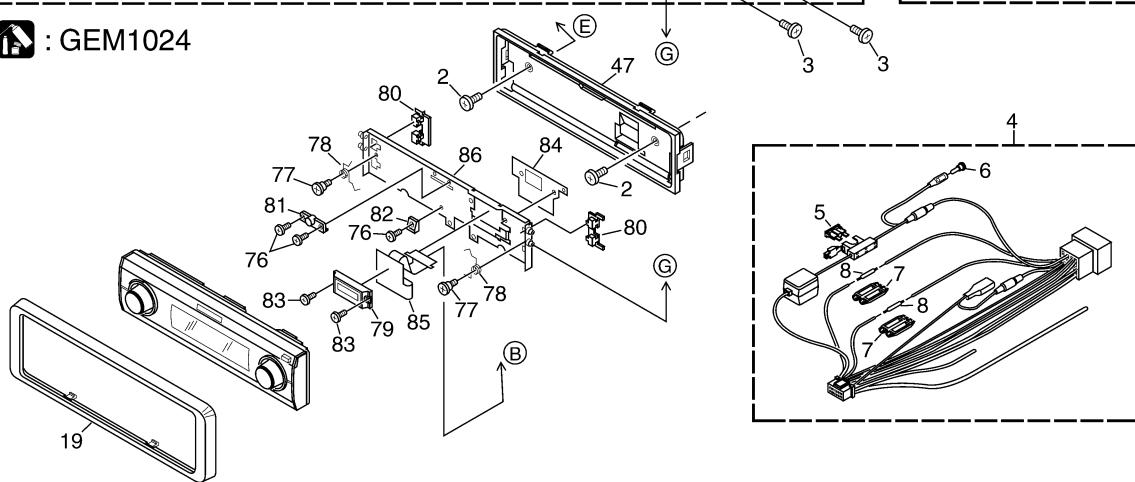

F

EXTERIOR(1)(EW5 MODEL) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ26P060FTC	50	Screw(M2 x 2)	CBA1871
2	Screw(M2.6 x 4)	CBA1828			
3	Screw(M2 x 2.5)	CBA1924	51	Cord	CDE7392
4	Cord Assy	CDE6562	52	Gear	CNV7752
⚠ 5	Fuse(10 A)	CEK1136	53	Gear	CNV7753
			54	Gear	CNV7754
6	Cap	CKX-003	55	Gear	CNV7755
7	Cap	CNS1472			
8	Resistor	RS1/2PMF102J	56	Switch Unit	CWS1389
9	Cord Assy	CDE7817	57	Switch(S1)	CSN1051
10	Cable	CDE8067	58	Spring Switch(S2)	CSN1052
			59	Arm Unit	CXC2199
11	Cord Assy	CDE8274	* 60	Chassis Unit	CXC5680
12	Cap	CNV6727			
13	Case Assy	CXC6908	61	Arm Unit	CXC6623
14	Holder	CNC8659	62	Arm Unit	CXC6624
15	Earth Plate	CND2171	63	Screw	JFZ20P020FTC
			64	Spring	XBL7003
16	Insulator	CNM8790	* 65	Holder	XNC7017
17	Cushion	CNM9126			
18	Insulator	CNM9936	* 66	Insulator	XNM7119
19	Panel	CNS8516	* 67	Holder Unit	XXA7399
20	Tuner Amp Unit	CWN1477	* 68	Motor Unit(M10)	XXA7400
			* 69	Holder Unit	XXA7401
21	Screw	ASZ26P060FTC	* 70	Arm Unit	XXA7403
22	Screw	BMZ26P040FTC			
23	Screw	BMZ26P120FTC	* 71	Gear Unit	XXA7424
24	Screw	BMZ26P180FTC	72	Washer	YE15FTC
25	Screw(M2.6 x 14)	CBA1632	73	CD Mechanism Module(S10.5)	CXK5753
			74	Screw	ISS26P055FTC
26	Antenna Cable	CDH1336	75	Holder	CND3606
27	Clamper	CEF1040			
28	Plug(CN901)	CKM1278	76	Screw(M2 x 2)	CBA1871
29	Connector(CN351)	CKM1389	77	Screw	CBA1935
30	Plug(CN871)	CKS-786	78	Spring	CBH2530
			79	Connector	CKS5273
31	Connector(CN471)	CKS3834	80	Arm	CNV6962
32	Connector(CN581)	CKS4124			
33	Connector(CN801)	CKS4811	81	Guide	CNV6967
34	Connector(CN472)	CKS4822	82	Guide	CNV8048
35	Connector(CN101)	CKS5271	83	Screw(M2 x 3.5)	XBA7002
			84	Holder	XNC7019
36	Connector(CN541)	CKS5523	85	Flexible PCB	XNP7026
37	Holder(CN402)	CNC5399			
38	Holder	CND3129	86	Case Unit	XXA7426
39	Holder	CND3133	87	Transistor(Q462,701,711)	2SD2396
40	Heat Sink	CNR1837	88	IC(IC331)	PAL007B
41	FM/AM Tuner Unit(Y401)	CWE1801			
42	Holder	CND2144			
43	Fan Motor	CXM1288			
44	Connector(CN591)	VKN1928			
45	Remote Control Unit	CXC5717			
46	Cover	CZN5357			
47	Panel Unit	CXC5737			
48	Drive Unit	CXC6620			
49	Screw	BMZ26P040FTC			


1

2

3

4

2.5 EXTERIOR(2)

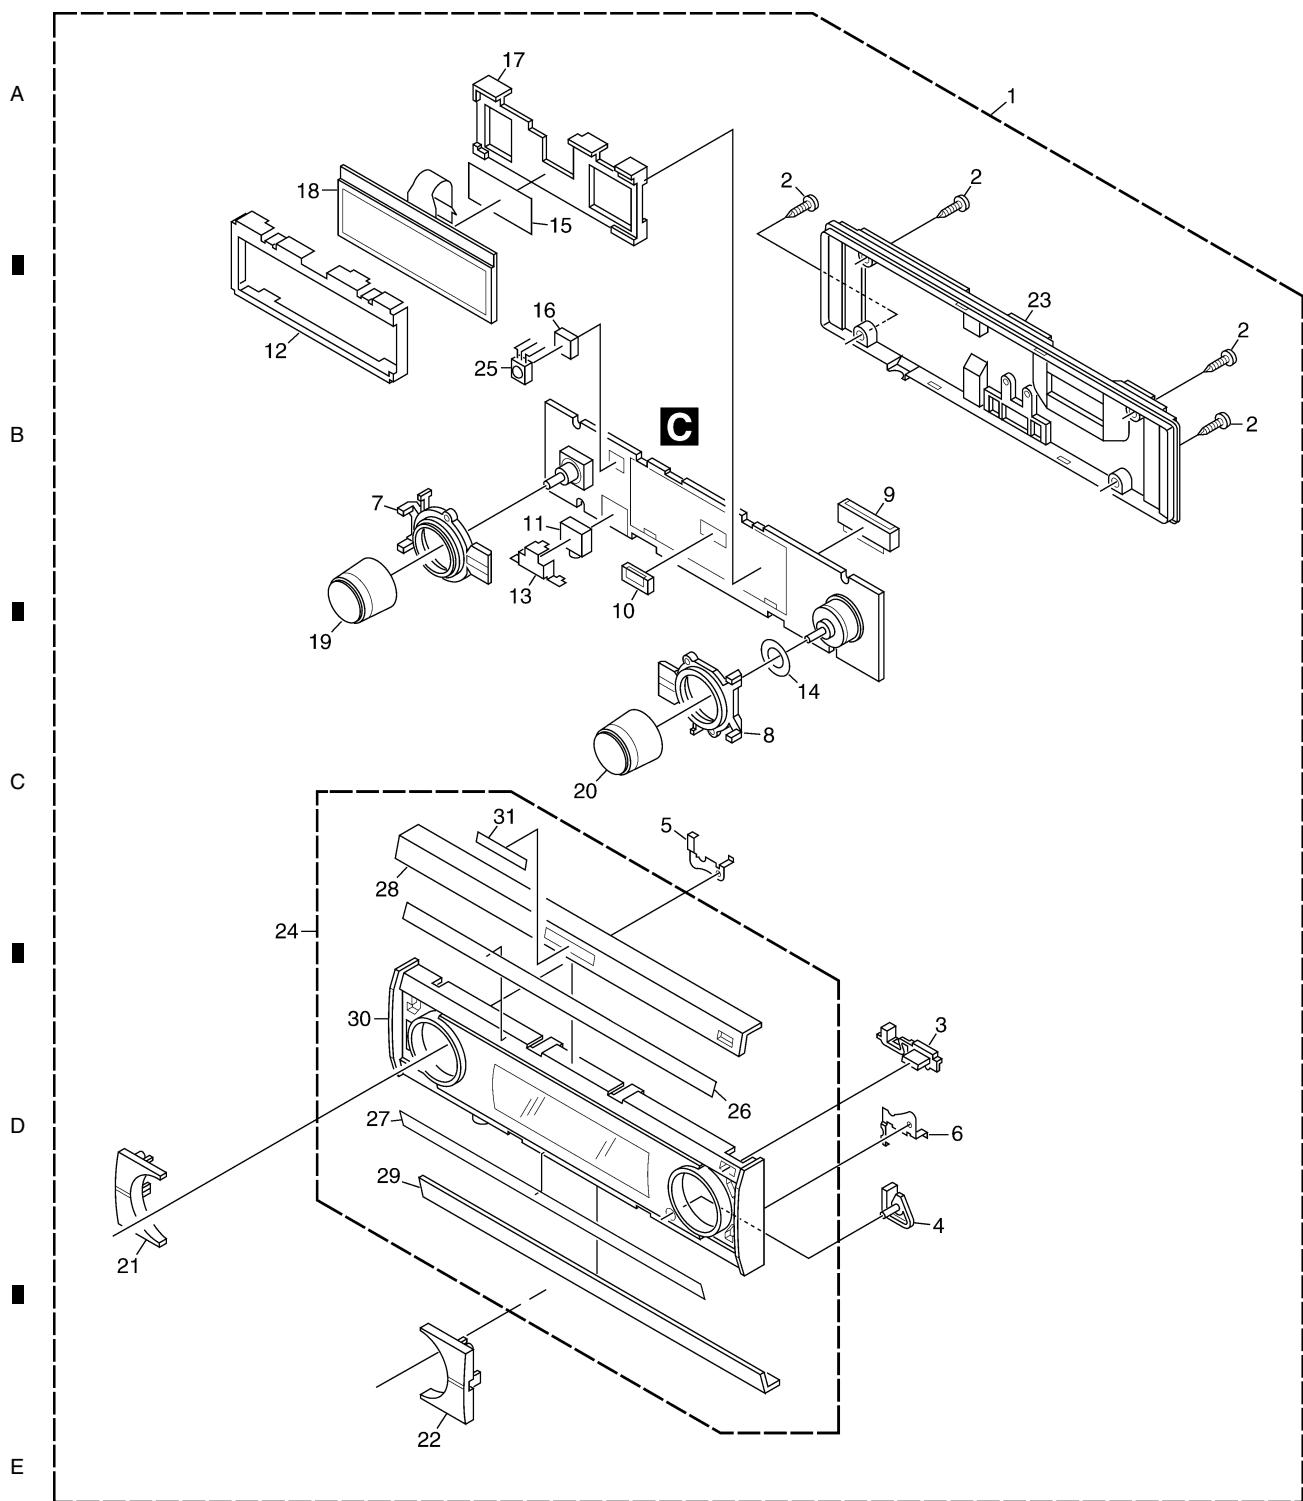

(1) EXTERIOR(2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Detach Grille Assy	See Contrast table(2)	17	Holder	CNV8925
2	Screw	BPZ20P080FTB	18	OEL Unit	MXS8232
3	Button(EJECT)	CAC9616	19	Knob Unit(SOURCE,VOLUME)	CXC5740
4	Button(RESET)	CAC9617	20	Knob Unit(MULTI-CONTROL)	CXC5741
5	Earth Plate	CND3149	21	Button Unit(EQ/CLK)	See Contrast table(2)
6	Earth Plate	CND3150	22	Button Unit(BAND/DISP)	CXC5748
7	Lighting Conductor	CNV8923	23	Cover Unit	CXC5749
8	Lighting Conductor	CNV8924	24	Sub Grille Assy	See Contrast table(2)
9	Connector(CN1801)	CKS5272	25	IC(IC1902)	GP1UX51RK
10	Connector(CN1861)	CKS5545	26	Double Sided Seal	CNM9942
11	Connector(CN1802)	See Contrast table(2)	27	Double Sided Seal	CNM9943
12	Holder	CND3151	28	Panel	See Contrast table(2)
13	Holder	CND3152	29	Panel	See Contrast table(2)
14	Sheet	CNM8658	30	Grille Unit	CXC5732
15	Double Sided Seal	CNM8673	*	31 Badge	See Contrast table(2)
16	Cushion	CNM9946			

(2) CONTRAST TABLE

DEH-P880PRS/XN/UC, DEH-P88RS/XN/EW5 and DEH-P80RS/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P880PRS/XN/UC	DEH-P88RS/XN/EW5	DEH-P80RS/XN/ES
	1	Detach Grille Assy	CXC5764	CXC5763	CXC5765
	11	Connector(CN1802)	CKS5575	CKS3120(Mini Jack)	CKS5575
	21	Button Unit(EQ/CLK)	CXC5745	CXC5744(EQ/TA)	CXC5746
	24	Sub Grille Assy	CXC5823	CXC5822	CXC5824
	28	Panel	CNR1843	CNR1842	CNR1844
*	29	Panel	CNR1847	CNR1846	CNR1846
*	31	Badge	CAH1956	CAH1925	CAH1925

C


D

E



F

2.6 CD MECHANISM MODULE



A

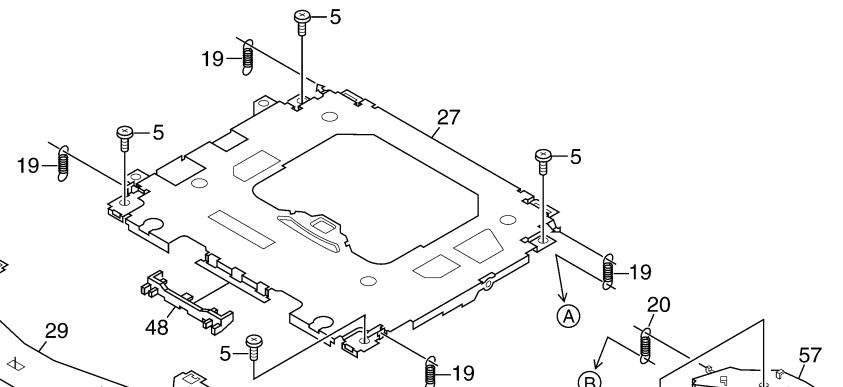


B

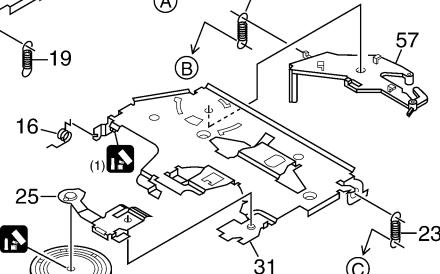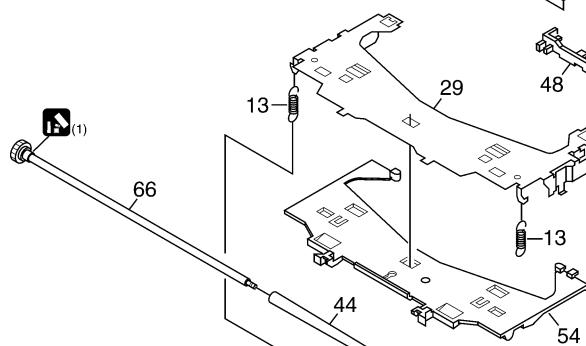


C

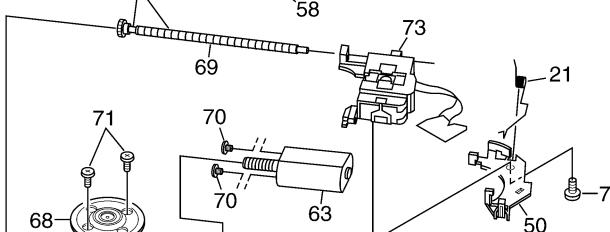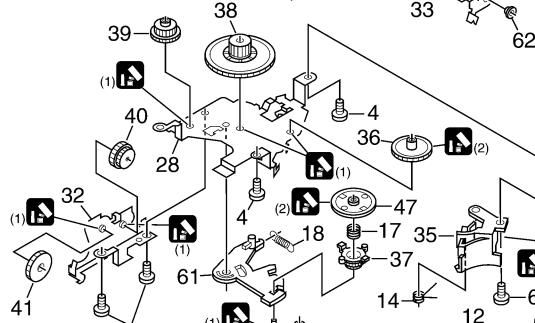

D

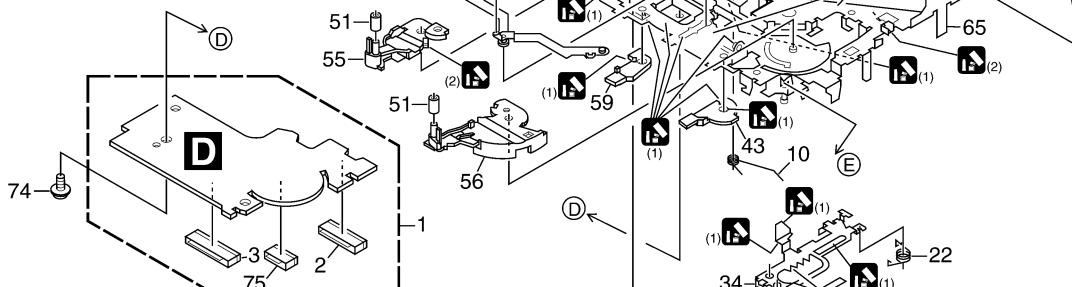

E

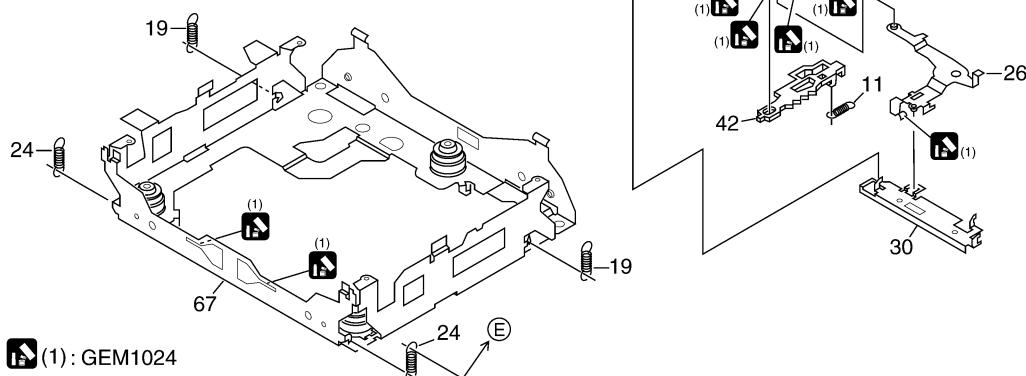

F

(1) : GEM1024

(2) : GEM1045

CD MECHANISM MODULE SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	CD Core Unit(S10.5COMP1)	CWX3381	50	Rack	CNV8342
2	Connector(CN101)	CKS4182	51	Roller	CNV8343
3	Connector(CN901)	CKS4187	52	Holder	CNV8344
4	Screw	BMZ20P025FTC	53	Arm	CNV8345
5	Screw	BSZ20P040FTC	54	Guide	CNV8347
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348
7	Screw(M2 x 4)	CBA1835	56	Arm	CNV8349
8	Washer	CBF1038	57	Arm	CNV8350
9		58	Clamper	CNV8365
10	Spring	CBH2609	59	Arm	CNV8386
11	Spring	CBH2612	60	Guide	CNV8396
12	Spring	CBH2614	61	Arm	CNV8413
13	Spring	CBH2616	62	Collar	CNV8938
14	Spring	CBH2617	63	Motor Unit(M2)	CXC4026
15	Spring	CBH2620	64	Arm Unit	CXC4027
16	Spring	CBH2855	65	Chassis Unit	CXC4028
17	Spring	CBH2937	66	Gear Unit	CXC4029
18	Spring	CBH2735	67	Frame Unit	CXC4031
19	Spring	CBH2854	68	Motor Unit(M1)	CXC6742
20	Spring	CBH2642	69	Screw Unit	CXC6359
21	Spring	CBH2856	70	Screw	JFZ20P020FTC
22	Spring	CBH2857	71	Screw	JGZ17P022FTC
23	Spring	CBH2860	72	Washer	YE20FTC
24	Spring	CBH2861	73	Pickup Unit(P10.5)(Service)	CXX1942
25	Spring	CBL1686	74	Screw	IMS26P030FTC
26	Arm	CND1909	75	Connector(CN902)	CKS4979
27	Frame	CND2582			
28	Bracket	CND2583			
29	Arm	CND2584			
30	Lever	CND2585			
31	Arm	CND2586			
32	Bracket	CND2587			
33	Arm	CND2588			
34	Lever	CND2589			
35	Holder	CNV7201			
36	Gear	CNV7207			
37	Gear	CNV7208			
38	Gear	CNV7209			
39	Gear	CNV7210			
40	Gear	CNV7211			
41	Gear	CNV7212			
42	Rack	CNV7214			
43	Arm	CNV7216			
44	Roller	CNV7218			
45	Gear	CNV7219			
46	Guide	CNV7361			
47	Gear	CNV7595			
48	Guide	CNV7799			
49	Arm	CNV7805			

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM


3.1 BLOCK DIAGRAM

A


A TUNER AMP UNIT

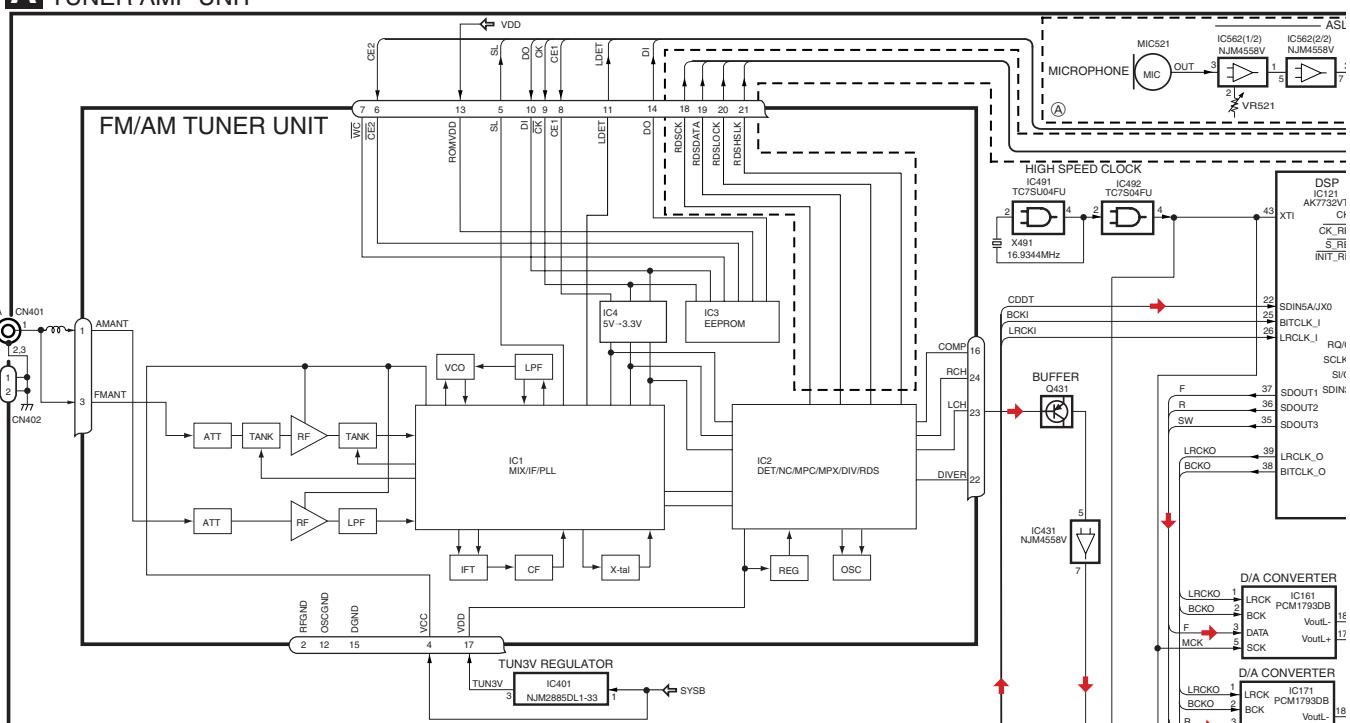

B

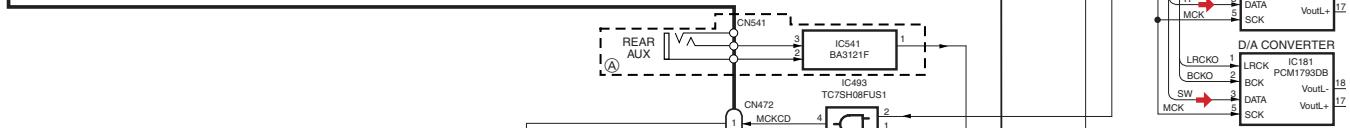

C

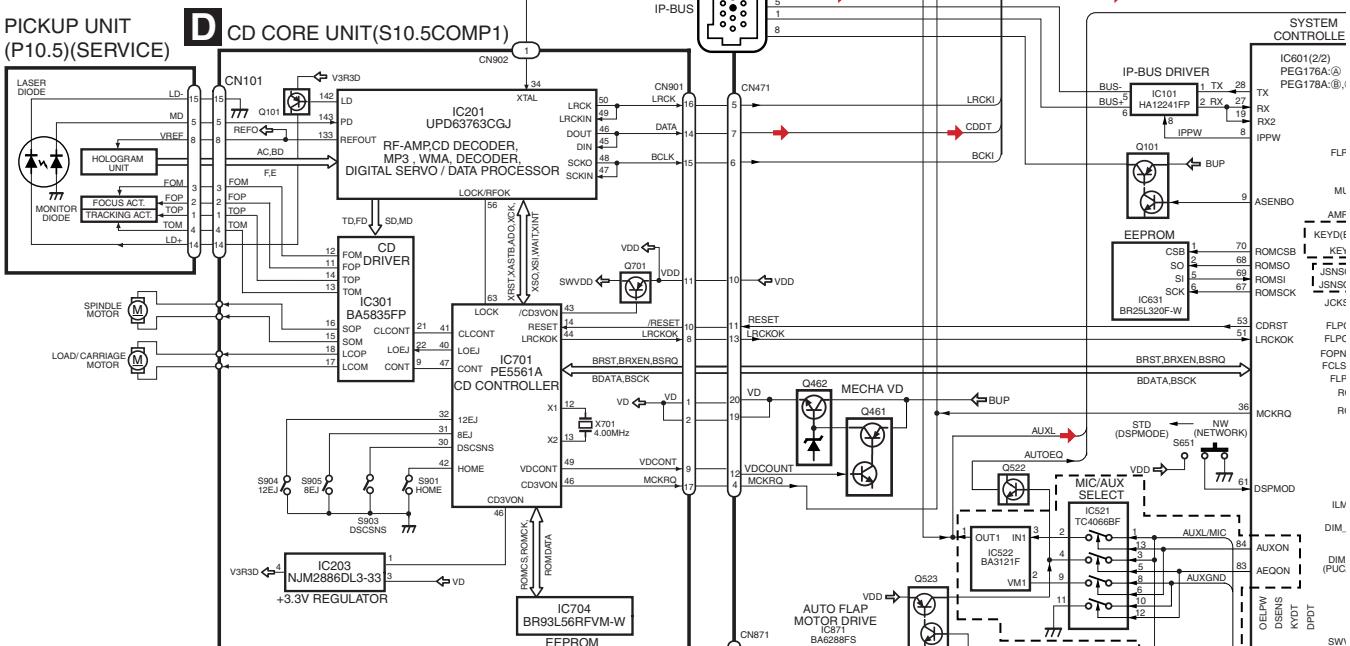


D

- (A):DEH-P88RS/XN/EW5
 (B):DEH-P880PRS/XN/UC
 (C):DEH-P80RS/XN/ES


B SWITCH UNIT

3

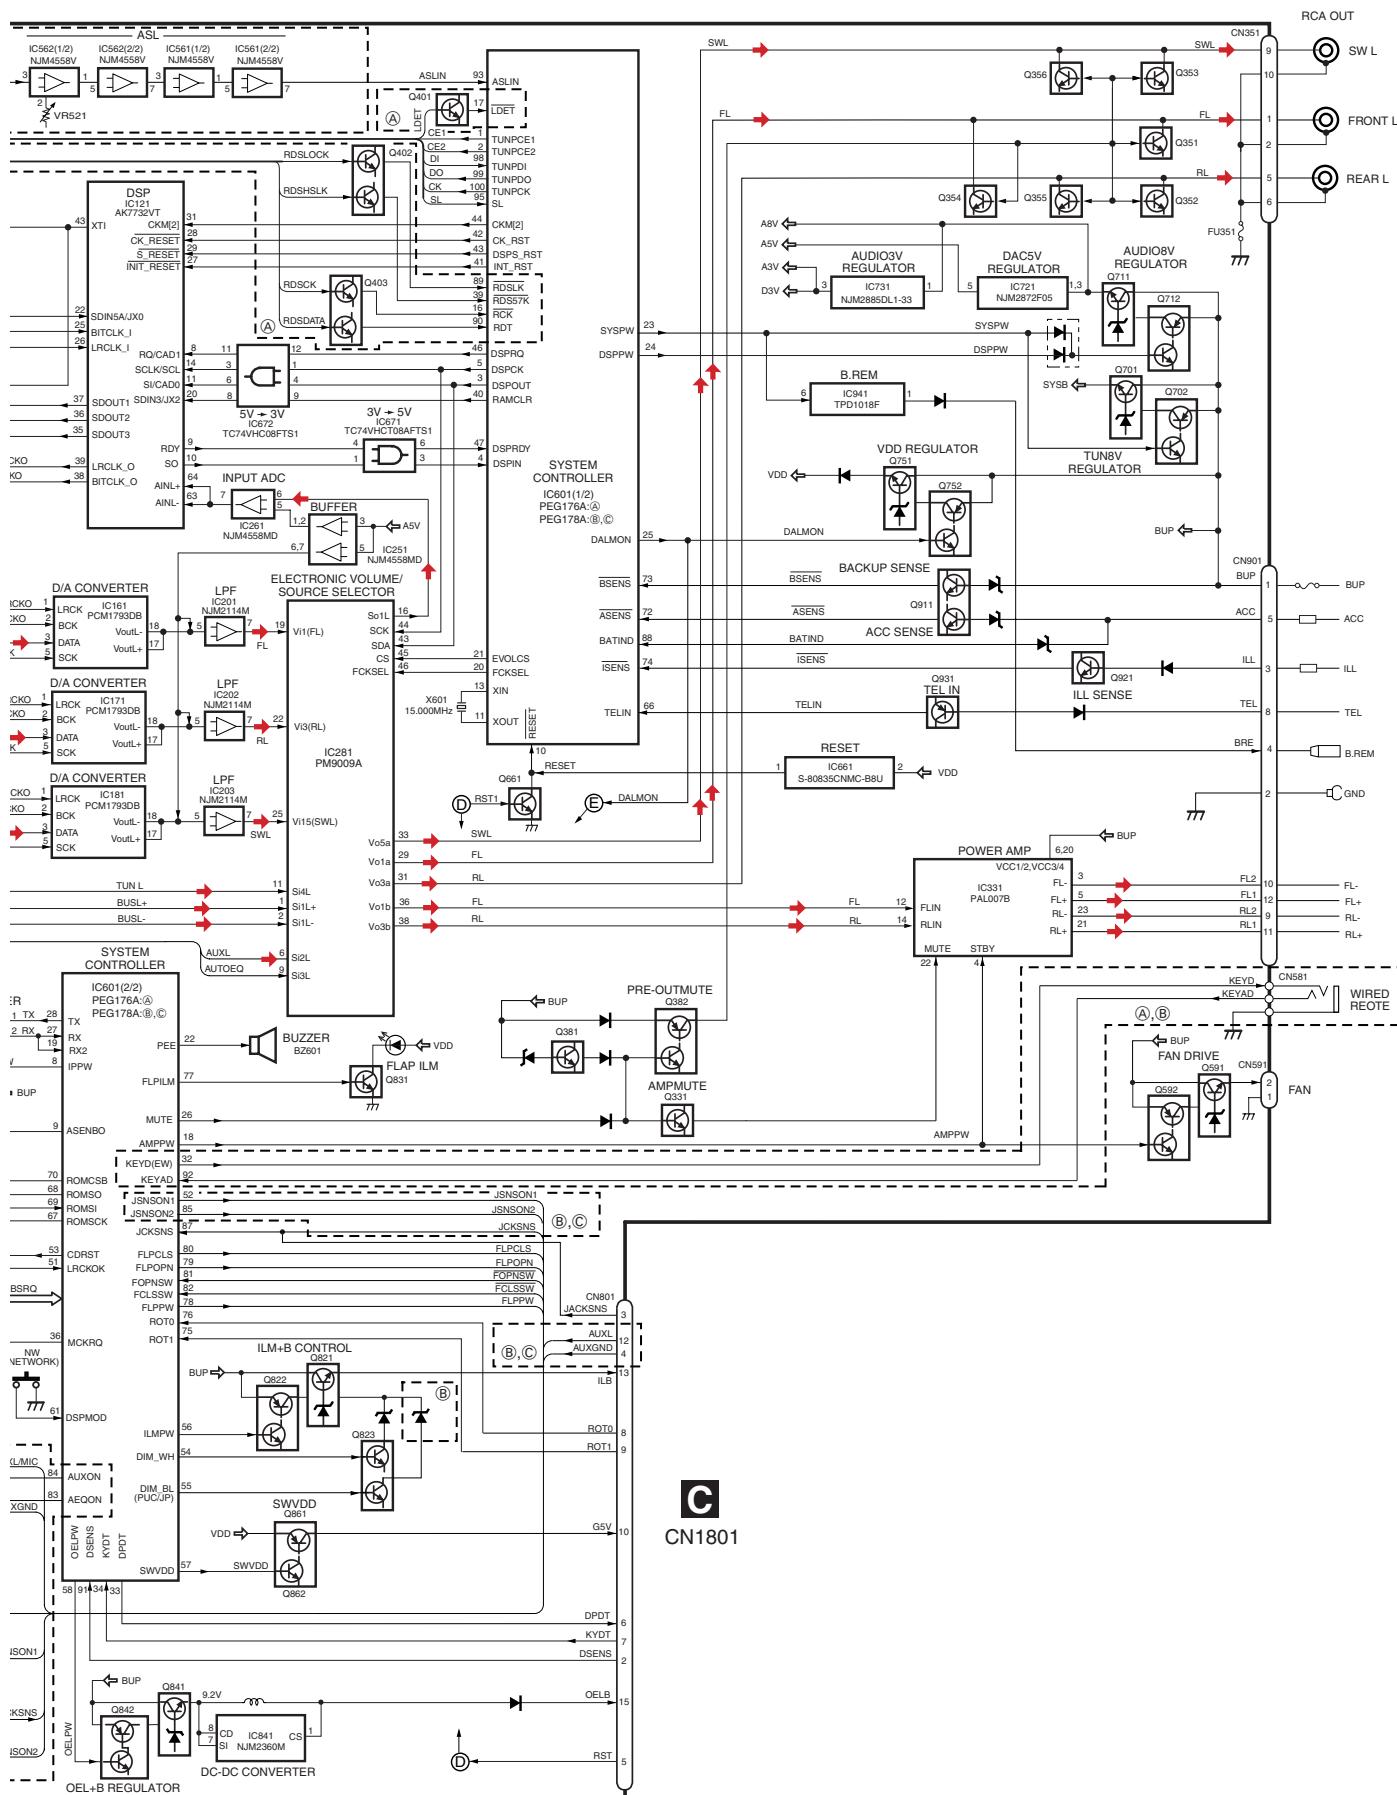

C KEYBOARD UNIT

A
B
C
D
E
F

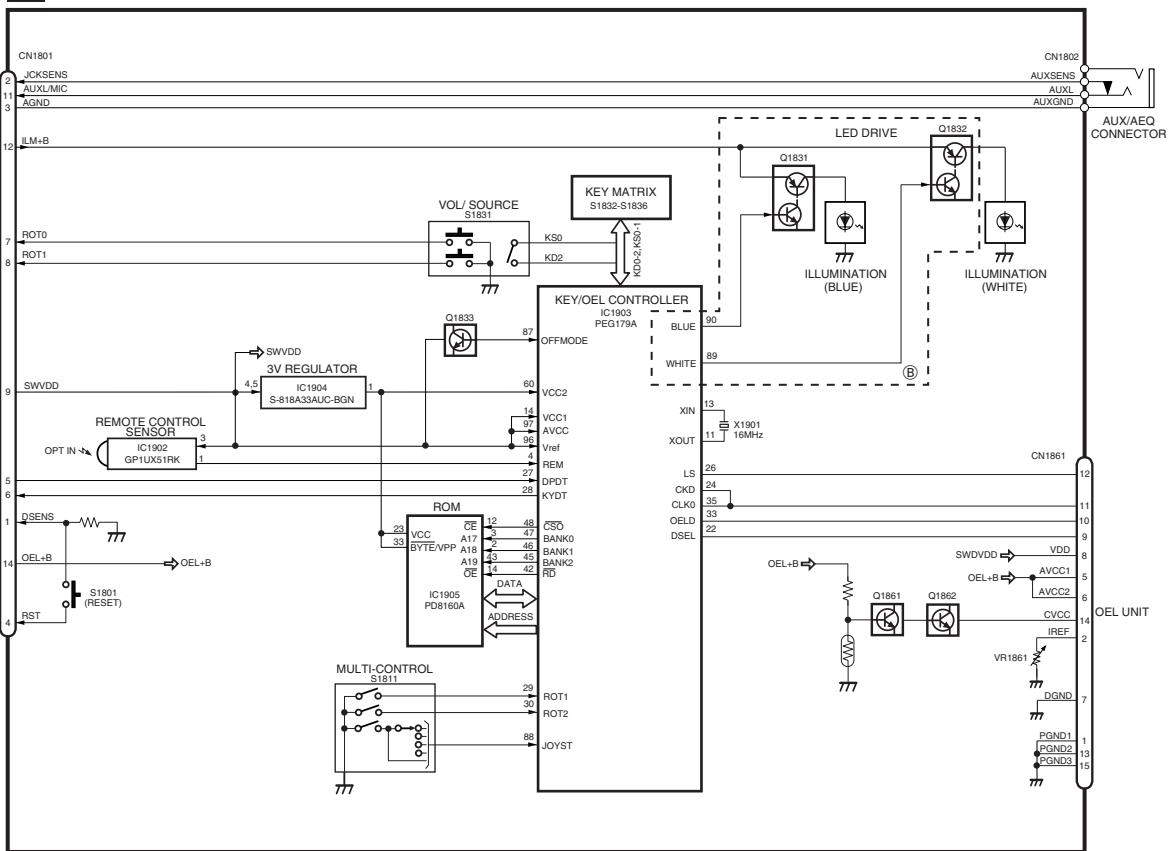

Ⓐ:DEH-P88RS/XN/EW5
Ⓑ:DEH-P880PRS/XN/UC
Ⓒ:DEH-P80RS/XN/ES

■ 5

■ 6

■ 7

■ 8

A

B

C




D

E


F

3.2 OVERALL CONNECTION DIAGRAM(UC, ES MODEL)(GUIDE PAGE)


Note: When ordering service parts, be sure to refer to " EXPLODED VIEWS AND PARTS LIST" or "ELECTRICAL PARTS LIST".

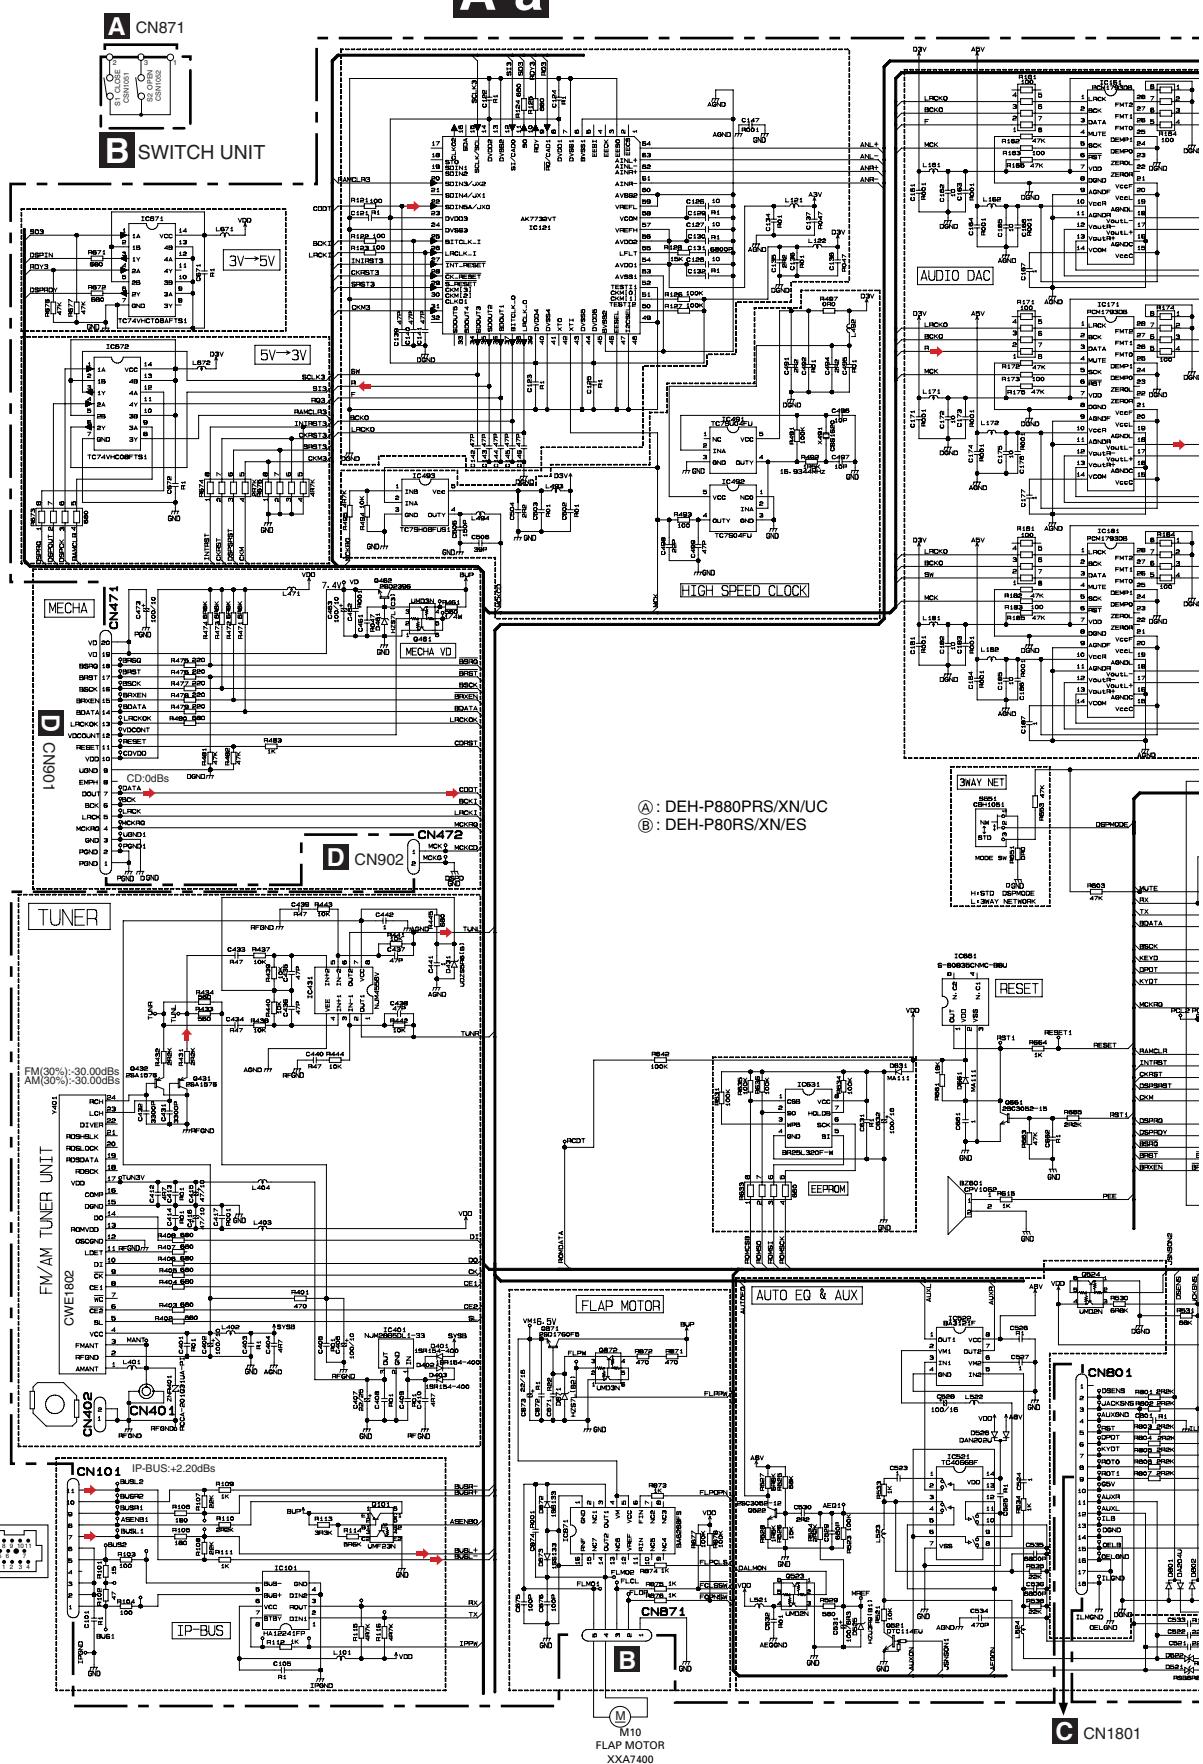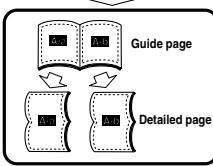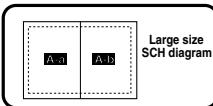


A **B**

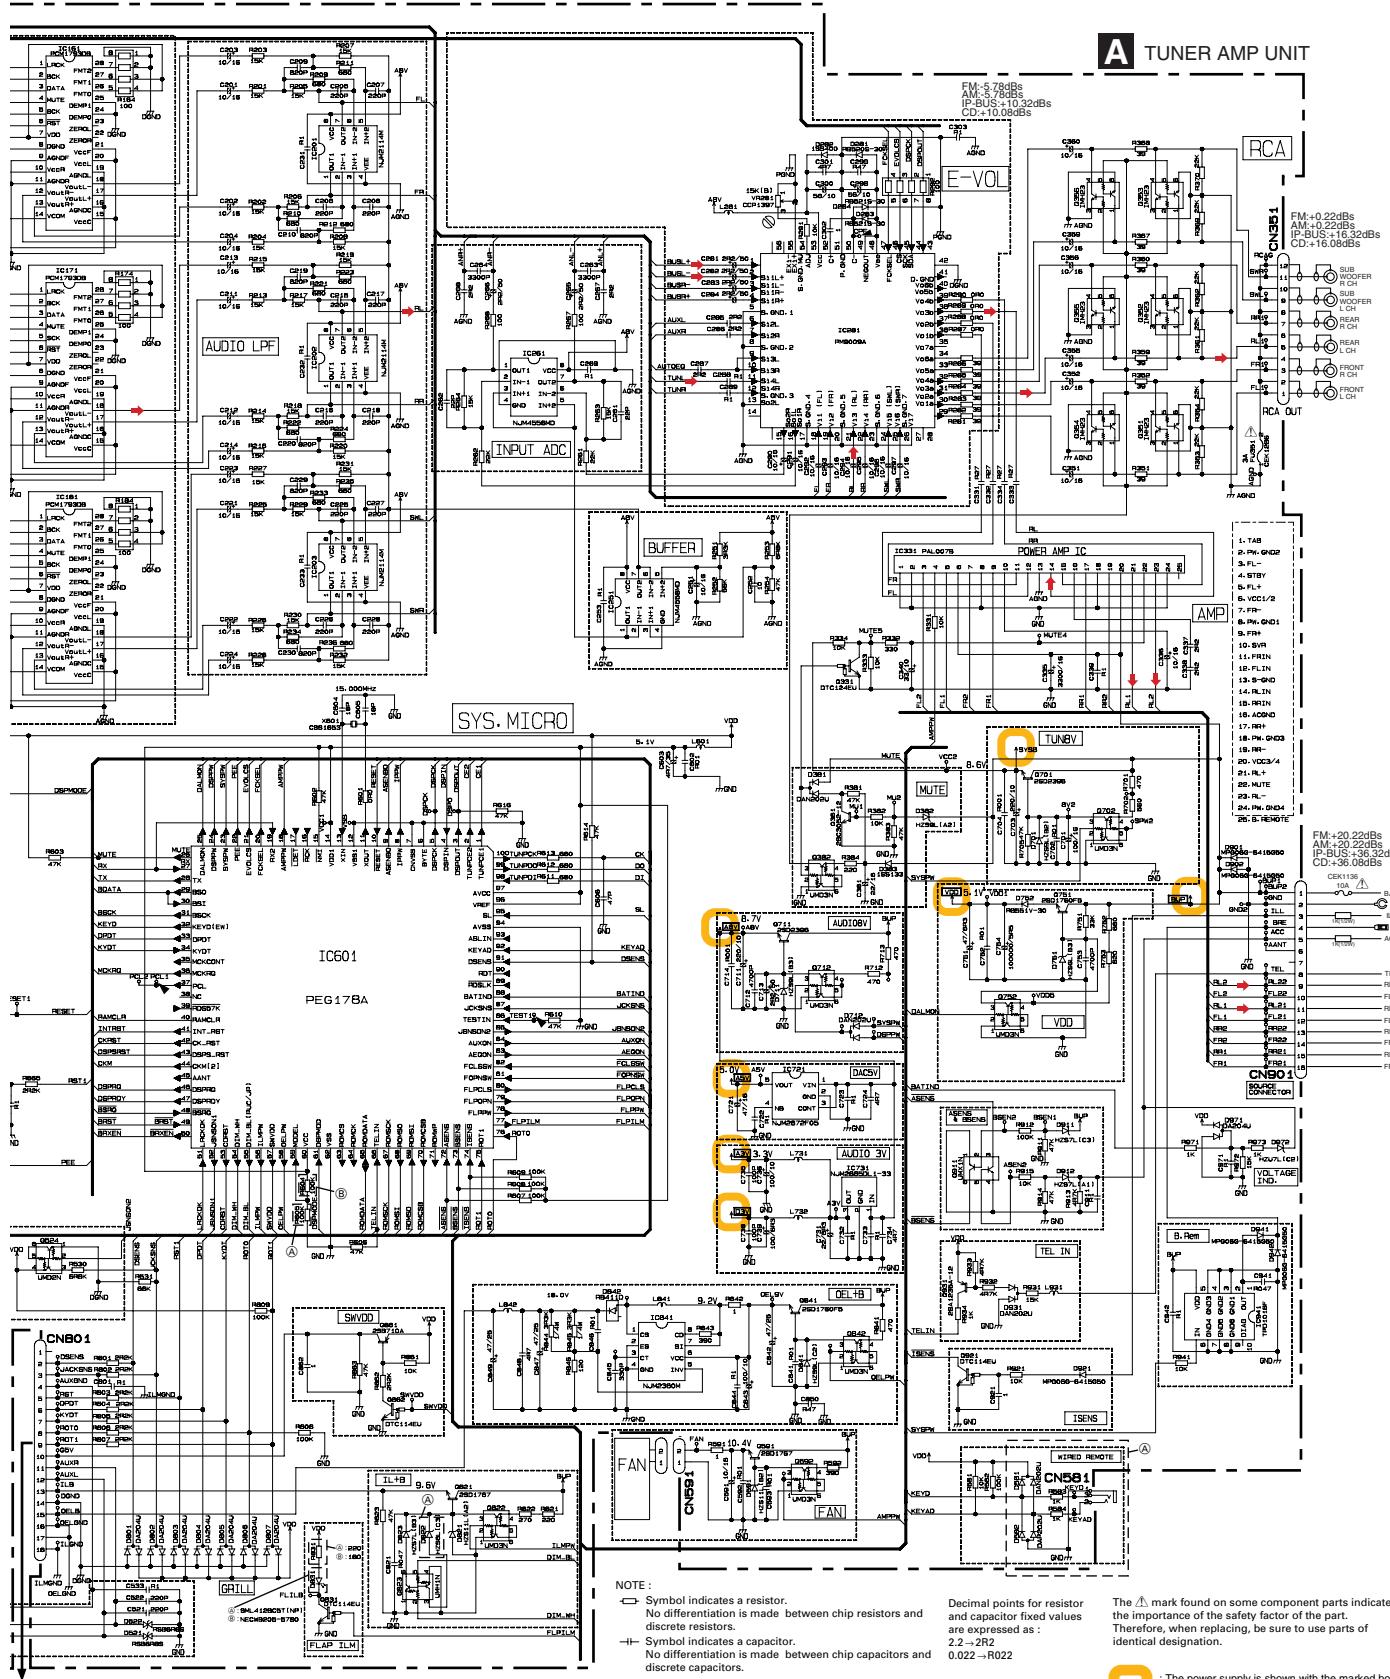A-b


A CN871

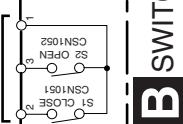


B SWITCH UNIT

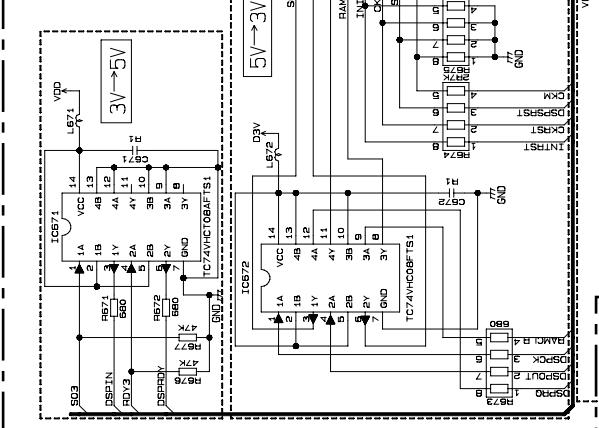

A-a **B**

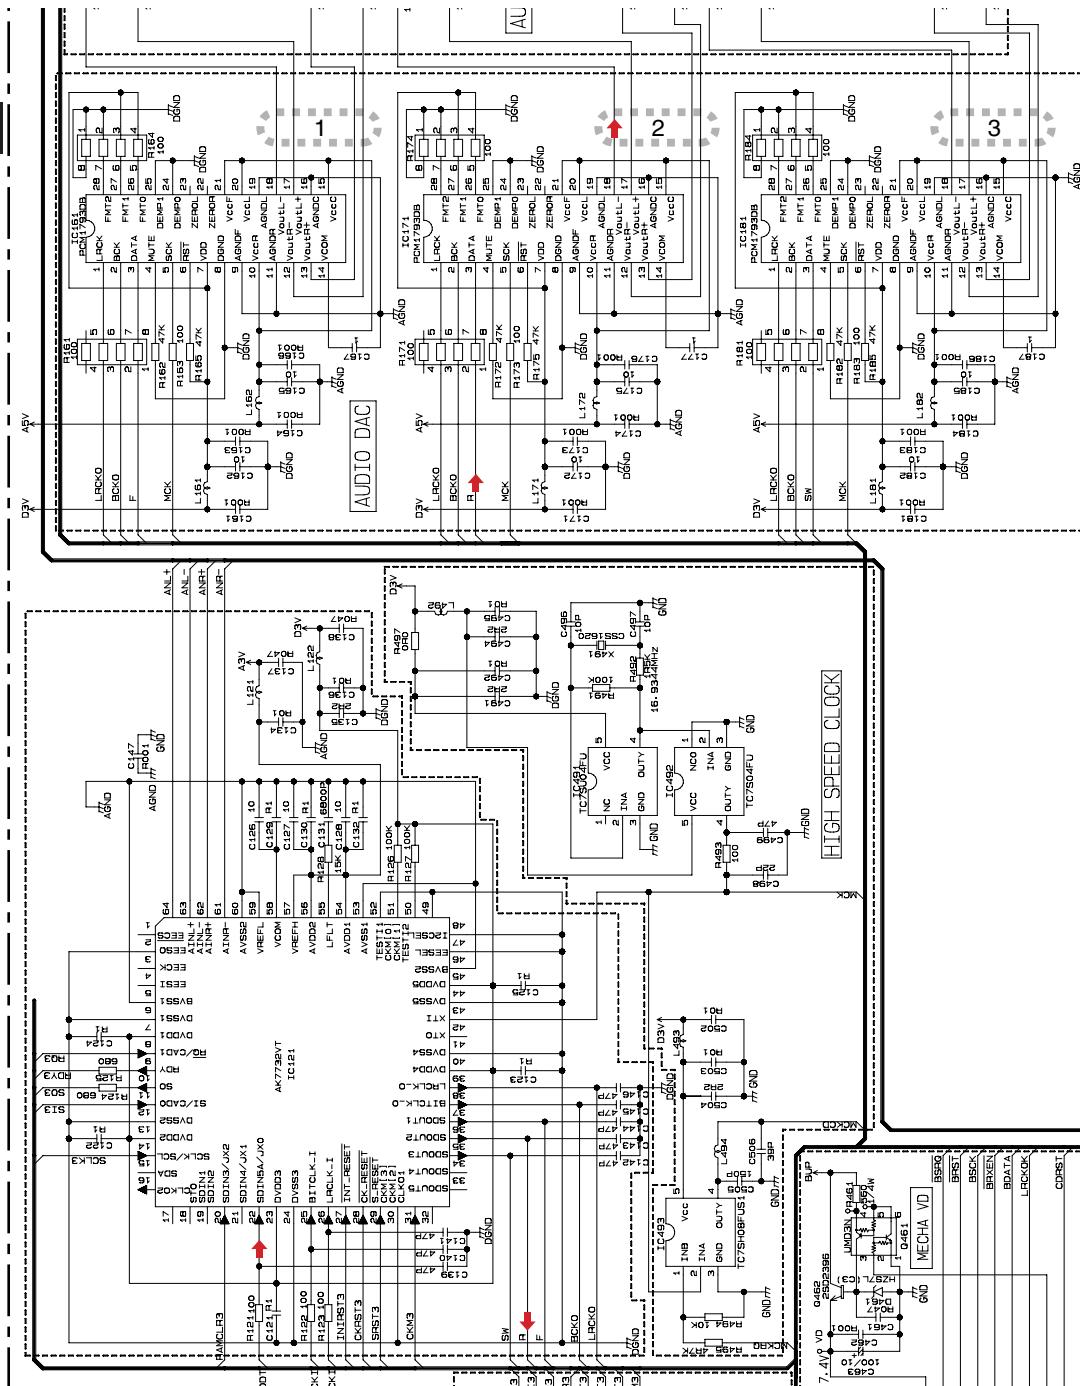




D CN901


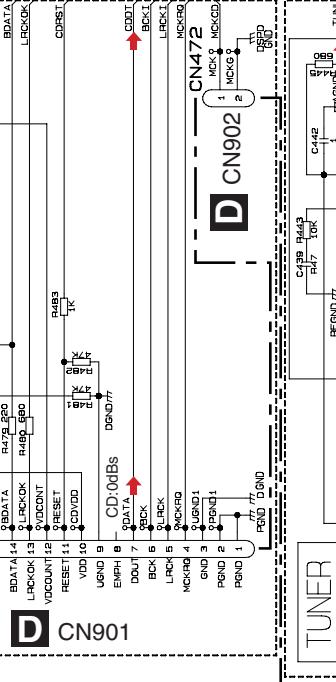


Ⓐ : DEH-P880PRS/XN/UC
Ⓑ : DEH-P80RS/XN/ES

A-a **B**

DEH-P880PRS/XN/UC

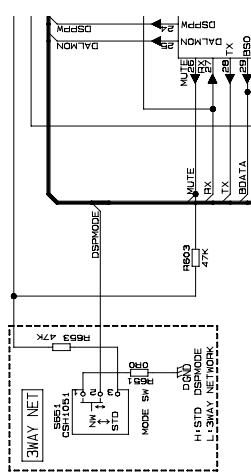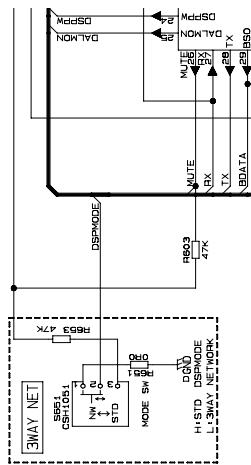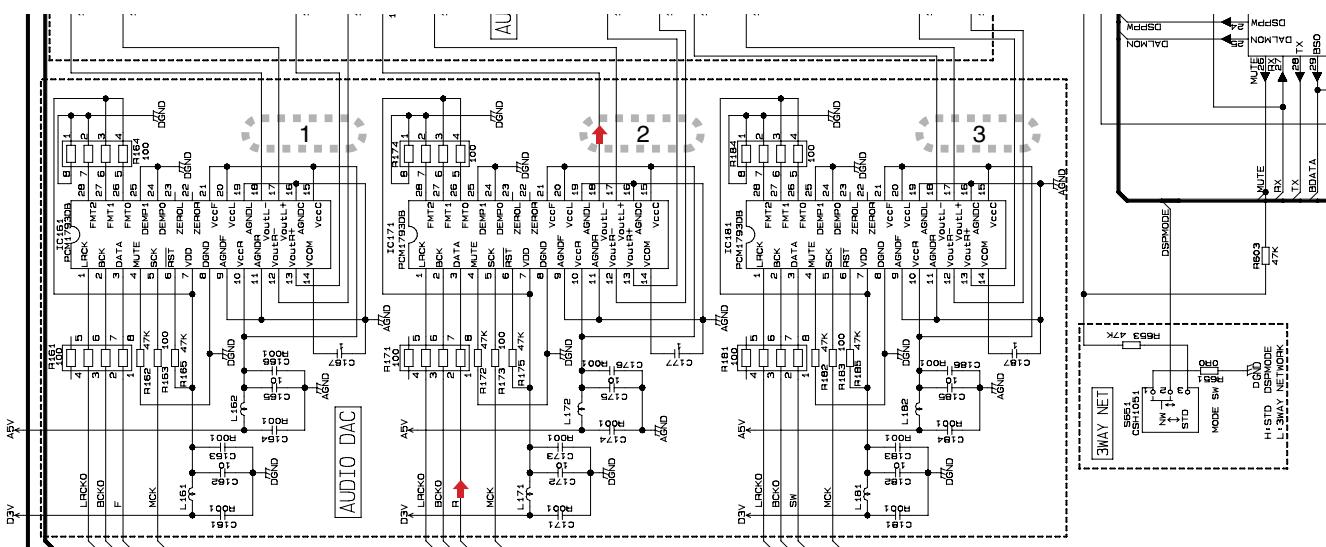

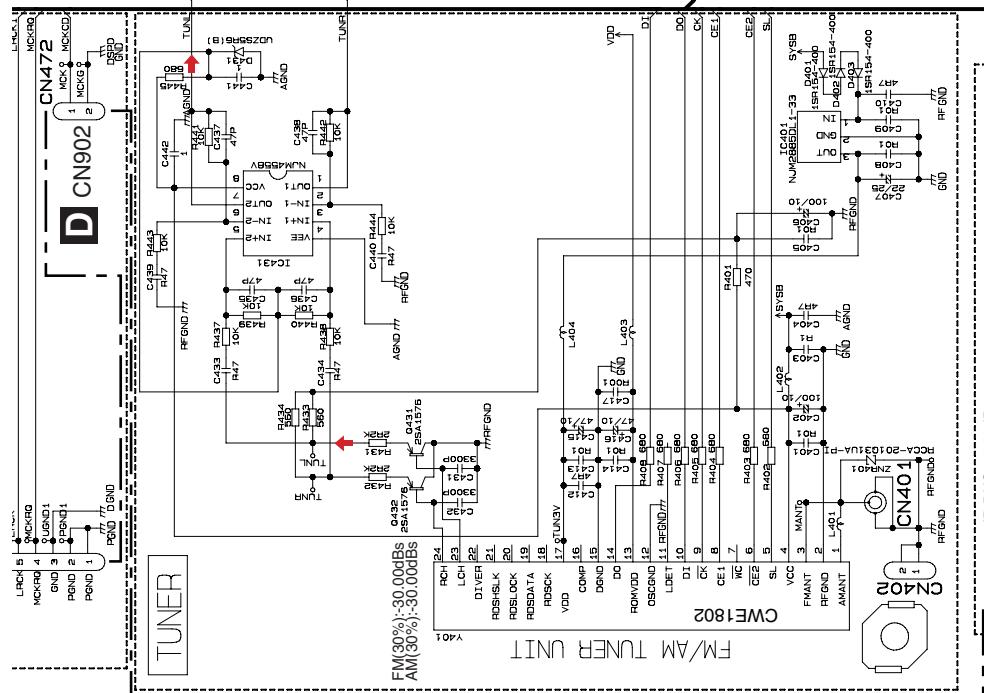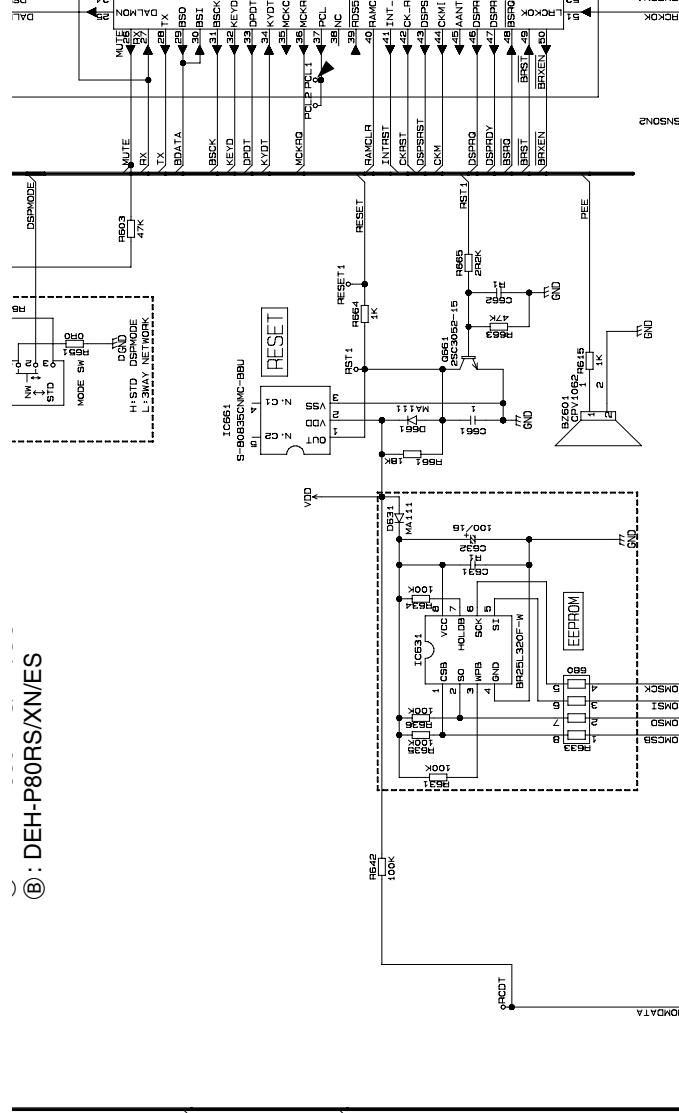

5

6

DEH-P880PRS/XN/UC

7

8



A-a

M10
FLAP MOTOR
XXA7400

C CN1801

B


A-b

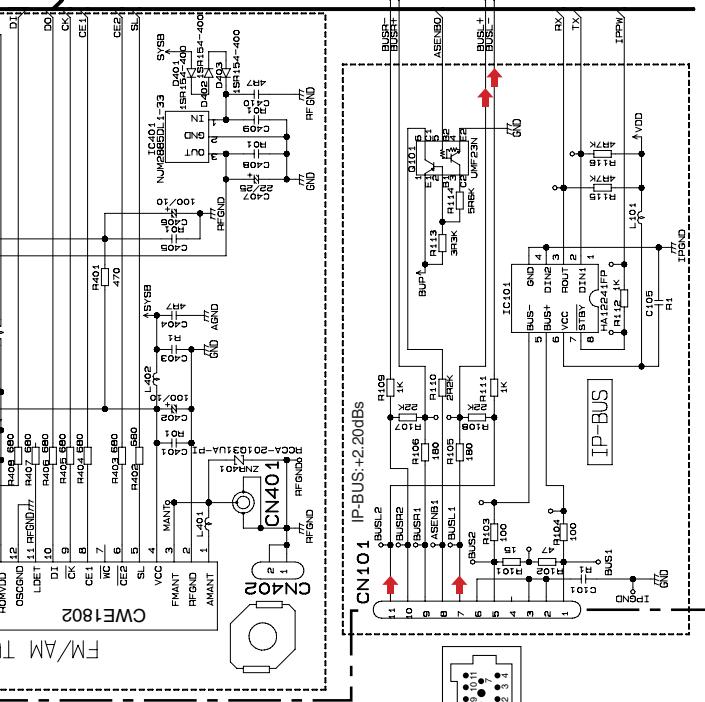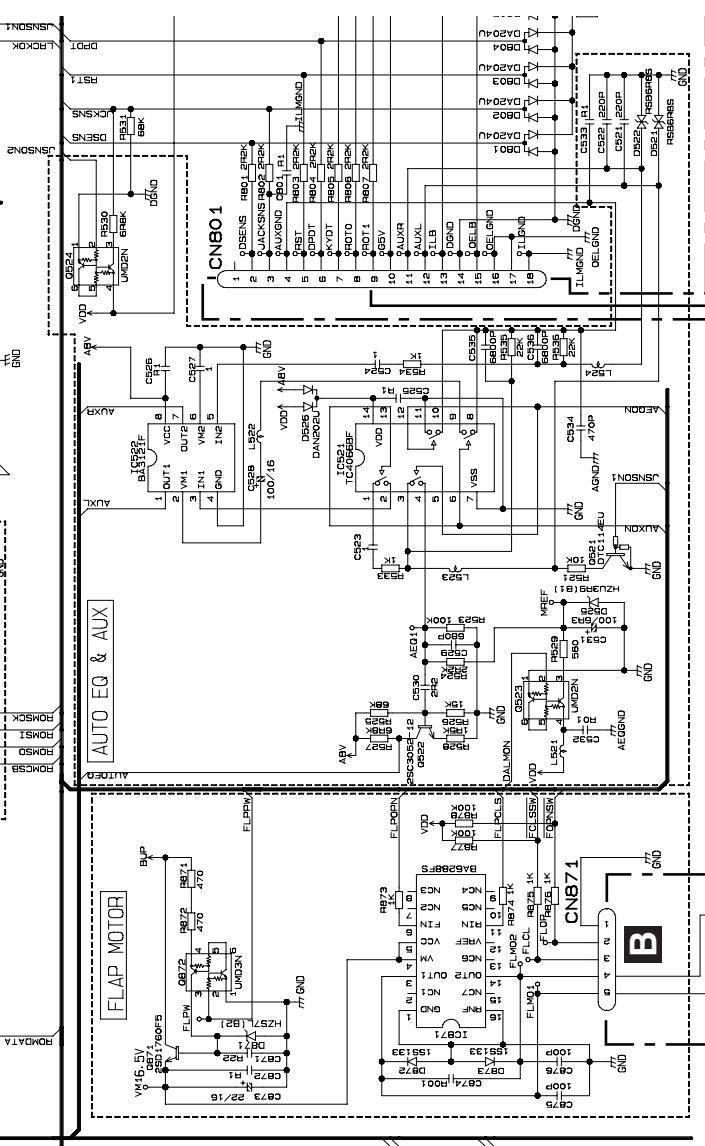


7

31

A

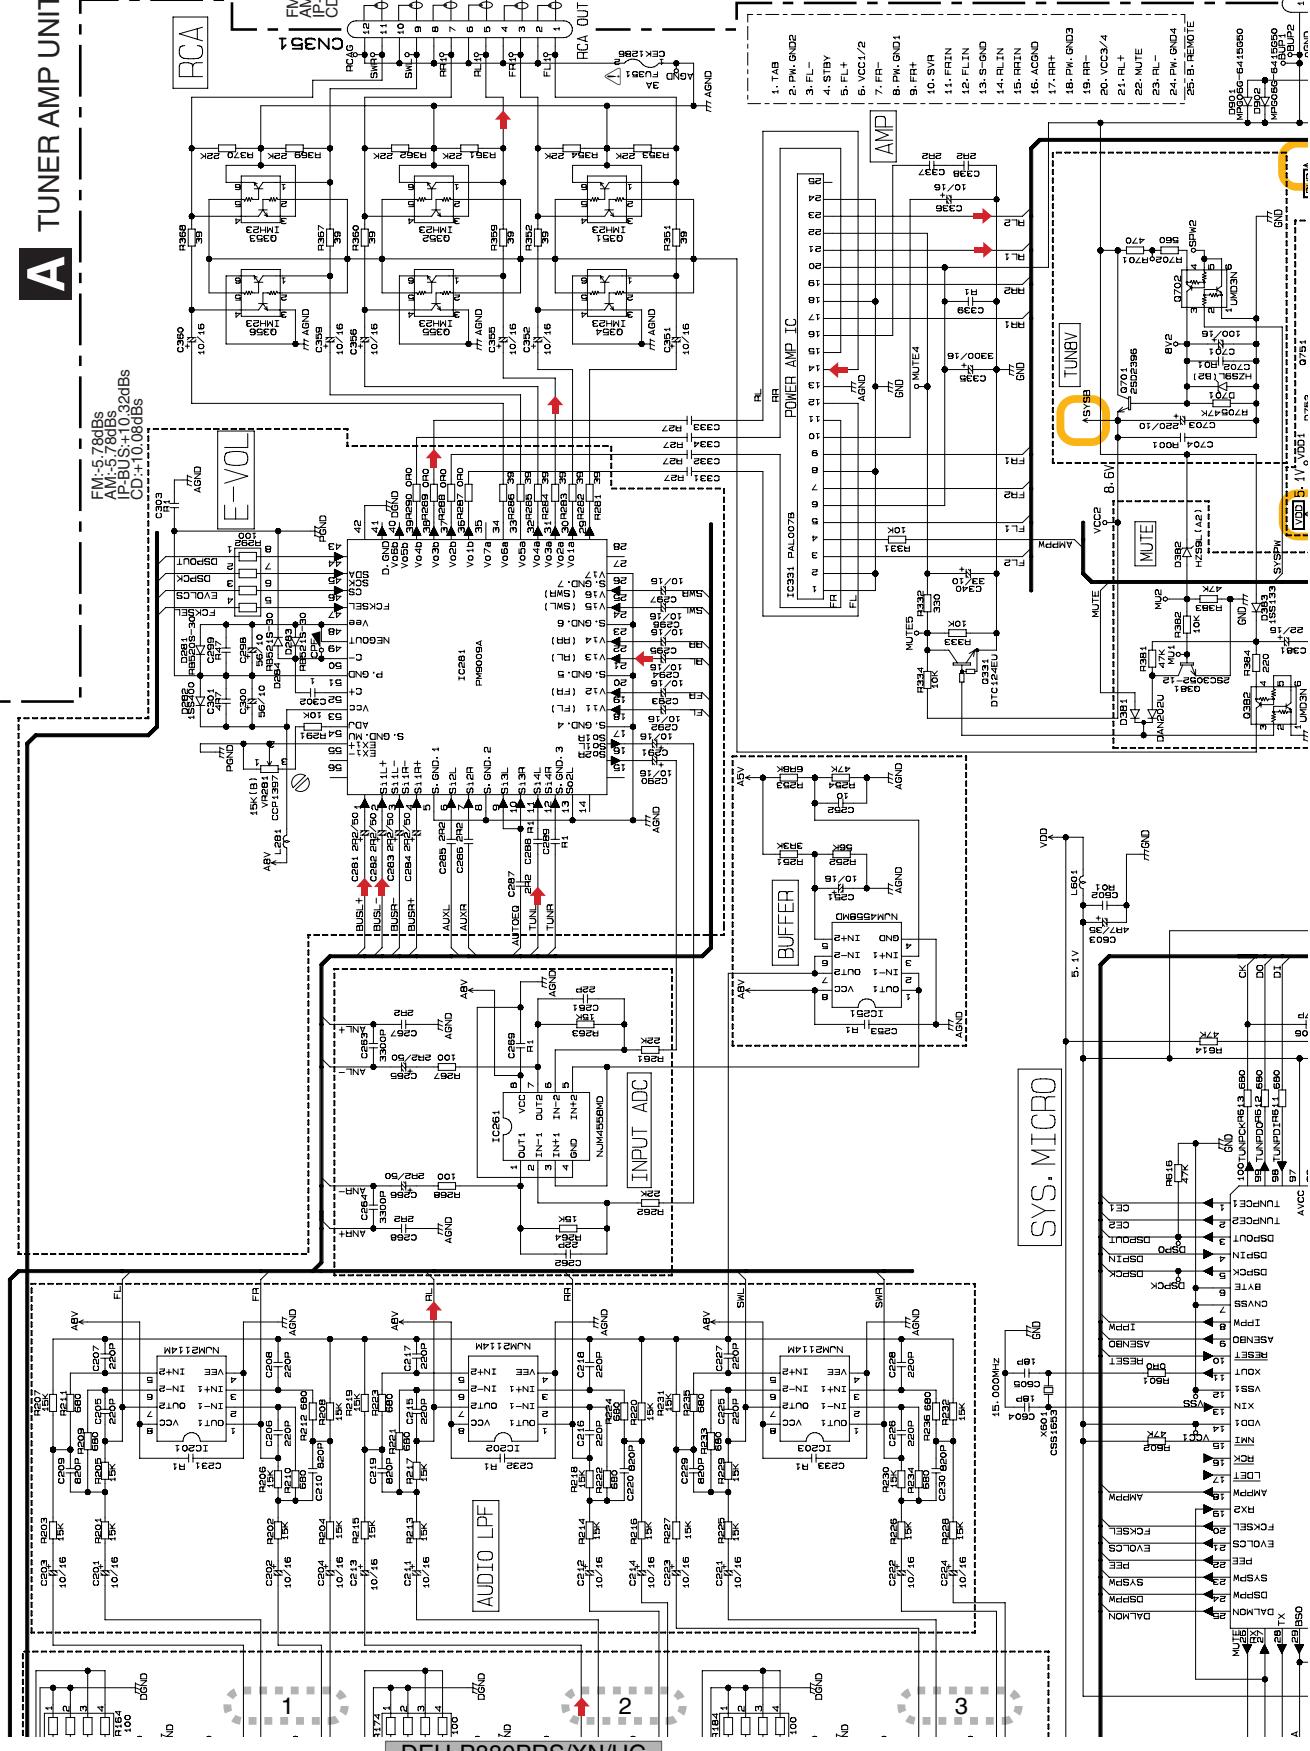A TUNER AMP UNIT**A-b**

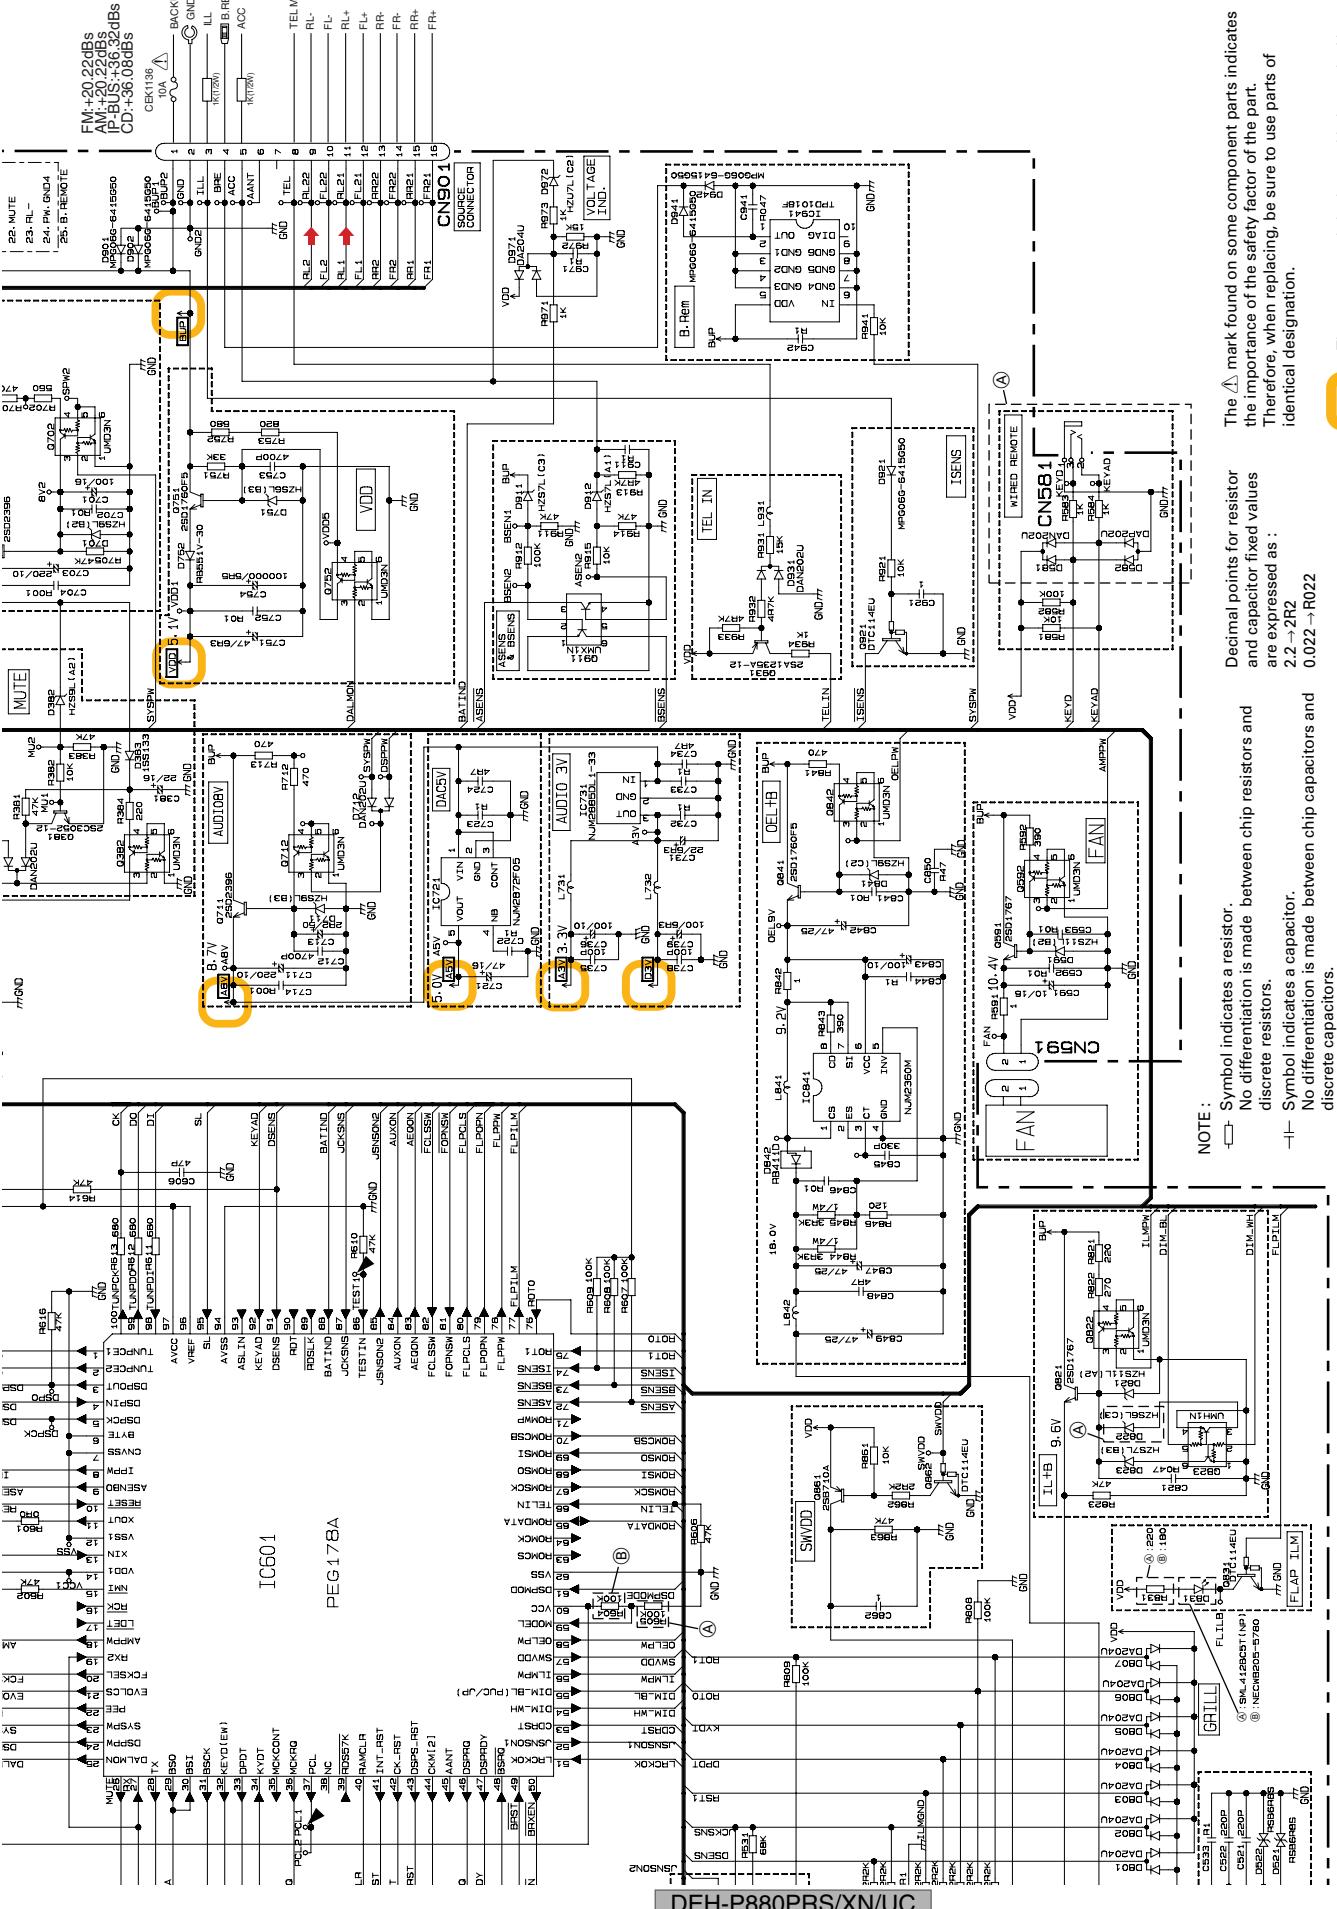

A-b

: The power supply is shown with the marked box.

The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

RL+
FL+
FR+
RR+

RL-
FL-
FR-
RR-

ILL-
ILL+
ACC

B.REM

ANT

TEL.MUTE

FR+

FR-

BT

BT

GND

33

8

53

NOTE :
□ Symbol indicates a resistor.
□ No differentiation is made between chip resistors and discrete resistors.
□ Symbol indicates a capacitor.
□ No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as :
 2.2 → 2R2
 0.022 → R022

A

B

C

D

E

3.3 OVERALL CONNECTION DIAGRAM(EW5 MODEL)(GUIDE PAGE)

A

B


C

D


E

F


DEH-P880PRS/XN/UC

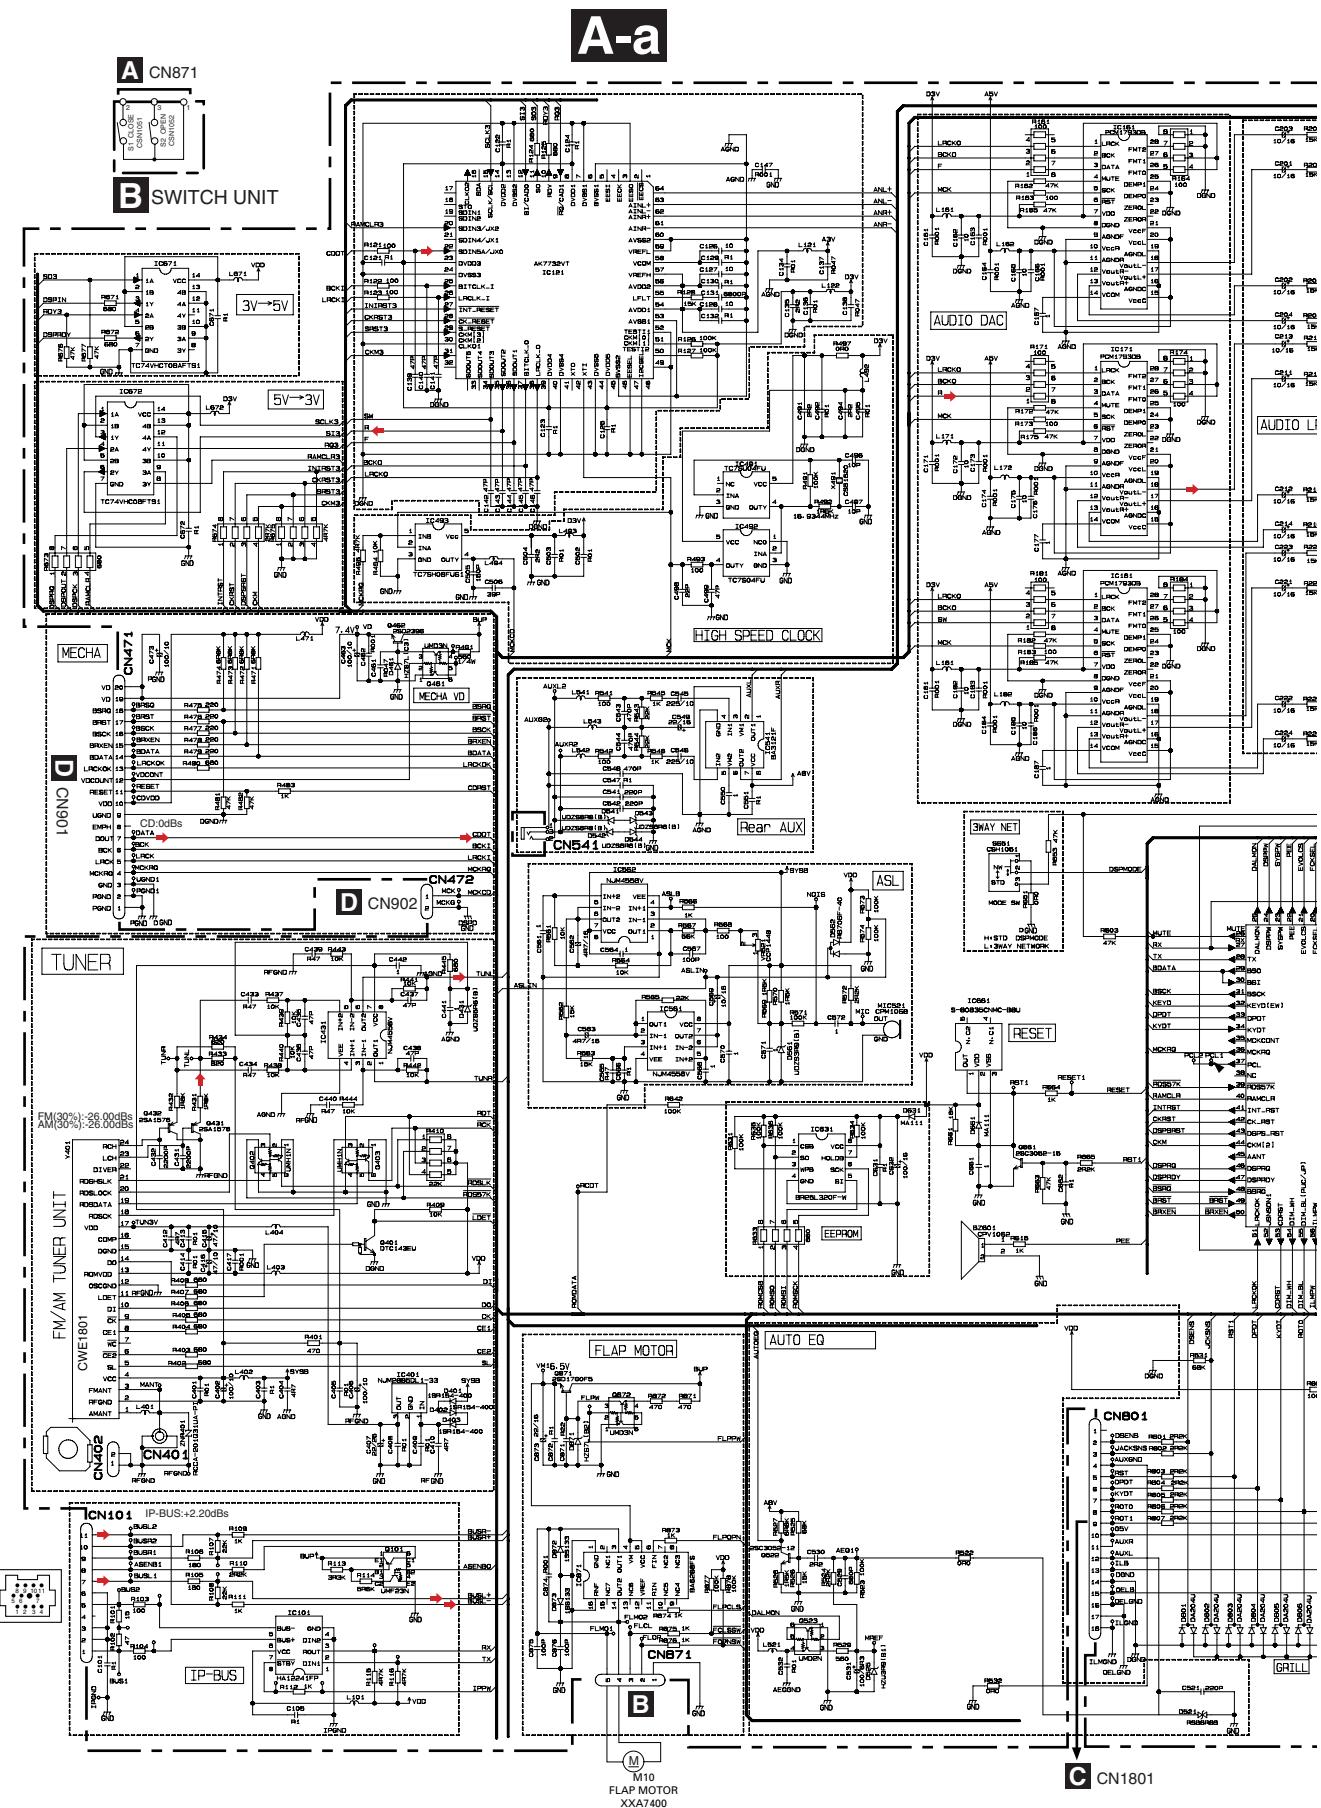**A B**


A

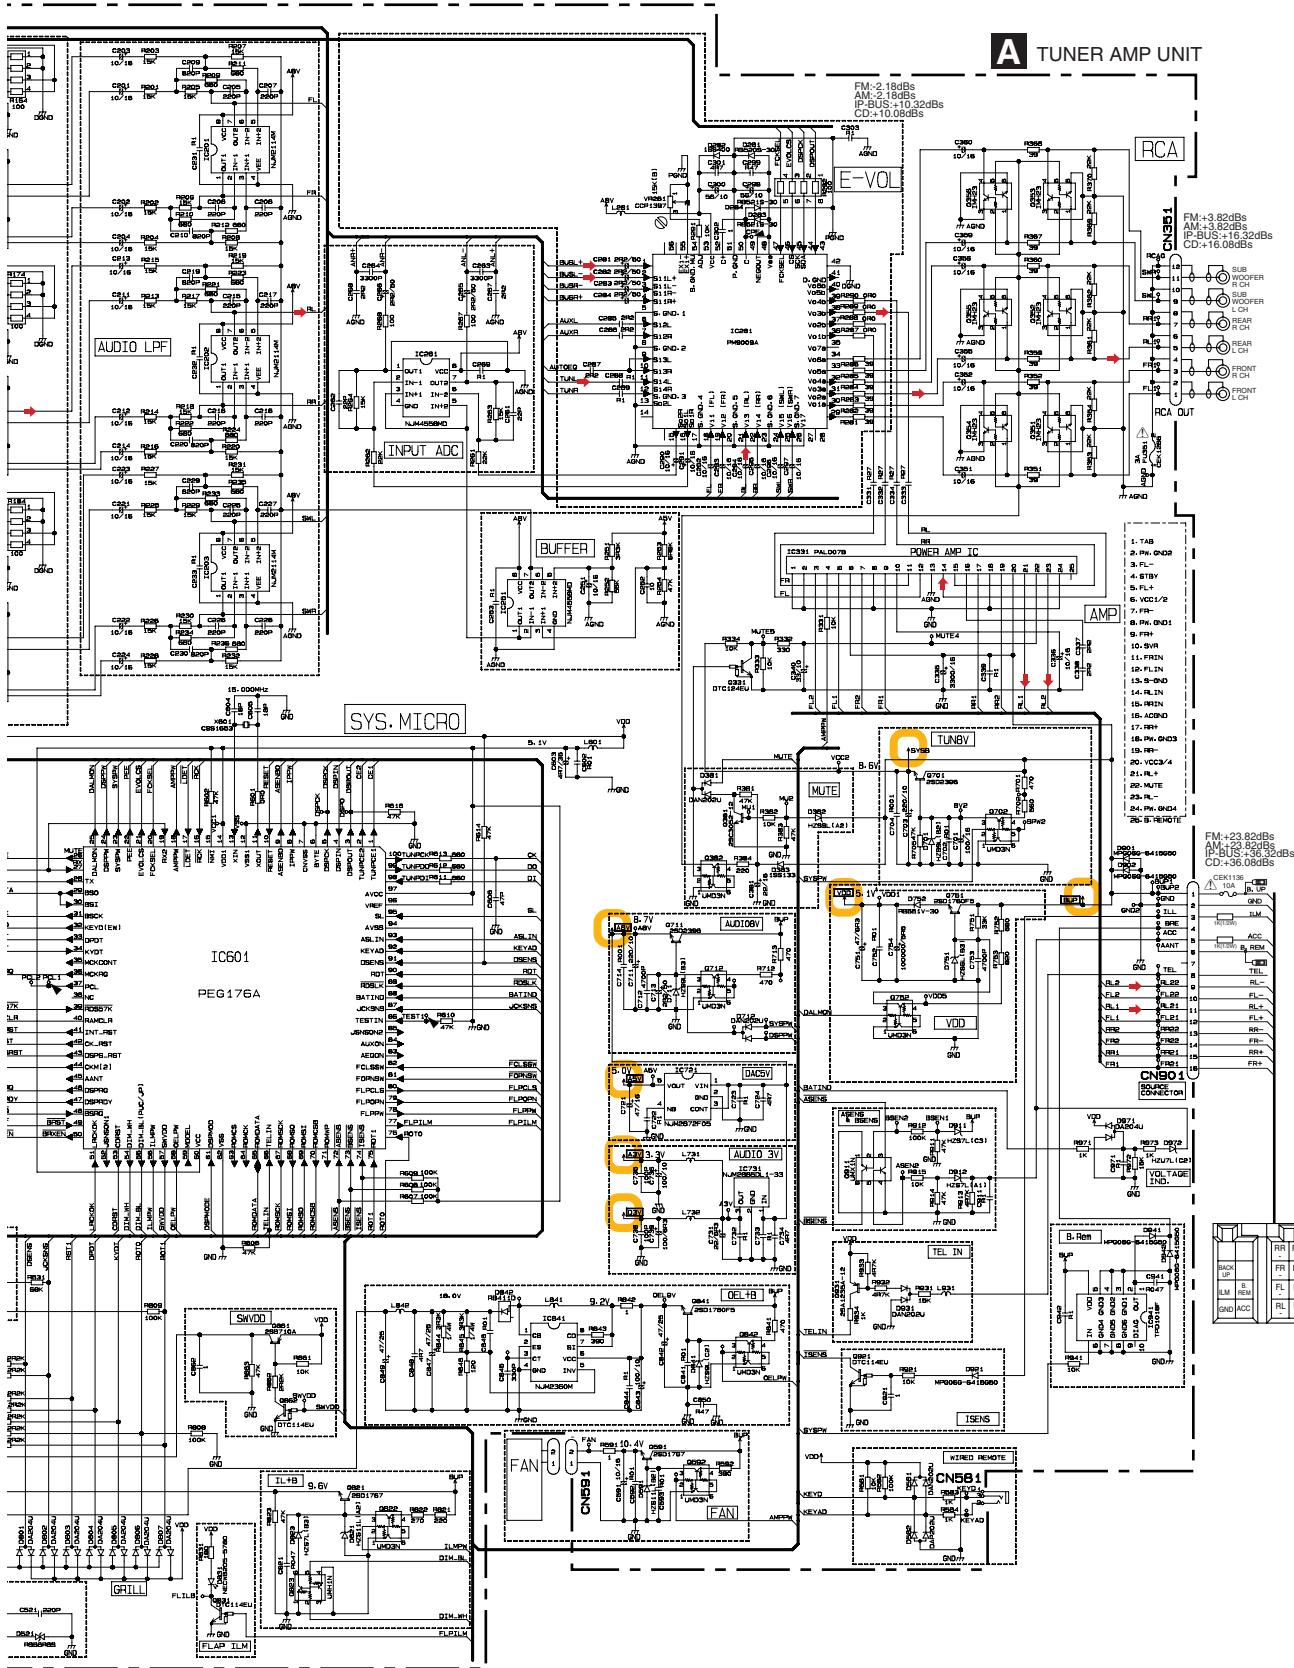A-b


A CN871










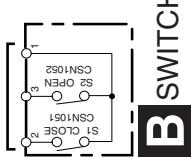


B SWITCH UNIT

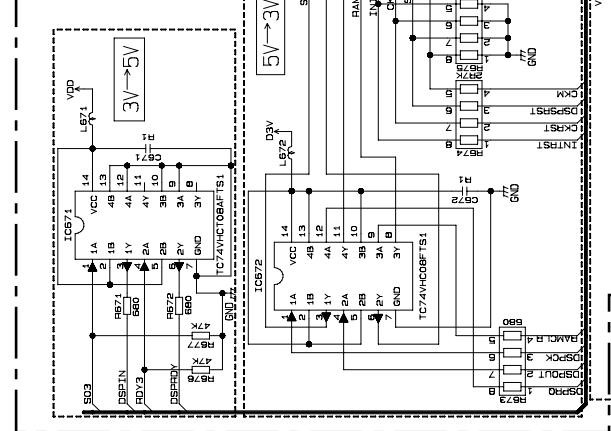

A-a **B**

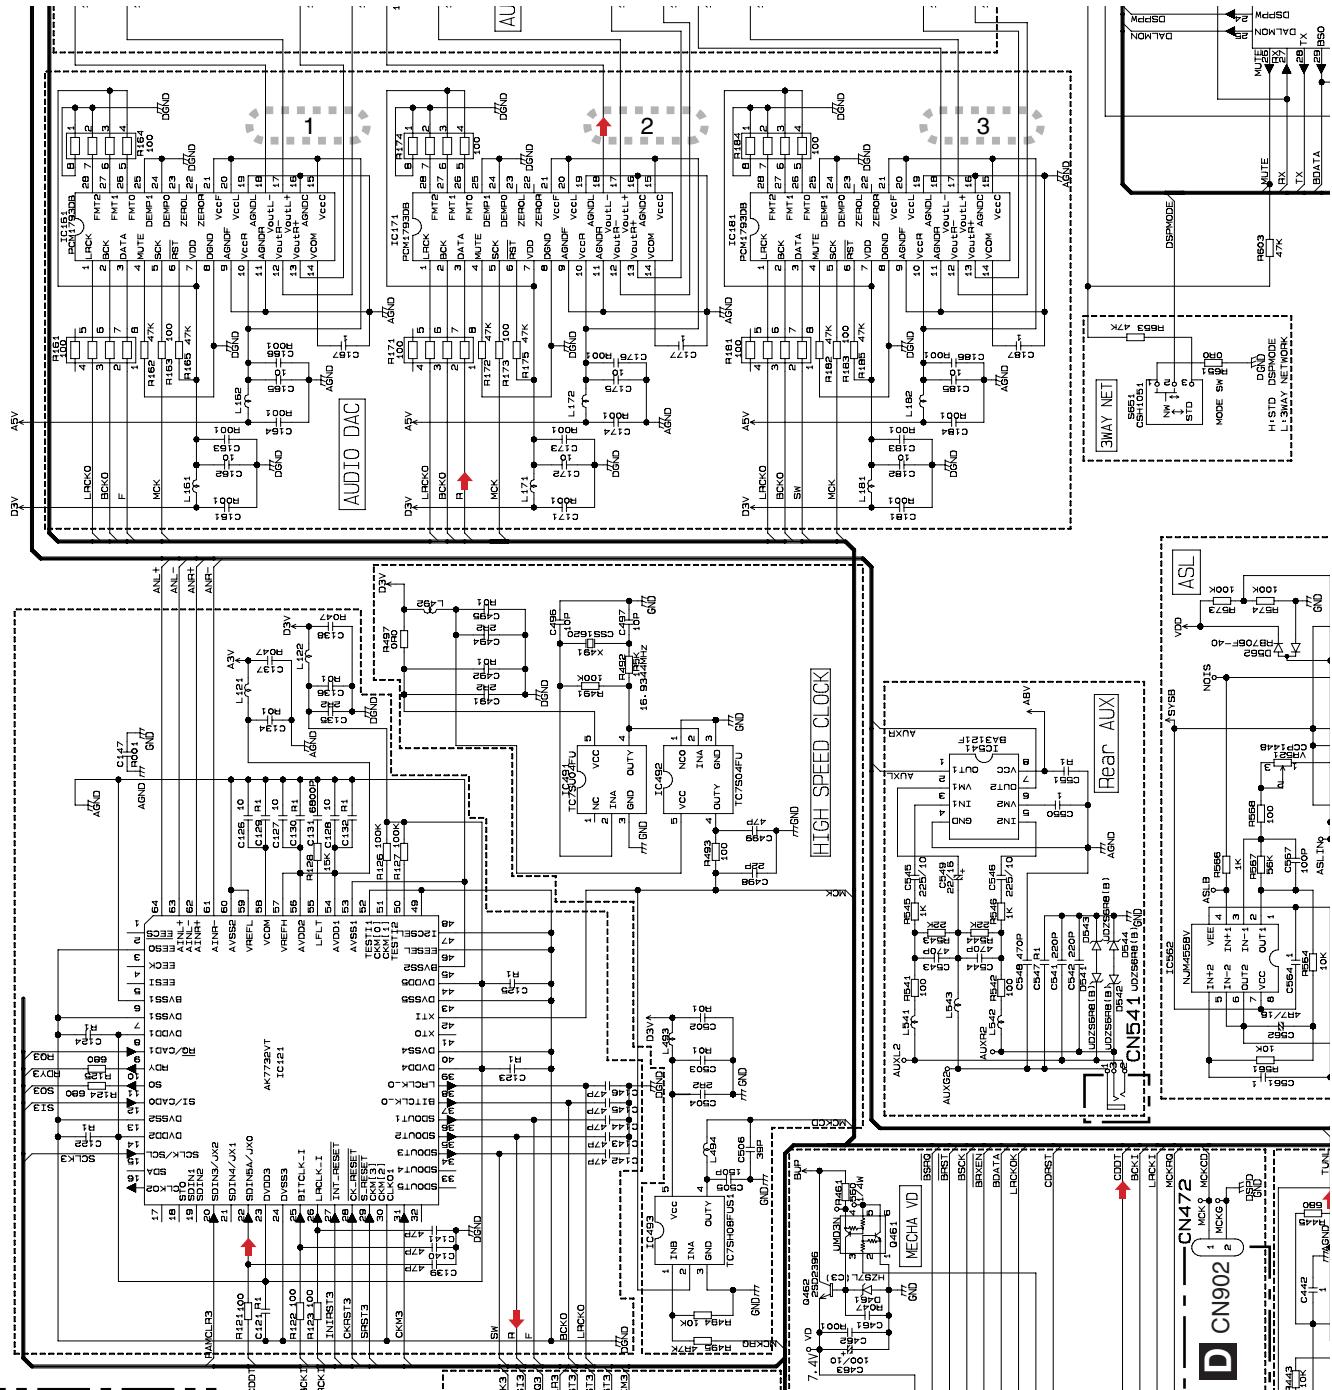

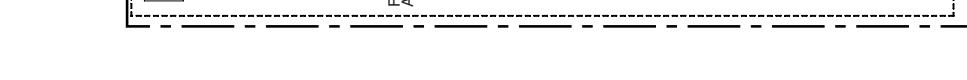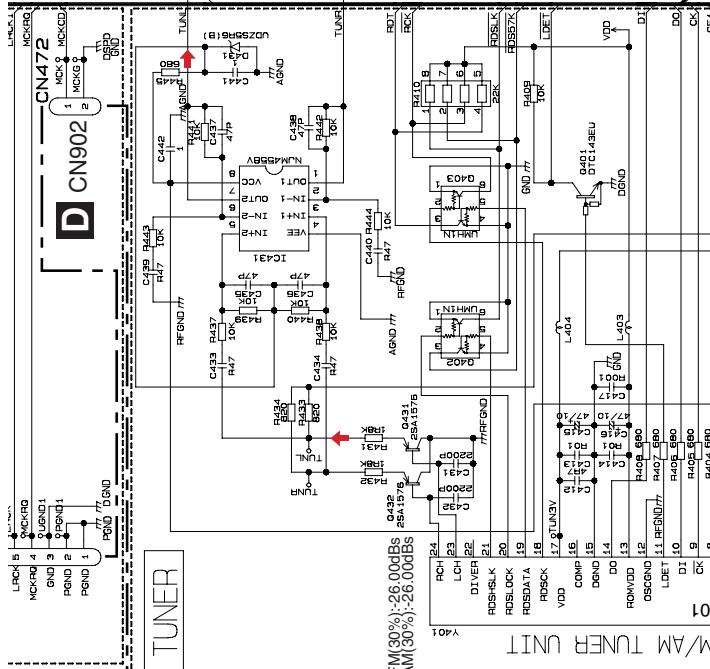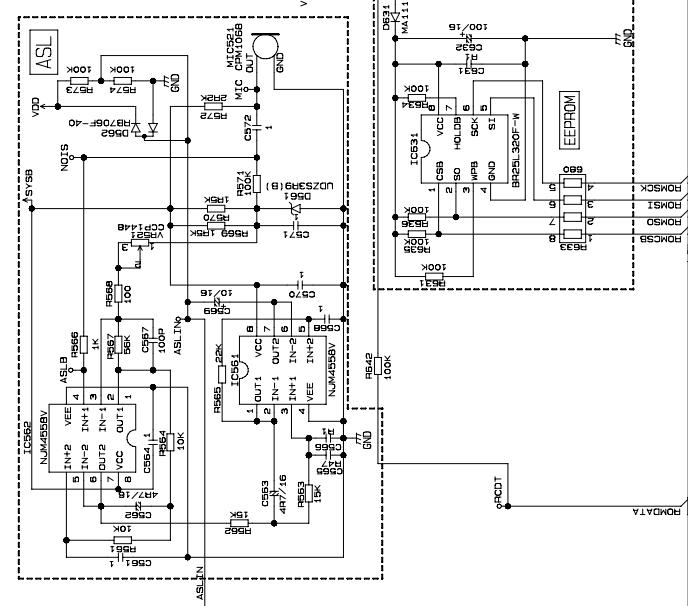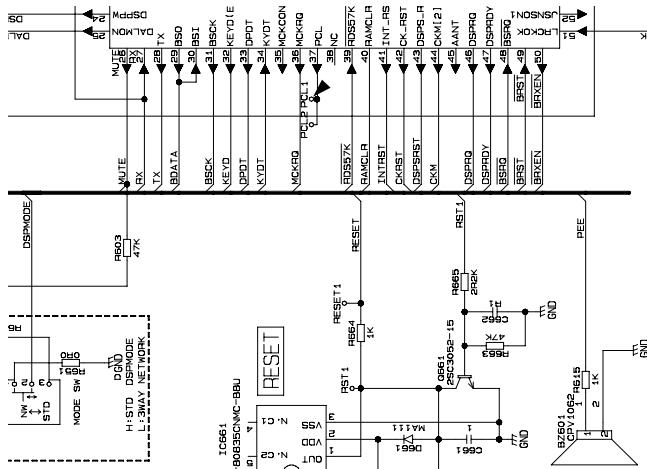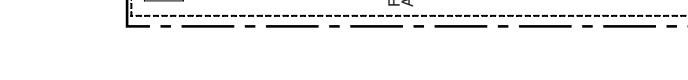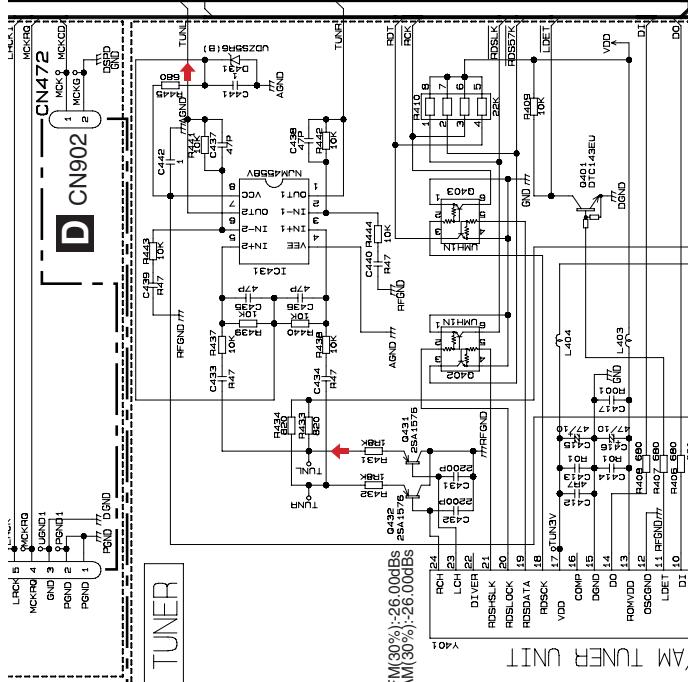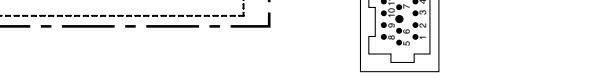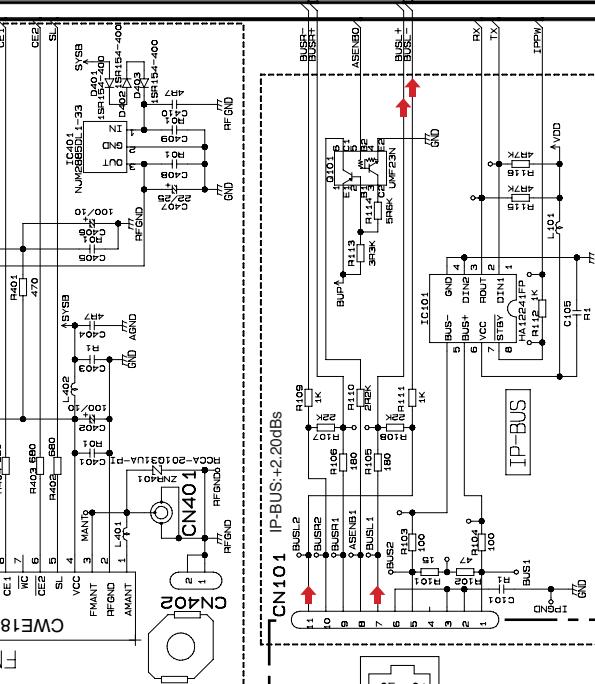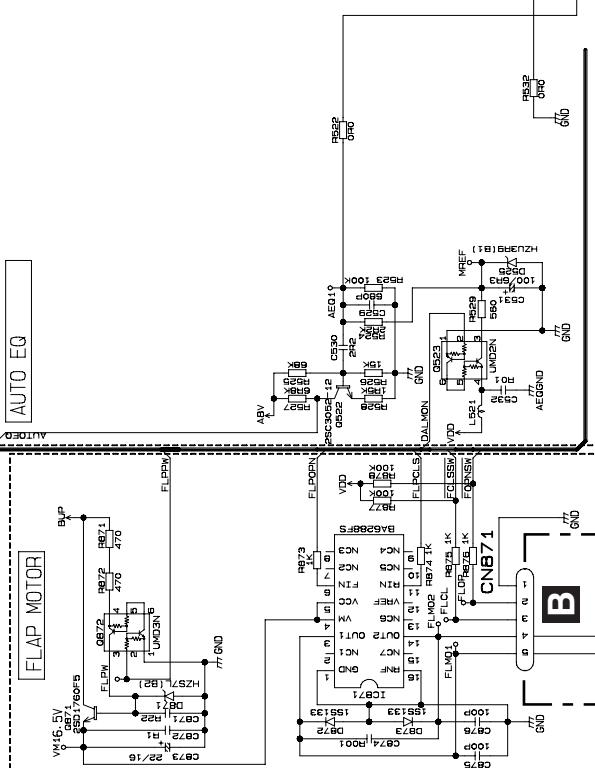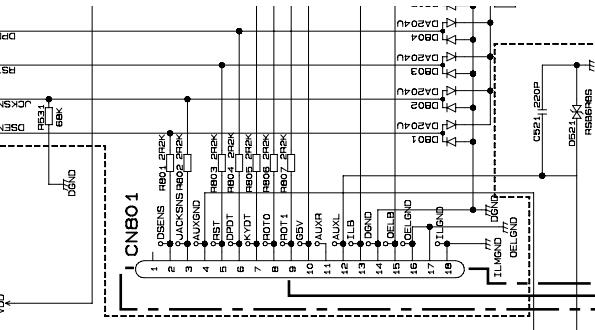
A-a
A-b
CN1801
M10
FLAP MOTOR
XXA7400

D
FM(30%):26.000dBs
AM(30%):26.000dBs

C
A-b
C
CN1801
M10
FLAP MOTOR
XXA7400

B
M10
FLAP MOTOR
XXA7400

A

B


C


D

E

F


G

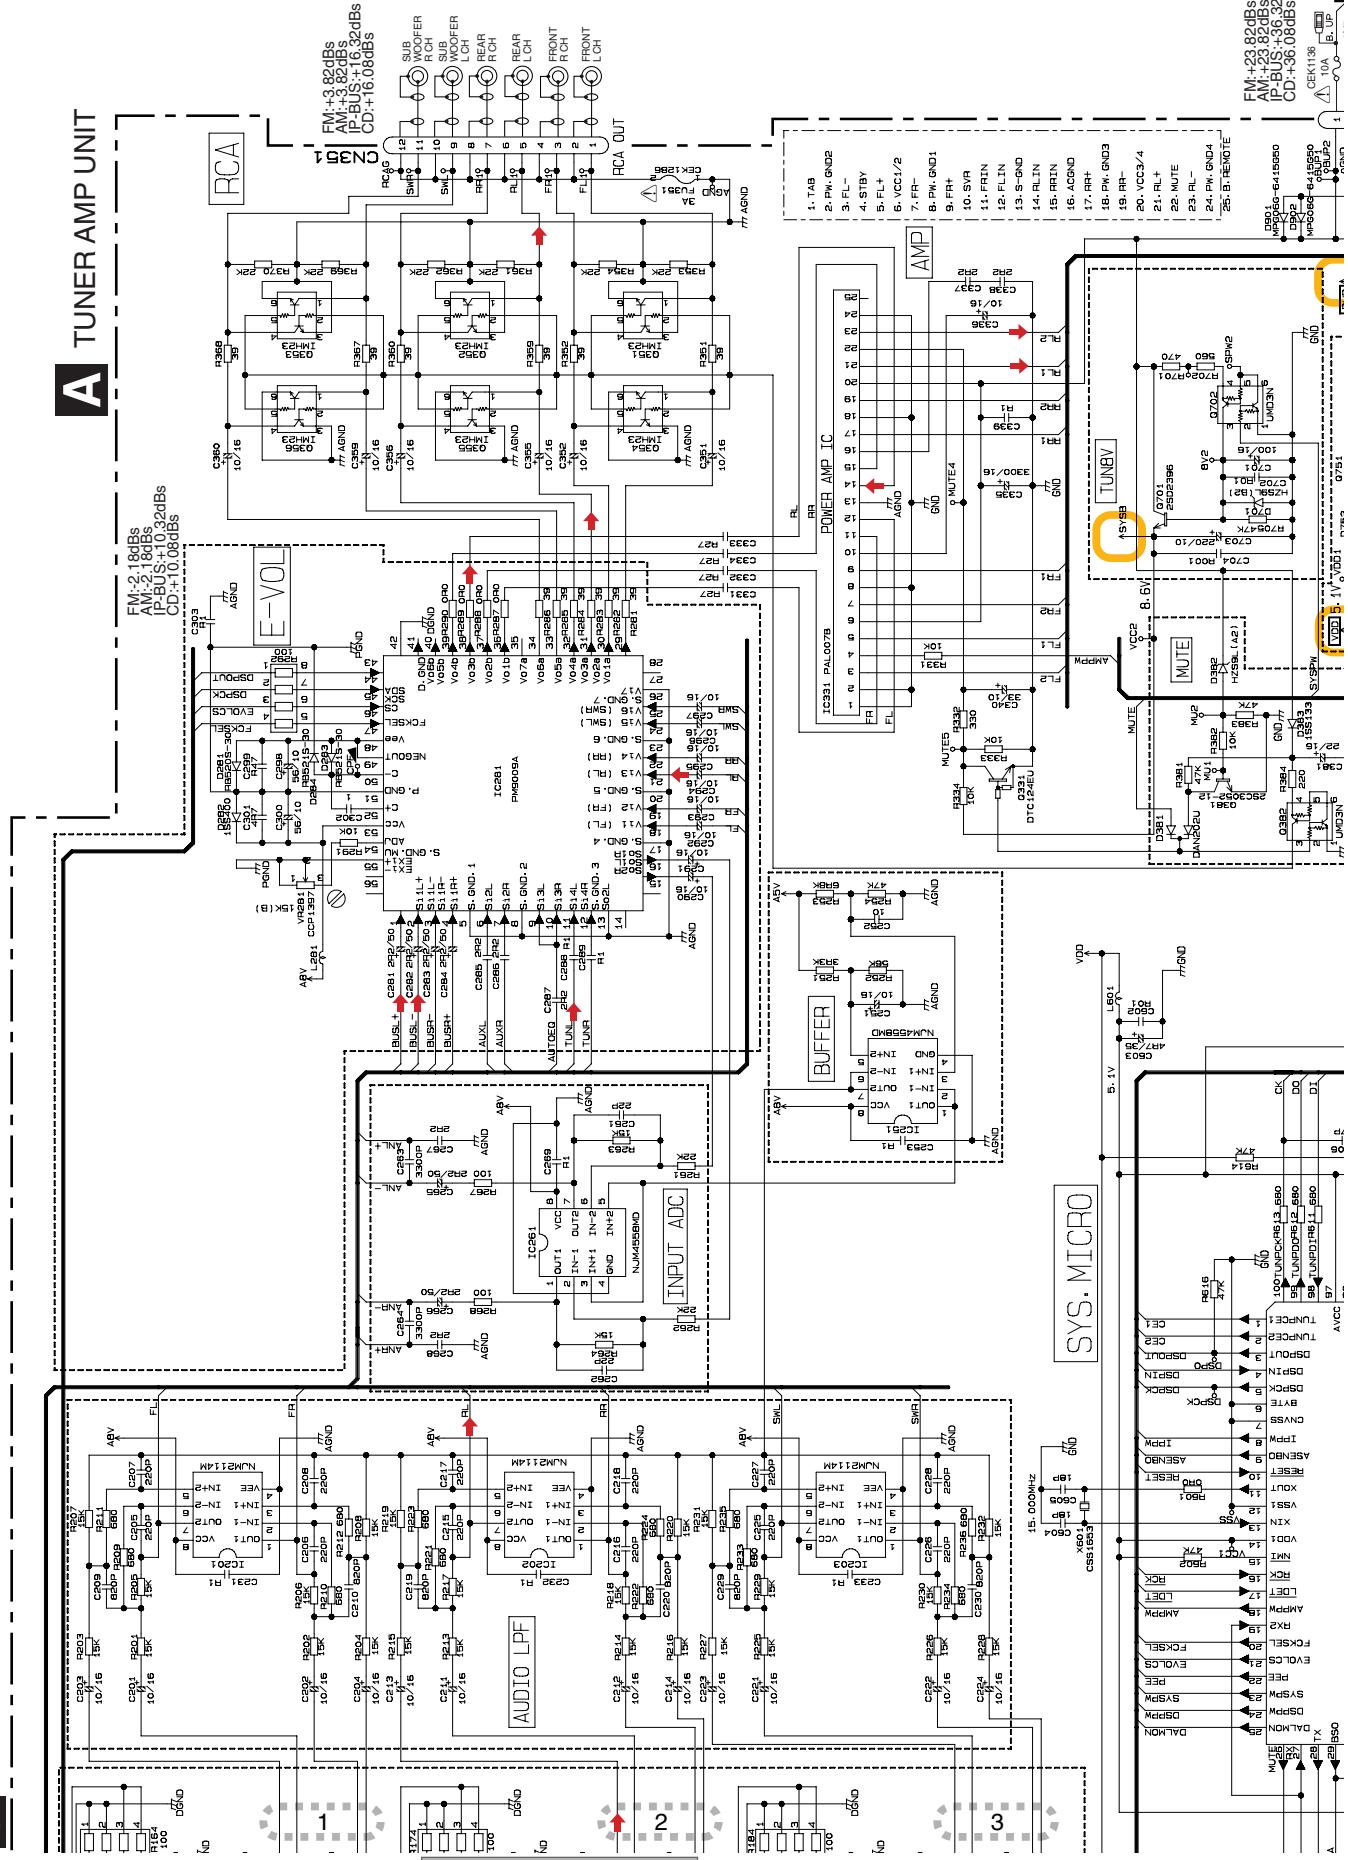A-b**A TUNER AMP UNIT**

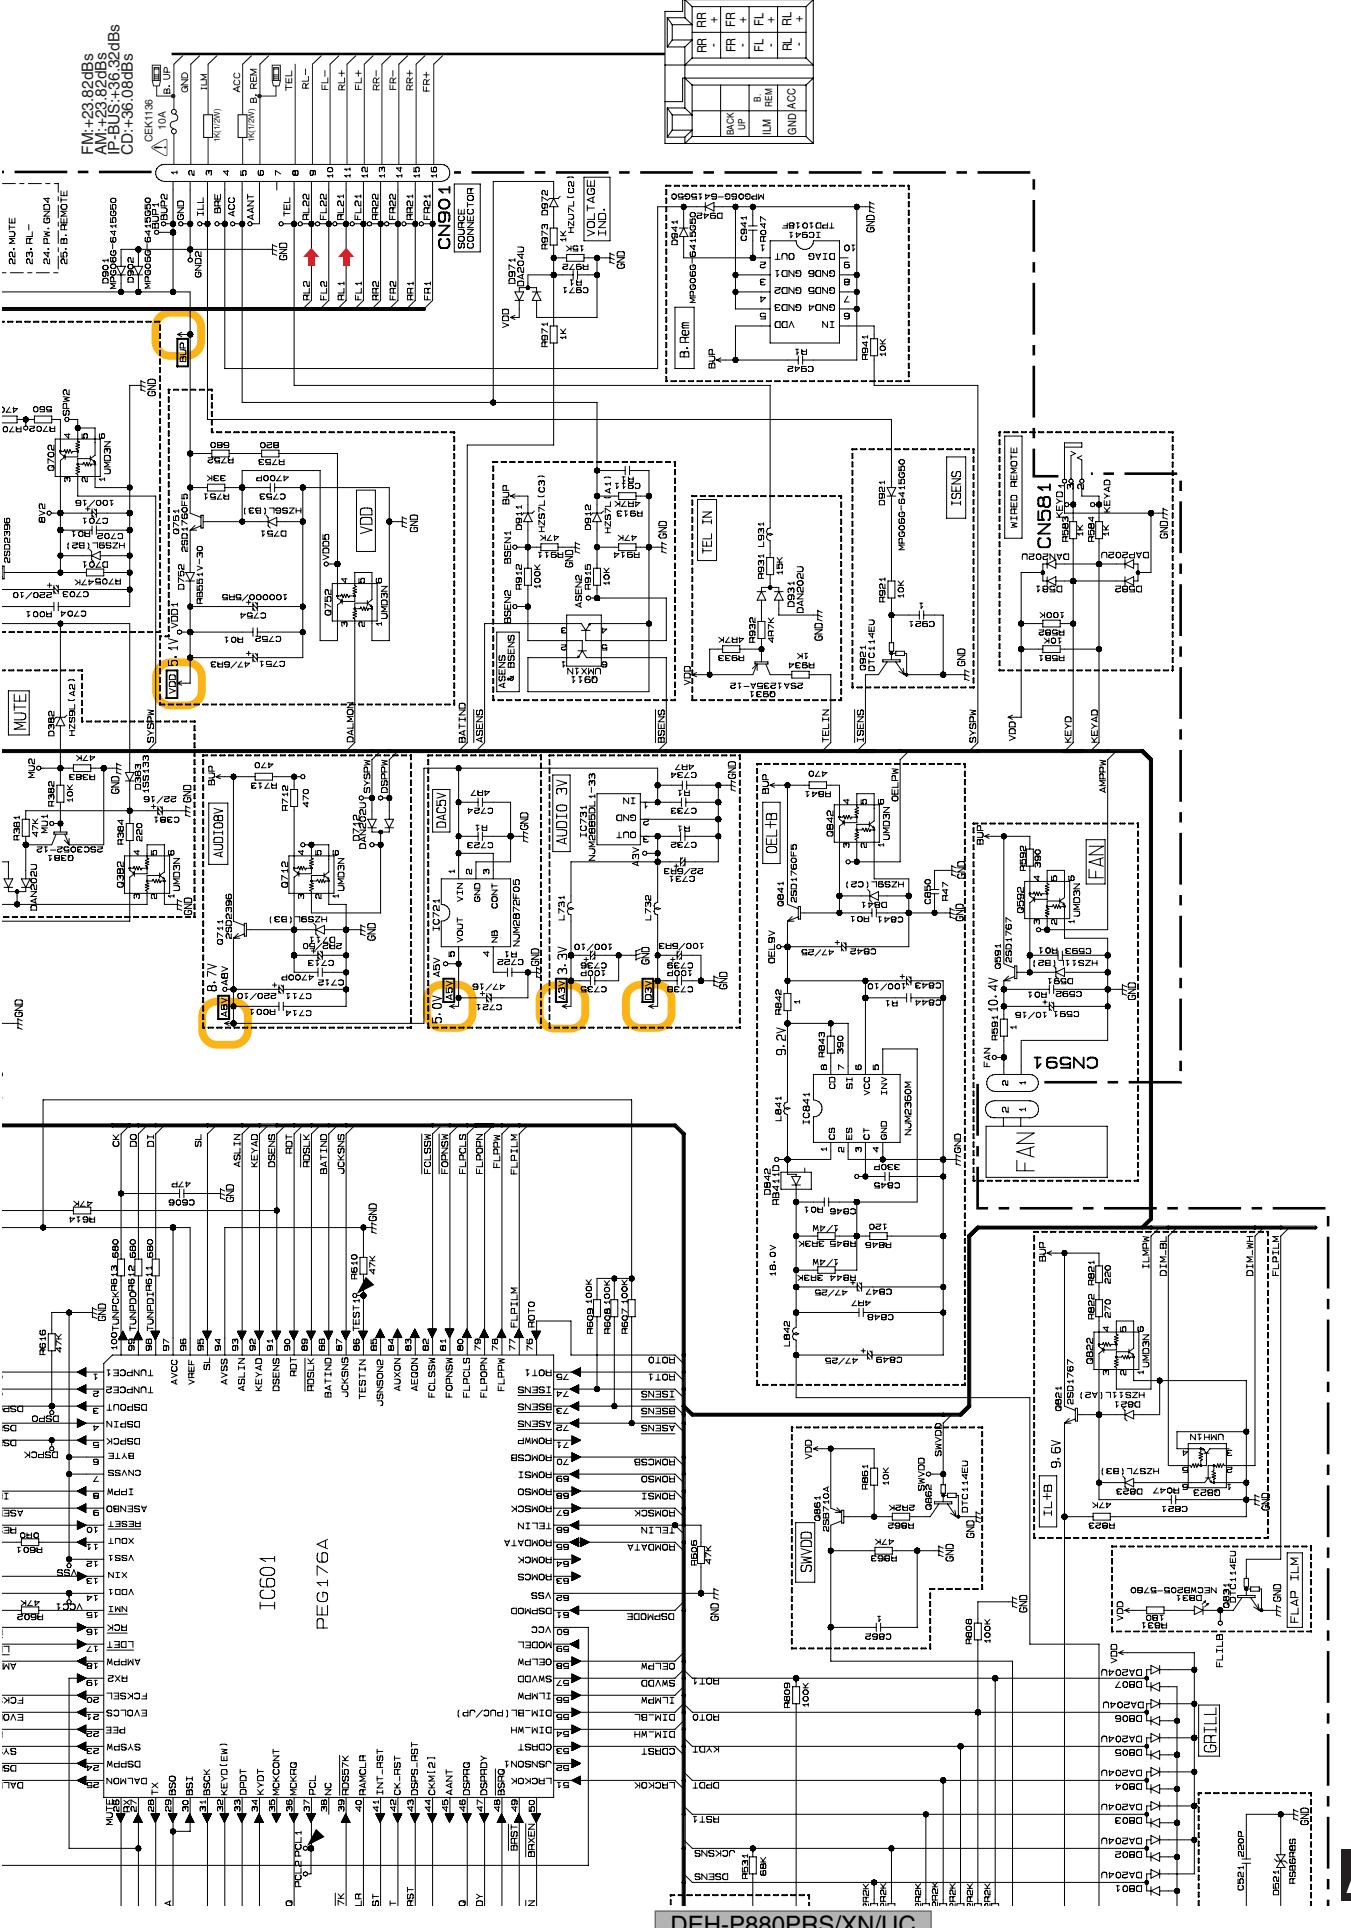

3.4 KEYBOARD UNIT

A
A
CN801

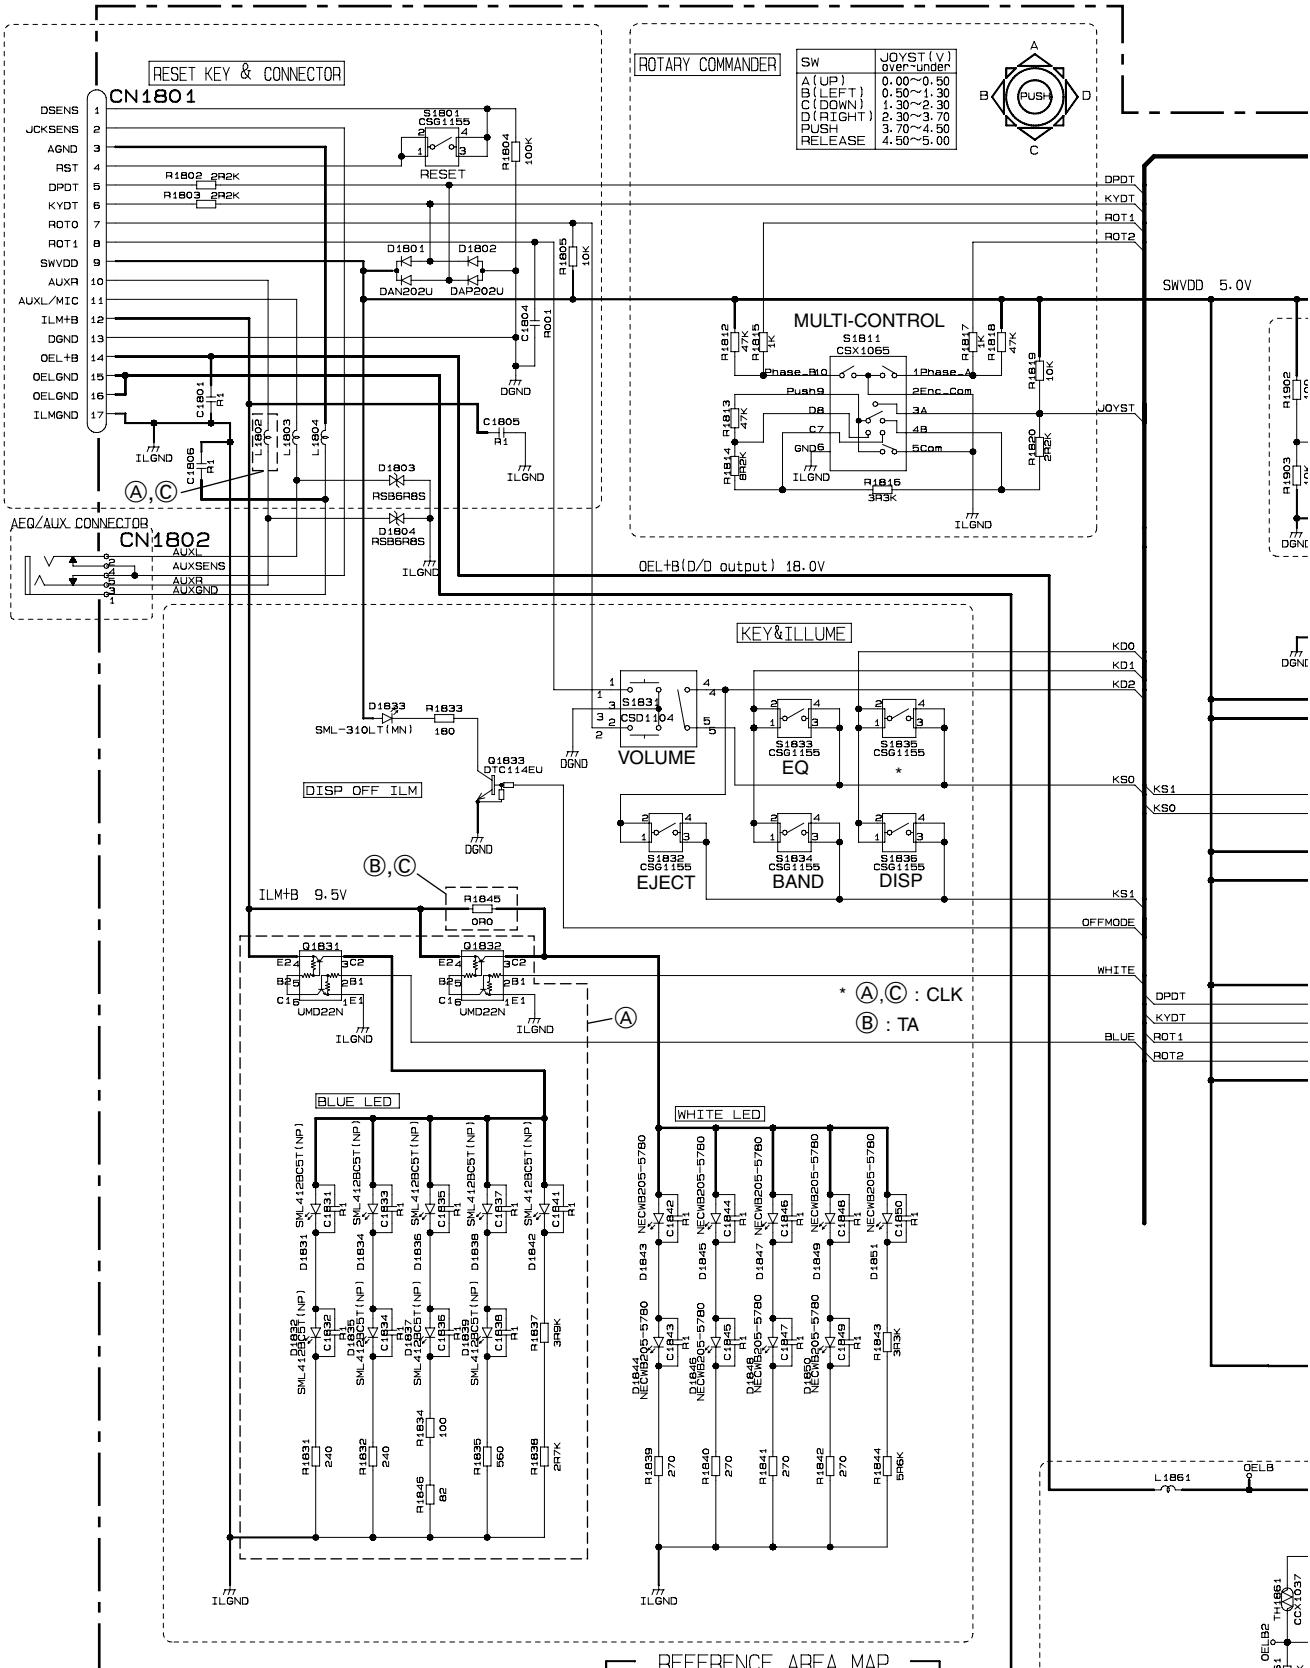

(A) : DEH-P880PRS/XN/UC
 (B) : DEH-P88RS/XN/EW5
 (C) : DEH-P80RS/XN/ES

DEH-P880PRS/XN/UC

C

40


1

2

3

4

C KEYBOARD UNIT

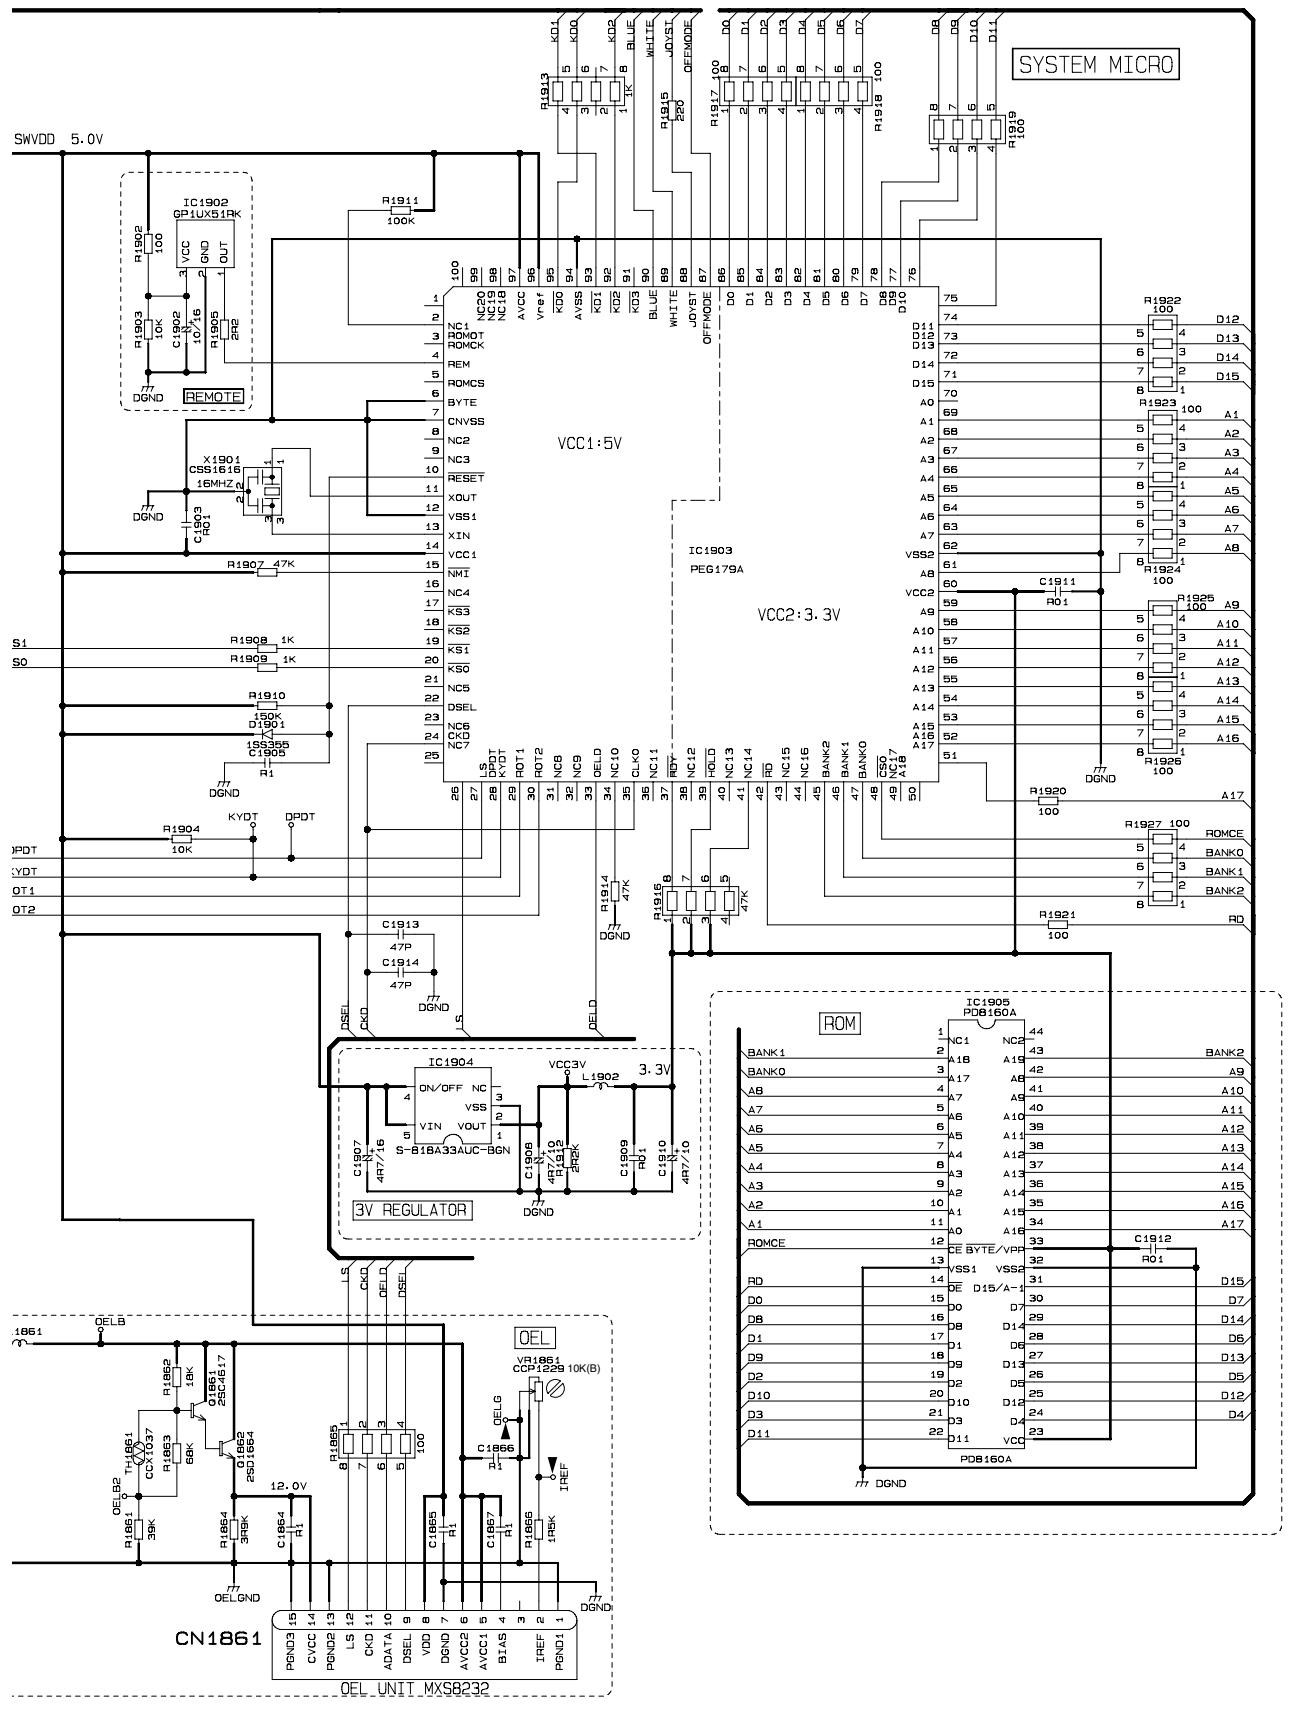


3.5 CD MECHANISM MODULE(GUIDE PAGE)

A

D-a



PICKUP UNIT(P10.5)(SERVICE)

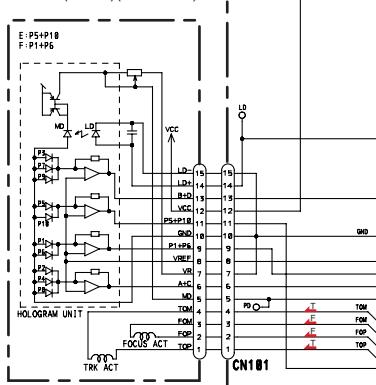


F.ACT: Applying positive voltage to TOP.
T.ACT: Applying positive voltage to TOP.

SWITCHES:
CD CORE UNIT(S10.5COMP1)
S901:HOME SWITCH.....ON-OFF
S903:DSCSNS SWITCH.....ON-OFF
S904:12EJ SWITCH.....ON-OFF
S905:8EJ SWITCH.....ON-OFF

The underlined indicates the switch position.

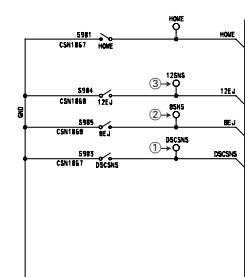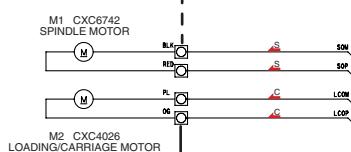


- (1) Monitor land(ø1.2mm)
- # Monitor land(ø0.8mm)
- [] Land for manual soldering

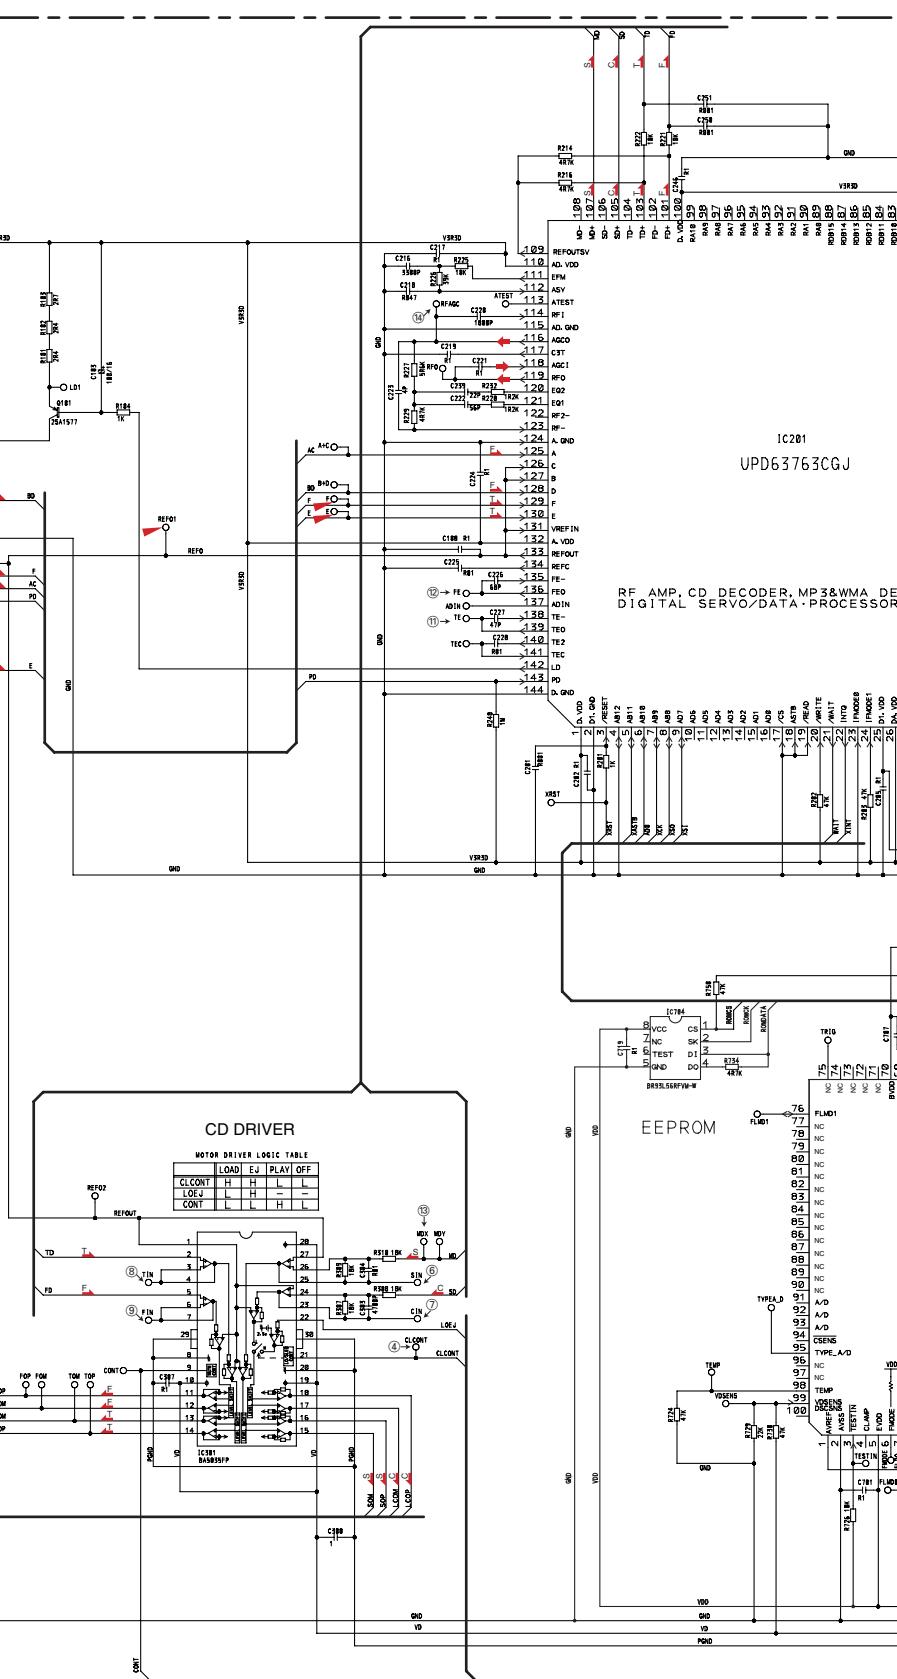


NOTE1) GND ... CD LSI, RFAMP, CPU
PGND ... Actuator, Motor, Driver
AGND ... Audio
These GND's are not connected to each other on PCB.
PGND is connected to a floating mechanism part by a screw.

D


D-b

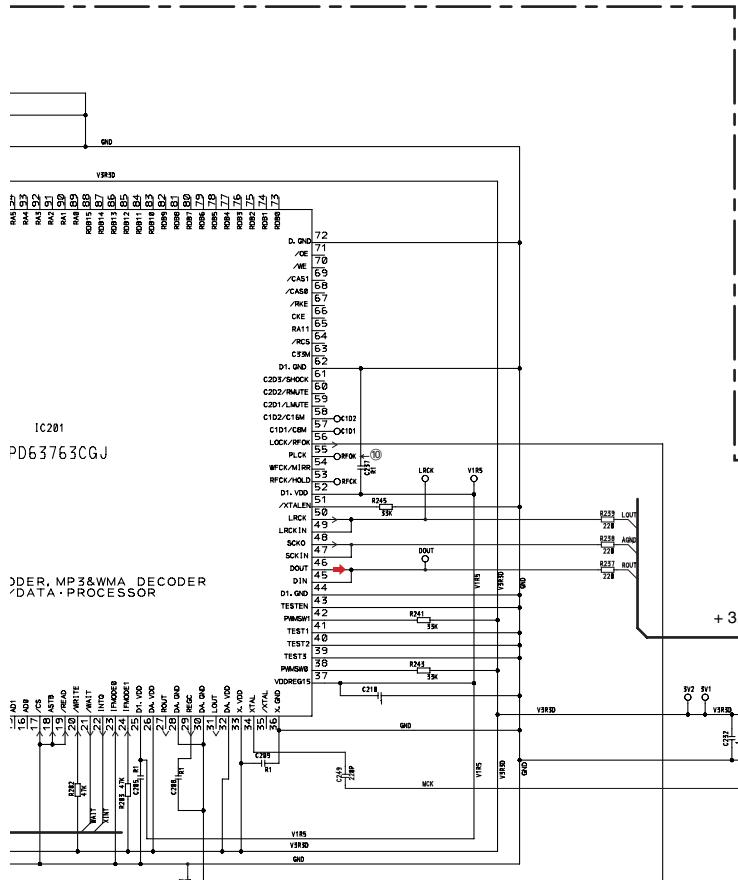


D CD CORE UNIT(S10.5COMP1)

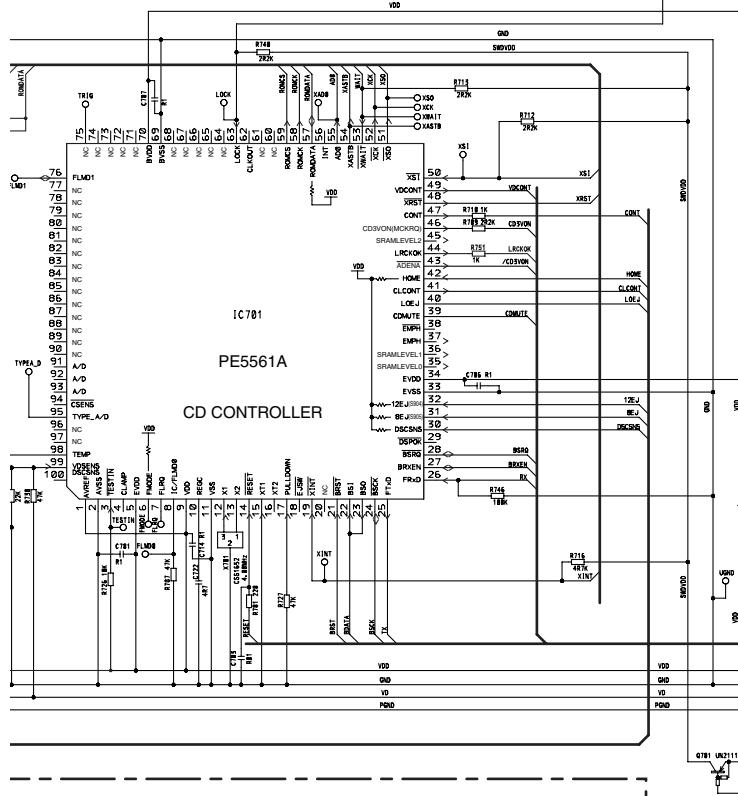

+ 3.3 V REGULATOR

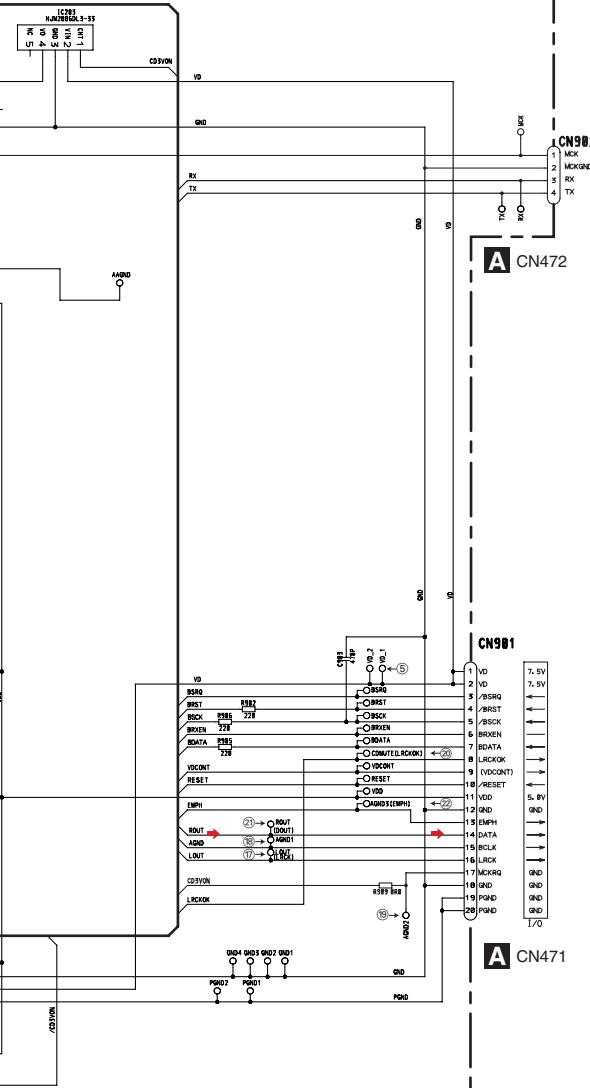

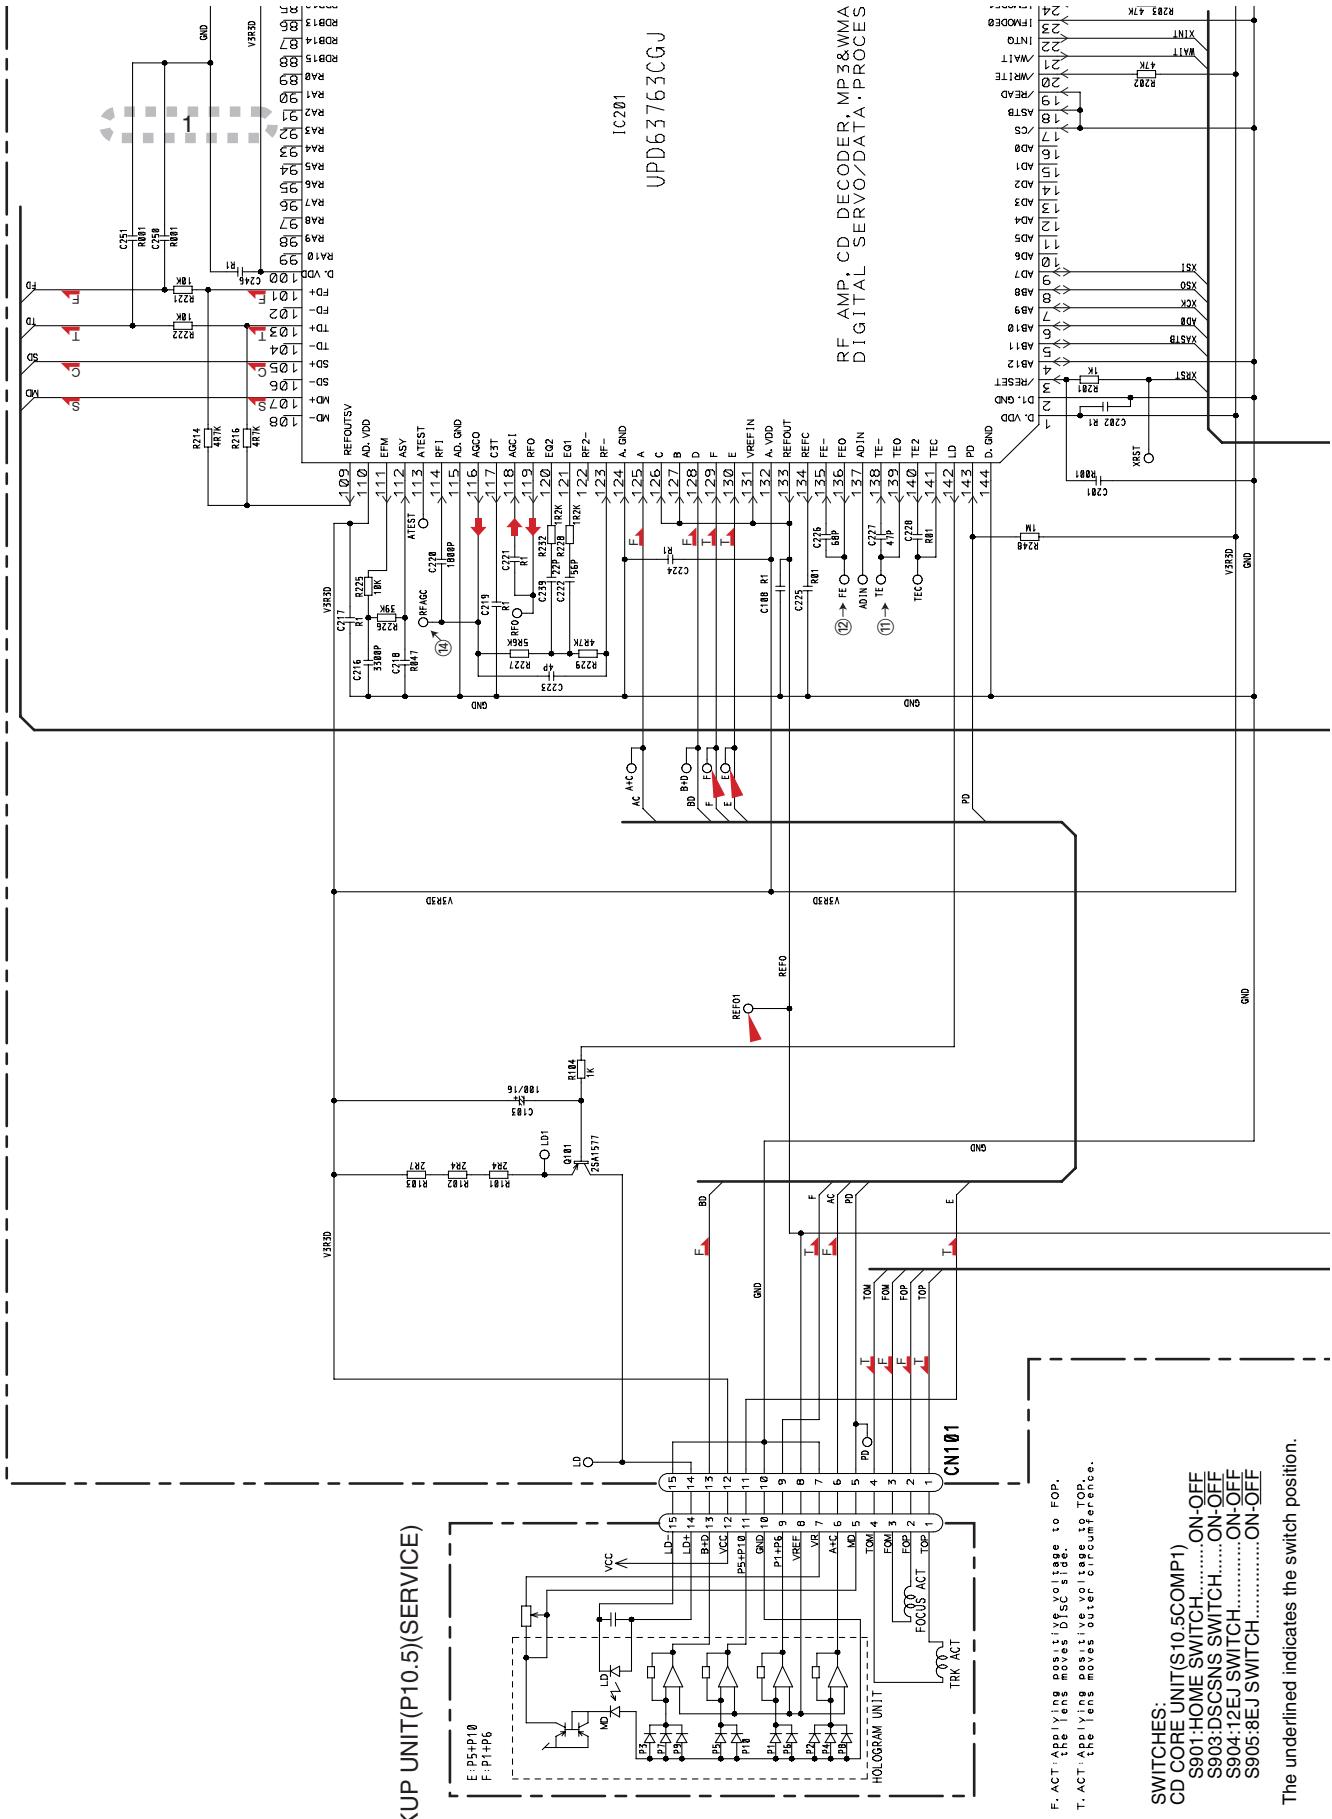D-a


DEH-P880PRS/XN/UC


SWITCHES:
 CD CORE UNIT(S10.5COMP1)
 S901:HOME SWITCH.....ON-OFF
 S903:DSCSNS SWITCH.....ON-OFF
 S904:12EJ SWITCH.....ON-OFF
 S905:8EJ SWITCH.....ON-OFF

F ACT : the lens moves positive voltage to FOP.

T ACT : applying positive voltage to tape top.

The underlined indicates the switch position.

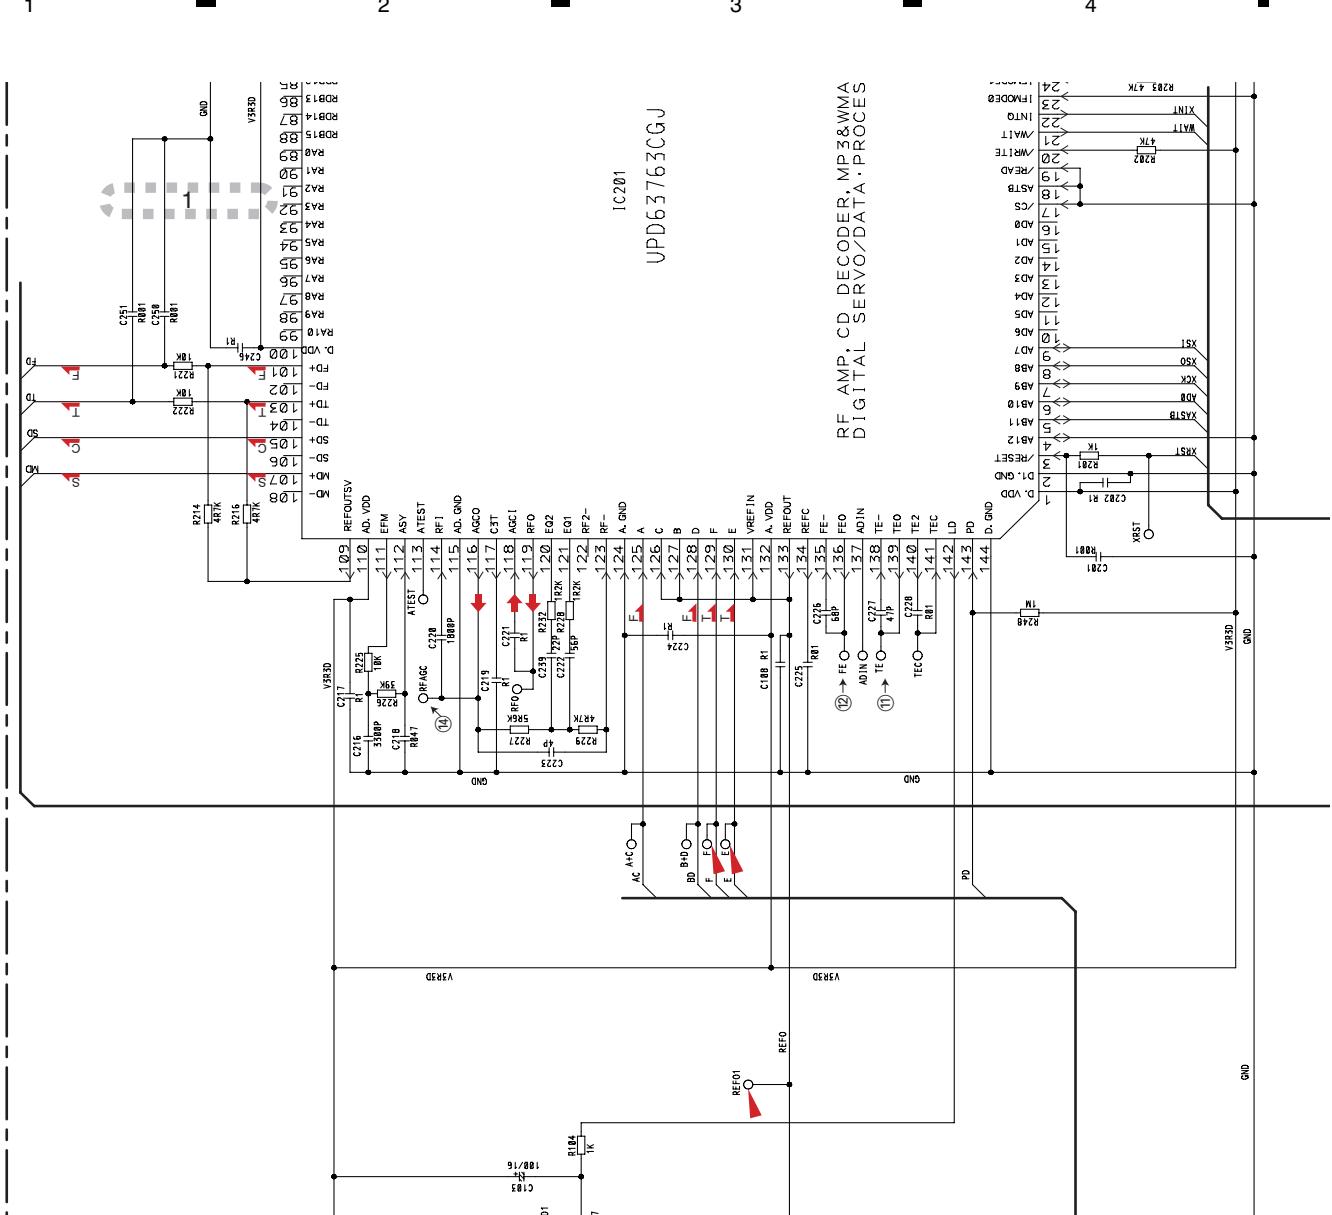D-b

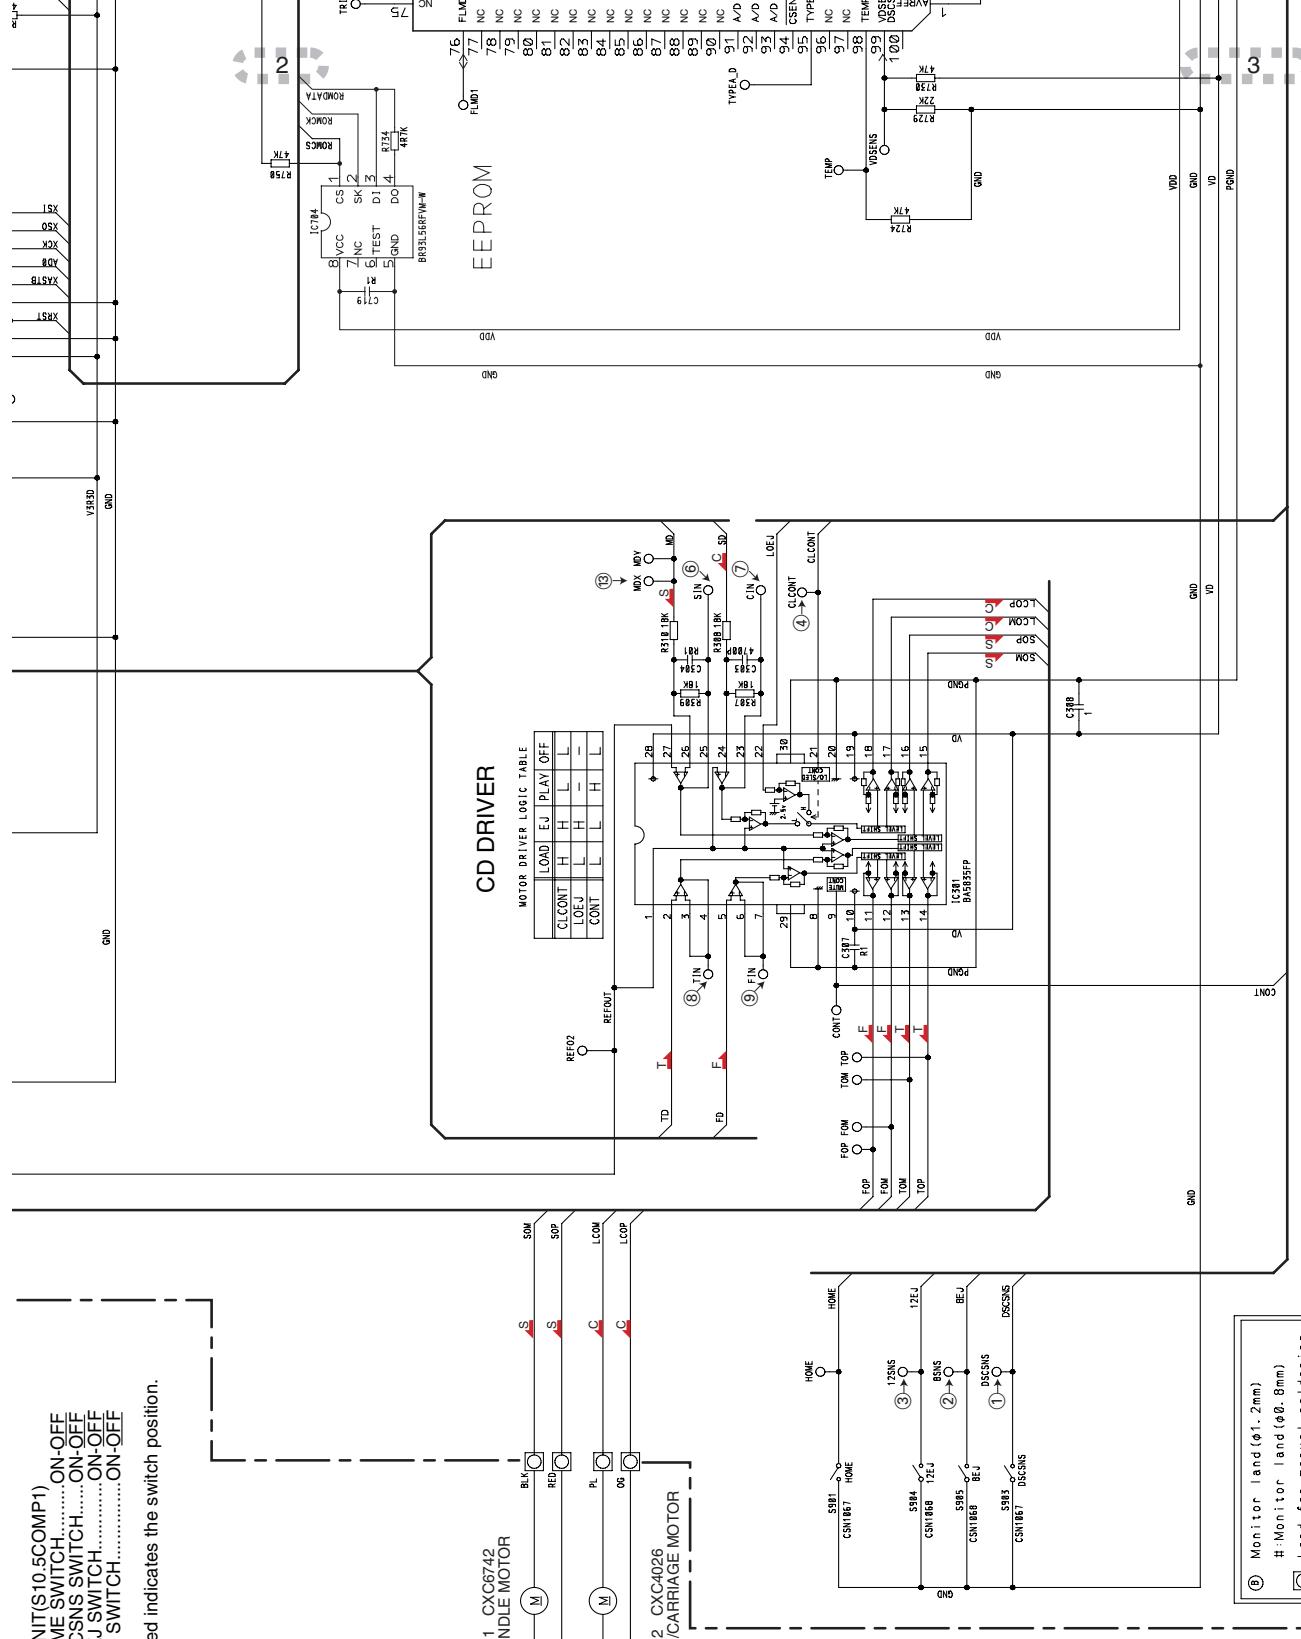
D-b

NOTE1) GND ... CD LSI, RFAMP, CPU
 PGND ... Actuator, Motor Driver
 AGND ... Audio
 These GND's are not connected to each other on PCB.
 PGND is connected to a floating mechanism part by a screw.

D-a

A

B


C

D

E

F

G

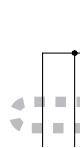D-b
DEH-P880PRS/XN/UC


V33D

V33S

V33P

V33N

V33M

V33L

V33K

V33J

V33I

V33H

V33G

V33F

V33E

V33D

V33C

V33B

V33A

V339

V338

V337

V336

V335

V334

V333

V332

V331

V330

V339

V338

V337

V336

V335

V334

V333

V332

V331

V330

V339

V338

V337

V336

V335

V334

V333

V332

V331

V330

V339

V338

V337

V336

V335

V334

V333

V332

V331

V330

V339

V338

V337

V336

V335


V334


V333

V332

V331

V330

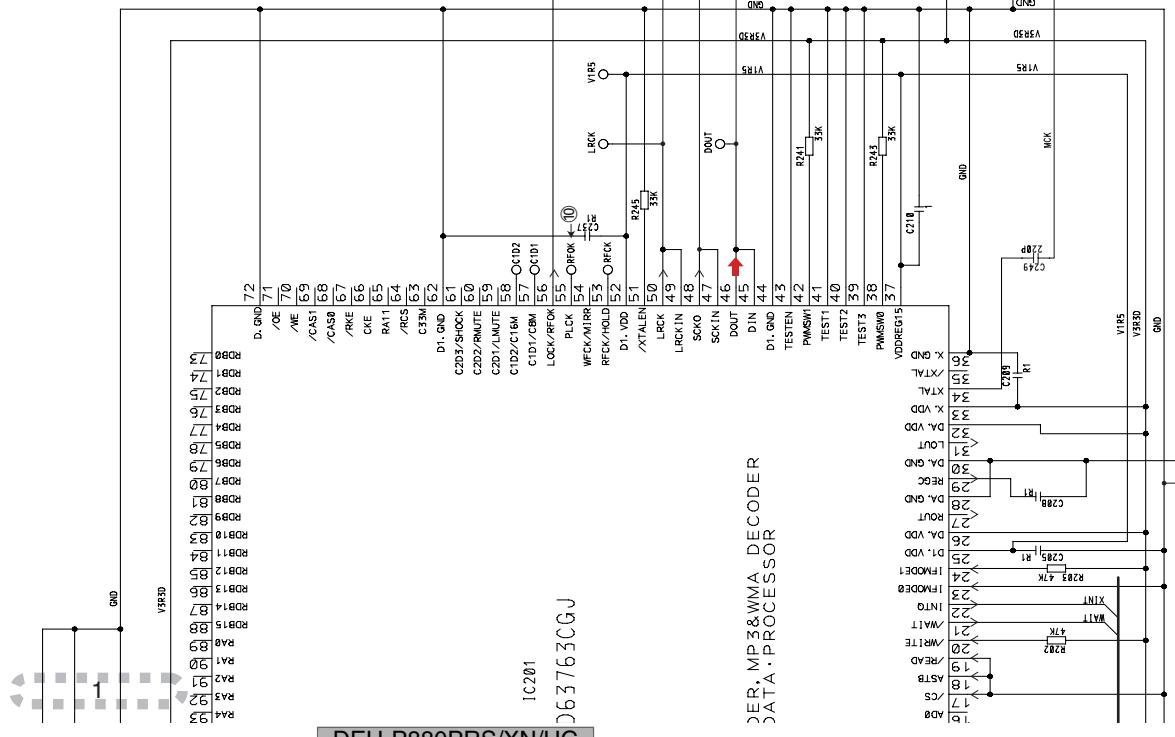

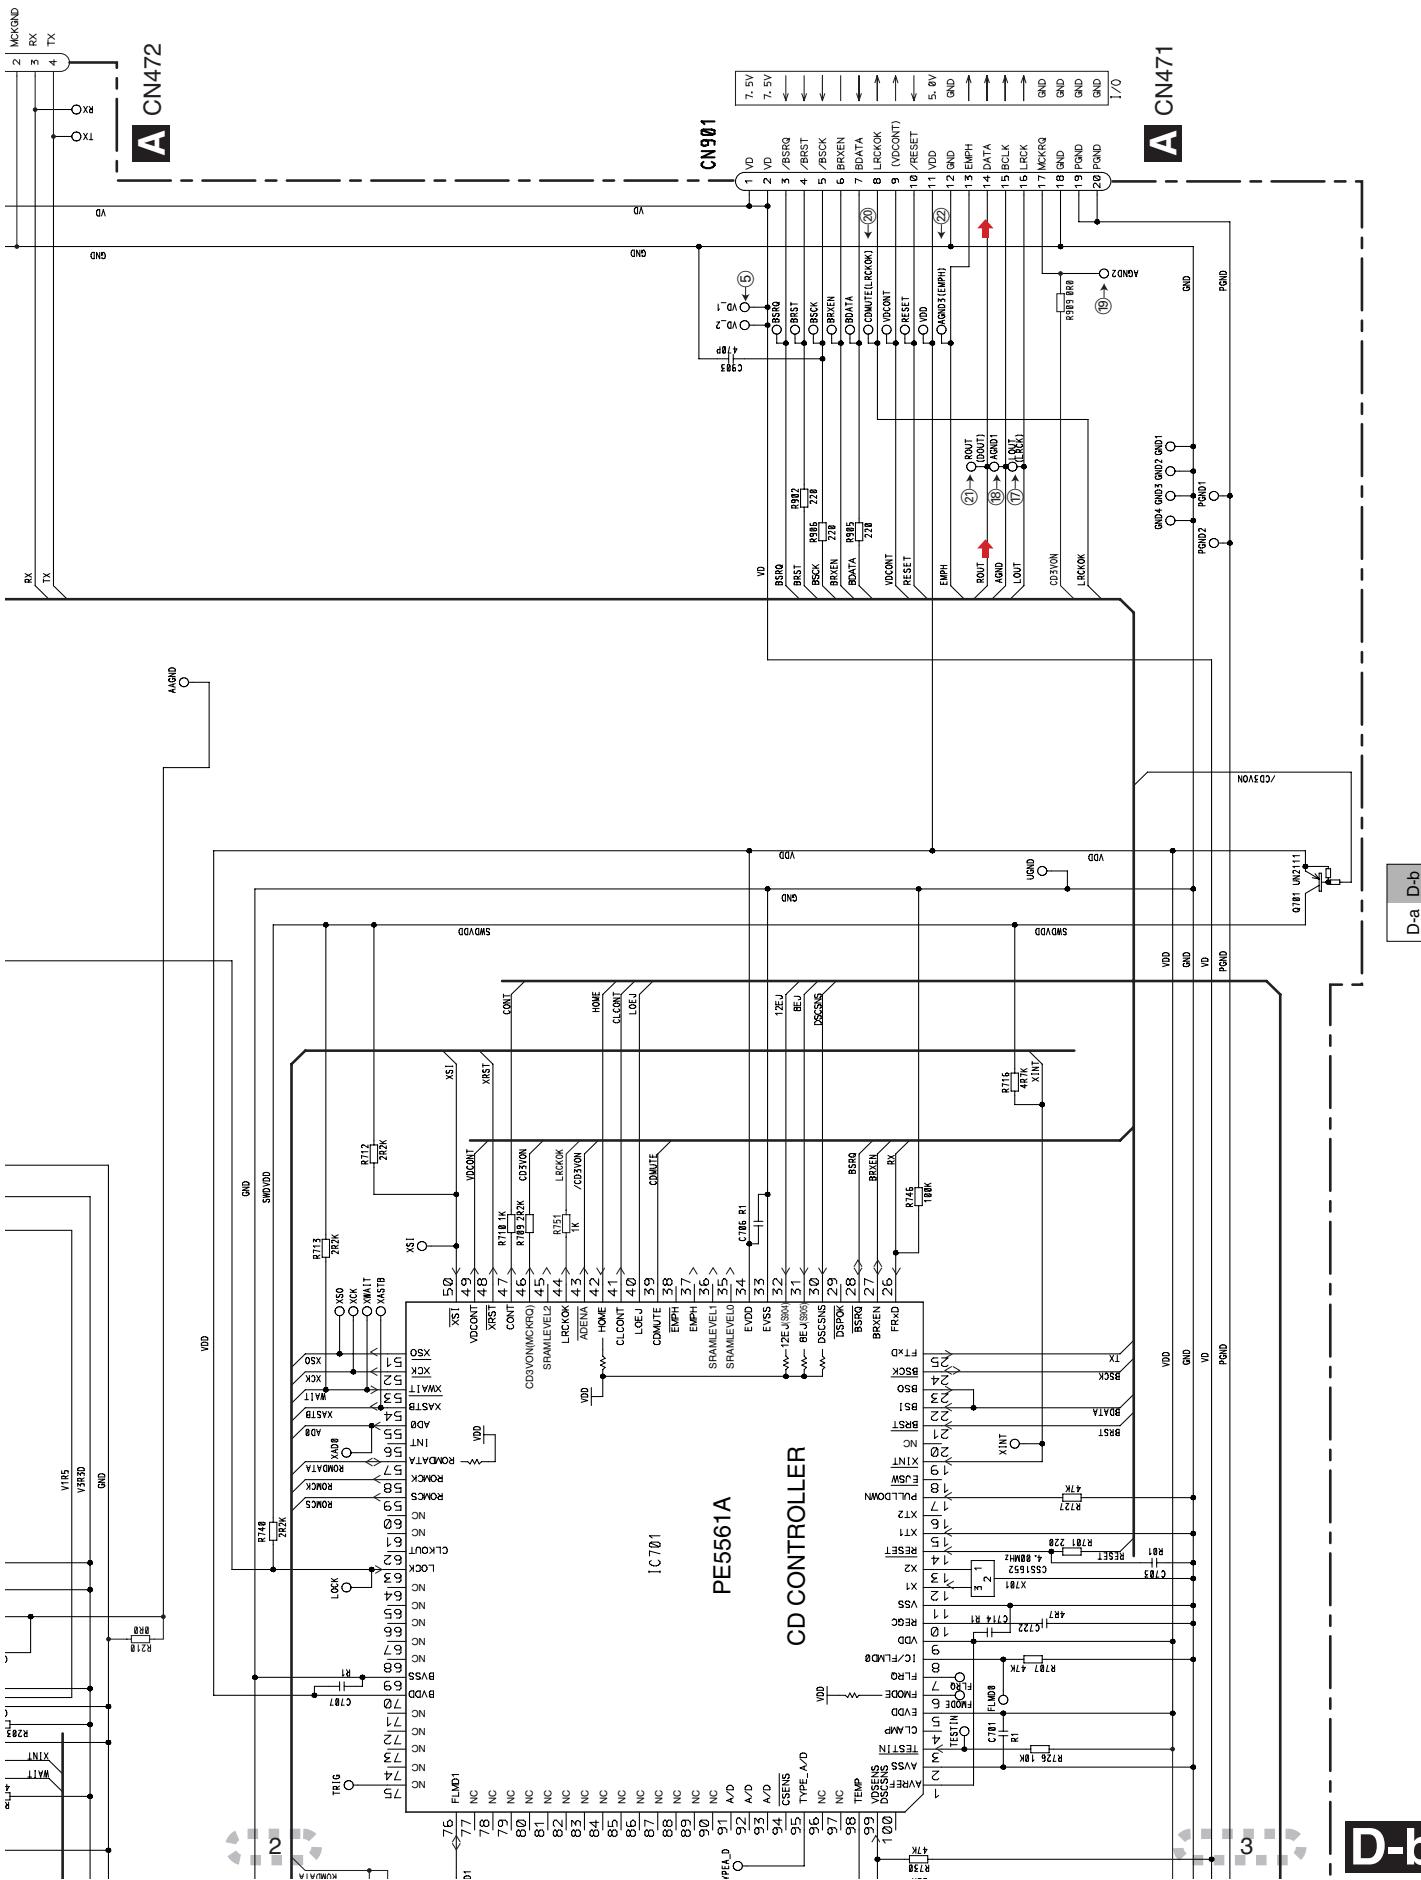

D-b


● Waveforms

Note : 1. The encircled numbers denote measuring points in the circuit diagram.
 2. Reference voltage REFO1(1.65 V)

A


① DSCSNS 5 V/div 500 ms/div
 ② 8SNS 5 V/div
 ③ 12SNS 5 V/div

12 cm CD Loading operation

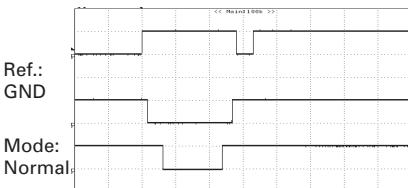


① DSCSNS 5 V/div 500 ms/div
 ④ CLCONT 5 V/div
 ⑤ VD 10 V/div

12 cm CD Loading operation

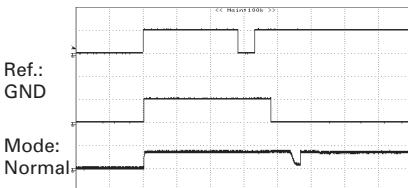

① DSCSNS 5 V/div 500 ms/div
 ② 8SNS 5 V/div
 ③ 12SNS 5 V/div


8 cm CD Loading operation

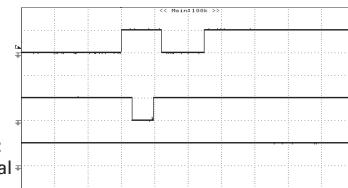

B


⑥ SIN 1 V/div 1 s/div
 ⑦ CIN 500 mV/div
 ⑧ TIN 500 mV/div

12 cm CD-DA setup operation after loading

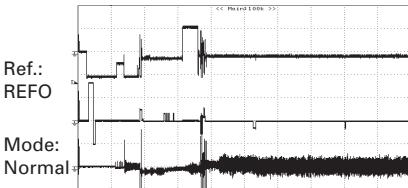


⑥ SIN 1 V/div 1 s/div
 ⑦ CIN 500 mV/div
 ⑧ TIN 500 mV/div

12 cm CD-ROM(1 session) setup operation after loading

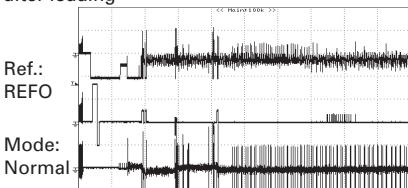

⑥ SIN 1 V/div 1 s/div
 ⑦ CIN 500 mV/div
 ⑧ TIN 500 mV/div


12 cm CD-ROM(3 sessions) setup operation after loading

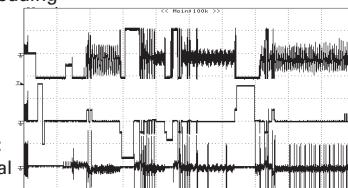

C


⑨ FIN 200 mV/div 500 ms/div
 ⑩ RFOK 2 V/div
 ⑥ SIN 2 V/div

12 cm CD-DA Source On setup operation

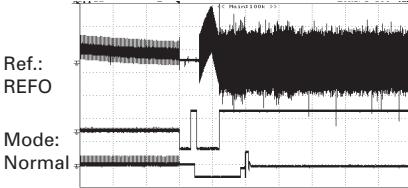


⑪ TE 500 mV/div 200 ms/div
 ⑫ FE 500 mV/div

Source On setup operation

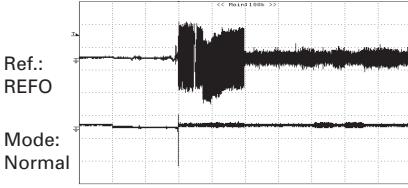

⑫ FE 500 mV/div 20 ms/div
 ⑨ FIN 500 mV/div
 ⑪ TE 500 mV/div
 ⑧ TIN 500 mV/div


CD-DA Play operation

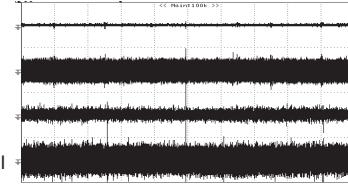

D


⑫ FE 500 mV/div 20 ms/div
 ⑨ FIN 500 mV/div
 ⑪ TE 500 mV/div
 ⑧ TIN 500 mV/div

CD-ROM play operation(Regular track Jump)

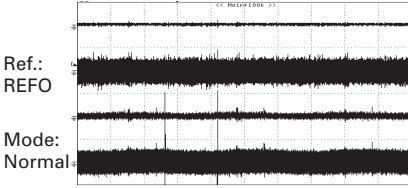


⑬ MDX 2 V/div 50 ms/div
 ⑥ SIN 200 mV/div

Spindle waveform during play operation

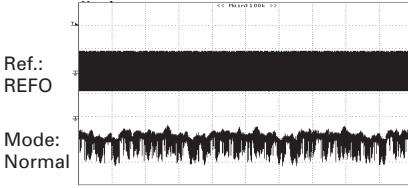



⑬ MDX 2 V/div 5 μ s/div
 ⑥ SIN 500 mV/div

Spindle waveform during play operation (Wider)

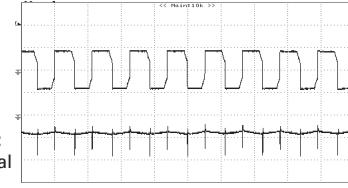

E

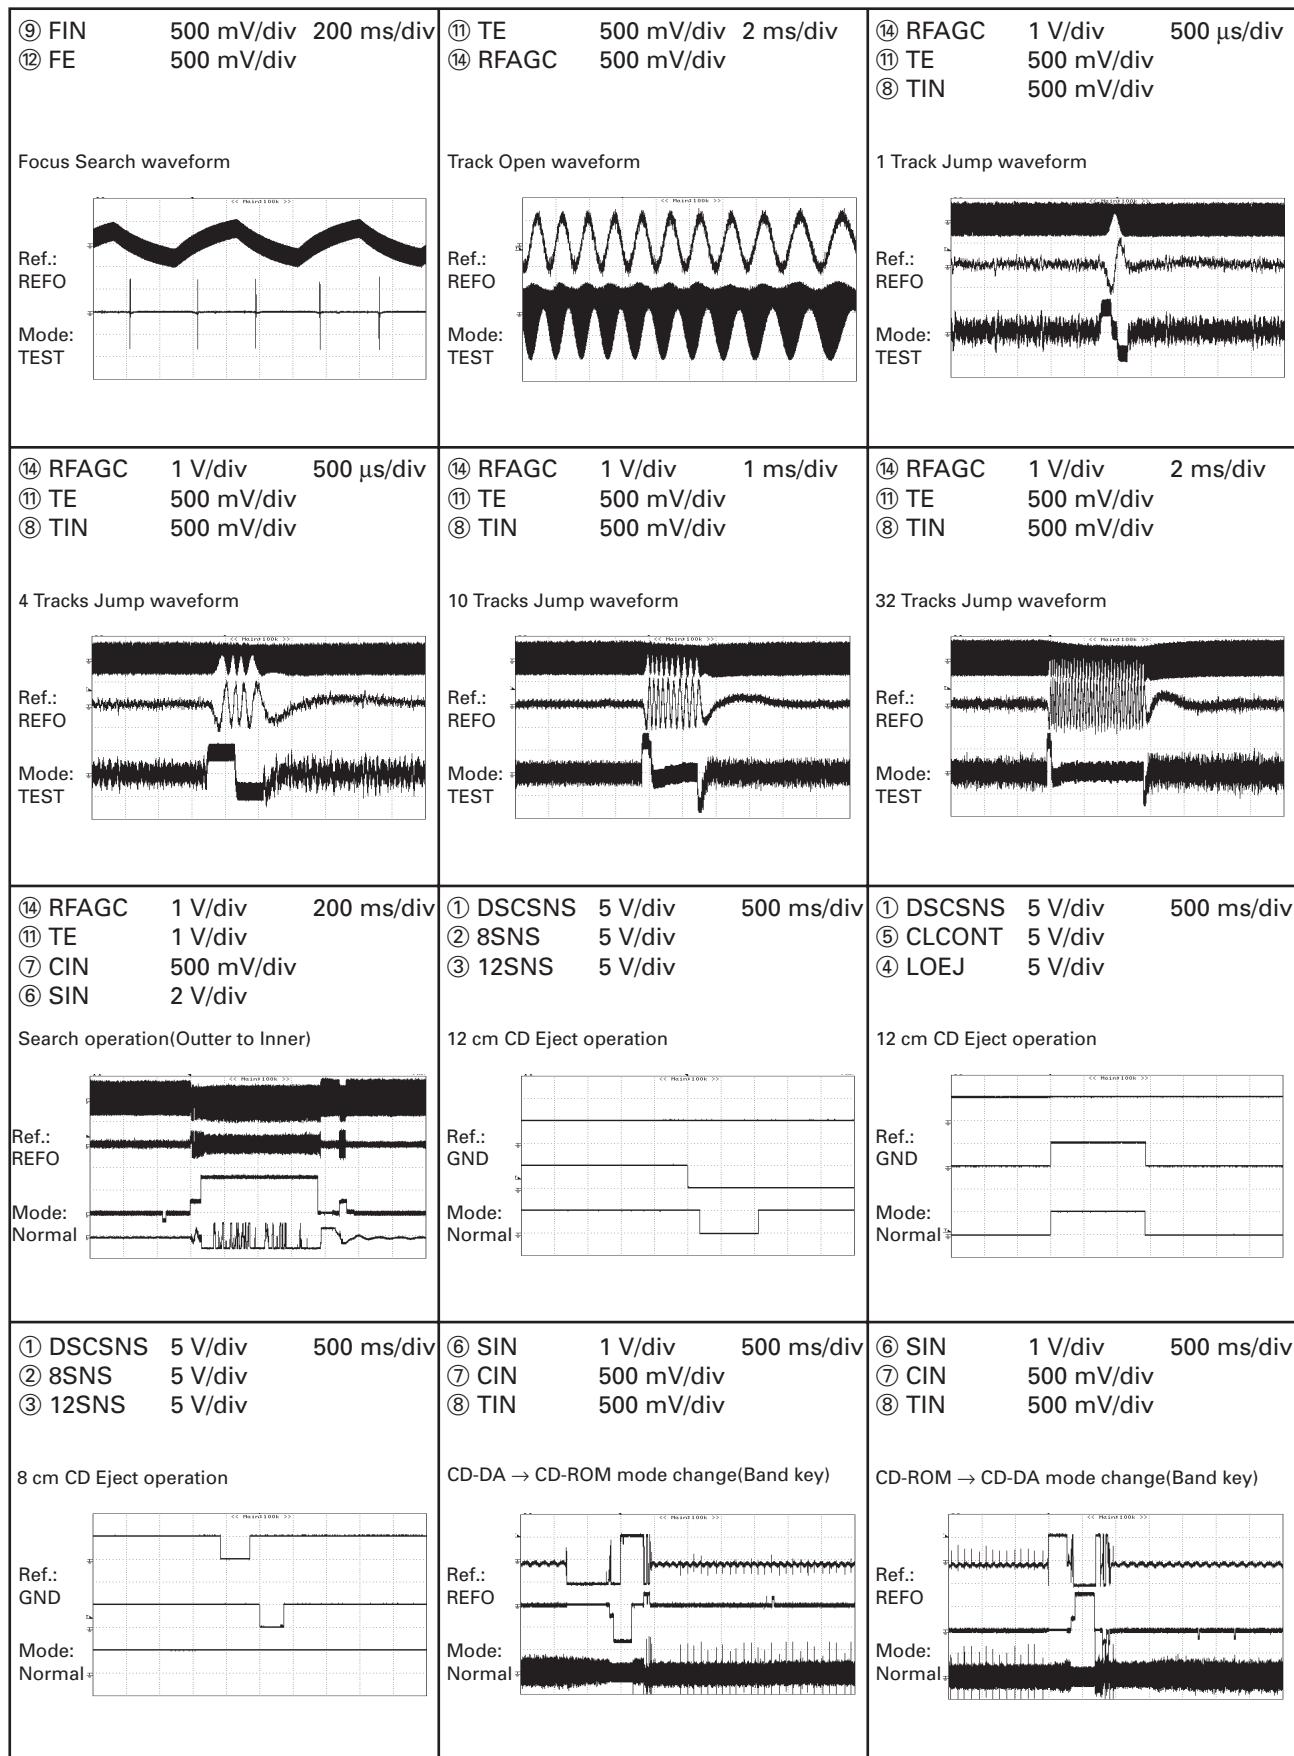

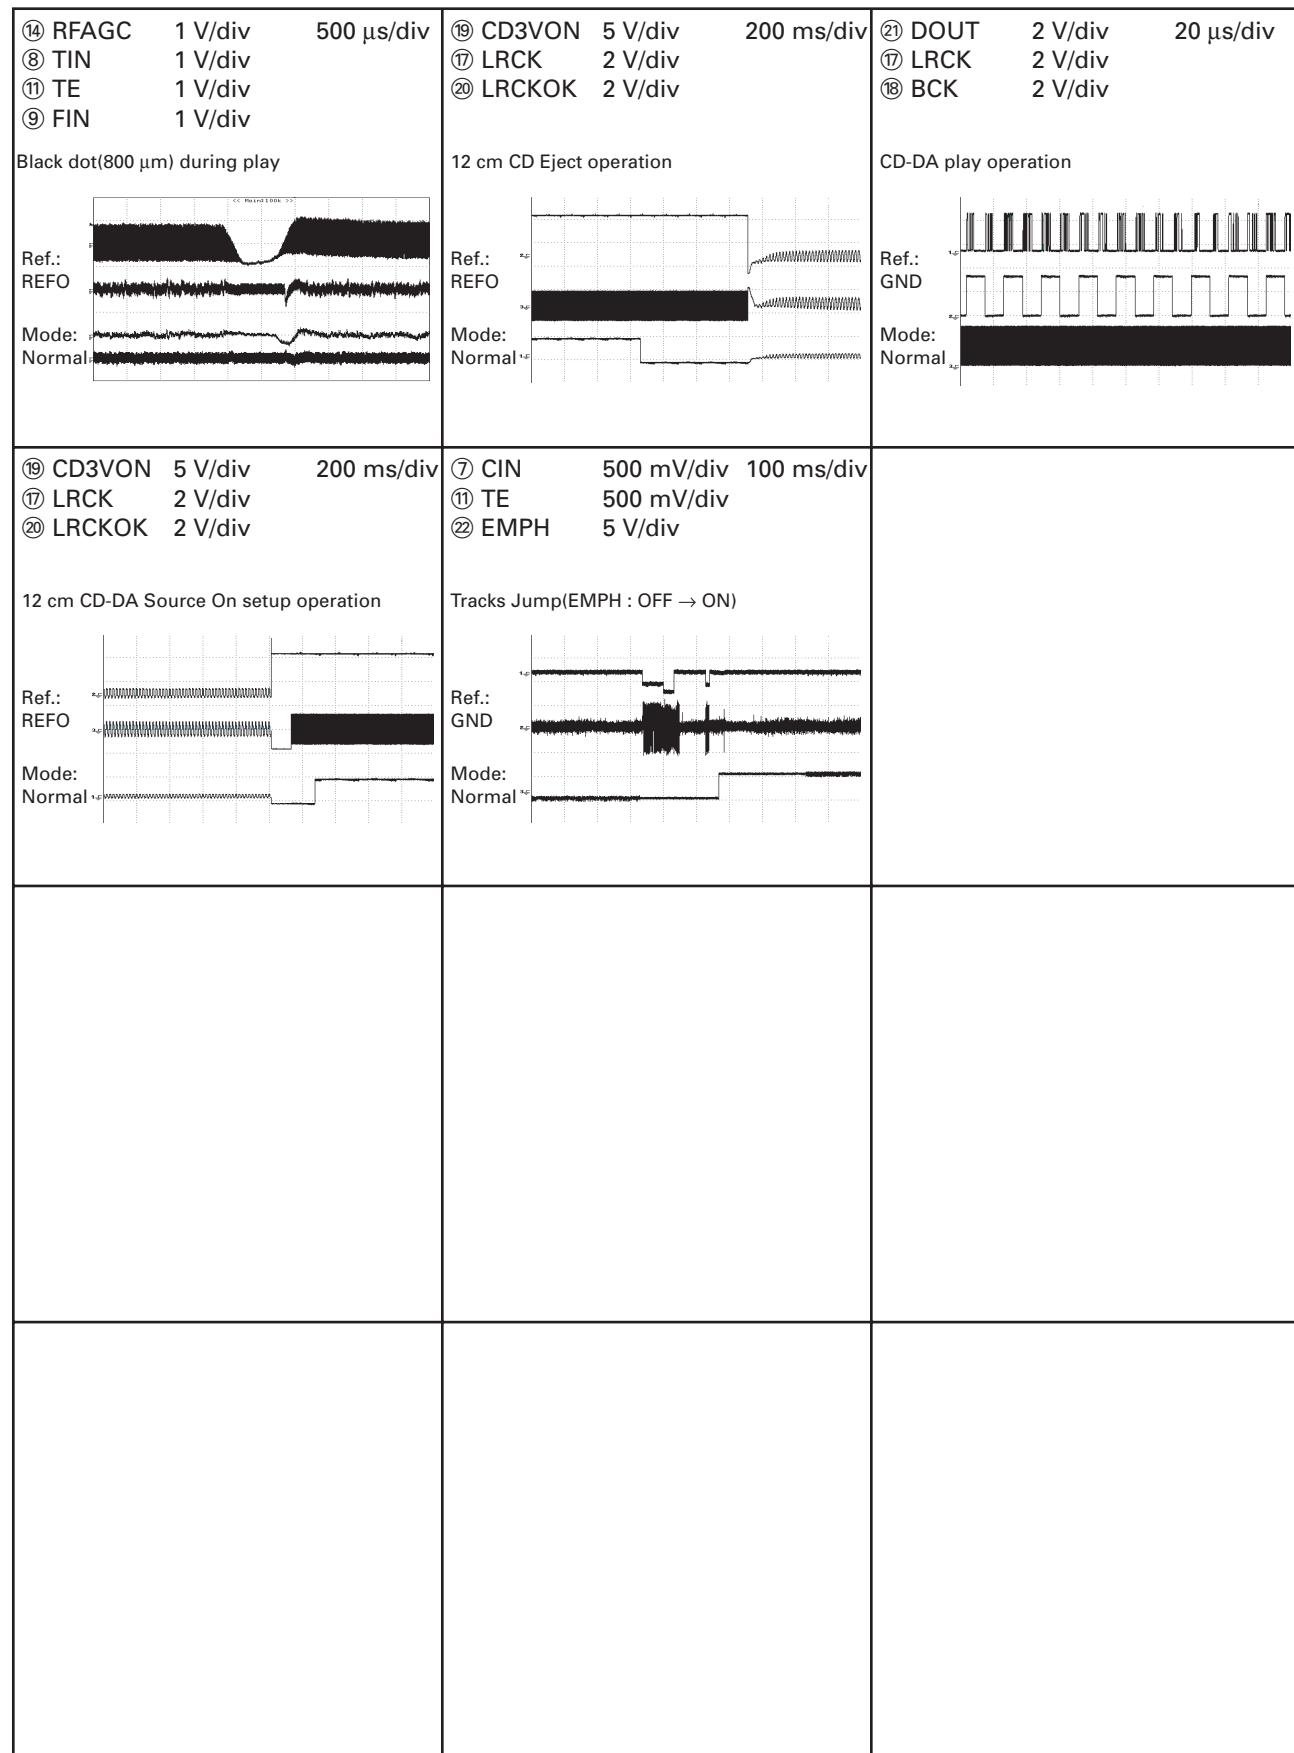

A

B

C

D

E

F

4. PCB CONNECTION DIAGRAM

4.1 TUNER AMP UNIT

1

2

3


4

A NOTE FOR PCB DIAGRAMS

1.The parts mounted on this PCB include all necessary parts for several destination.

For further information for respective destinations, be sure to check with the schematic diagram.

2.Viewpoint of PCB diagrams

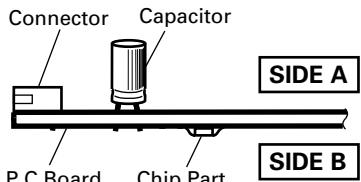


A TUNER AMP UNIT

C


D

E

F

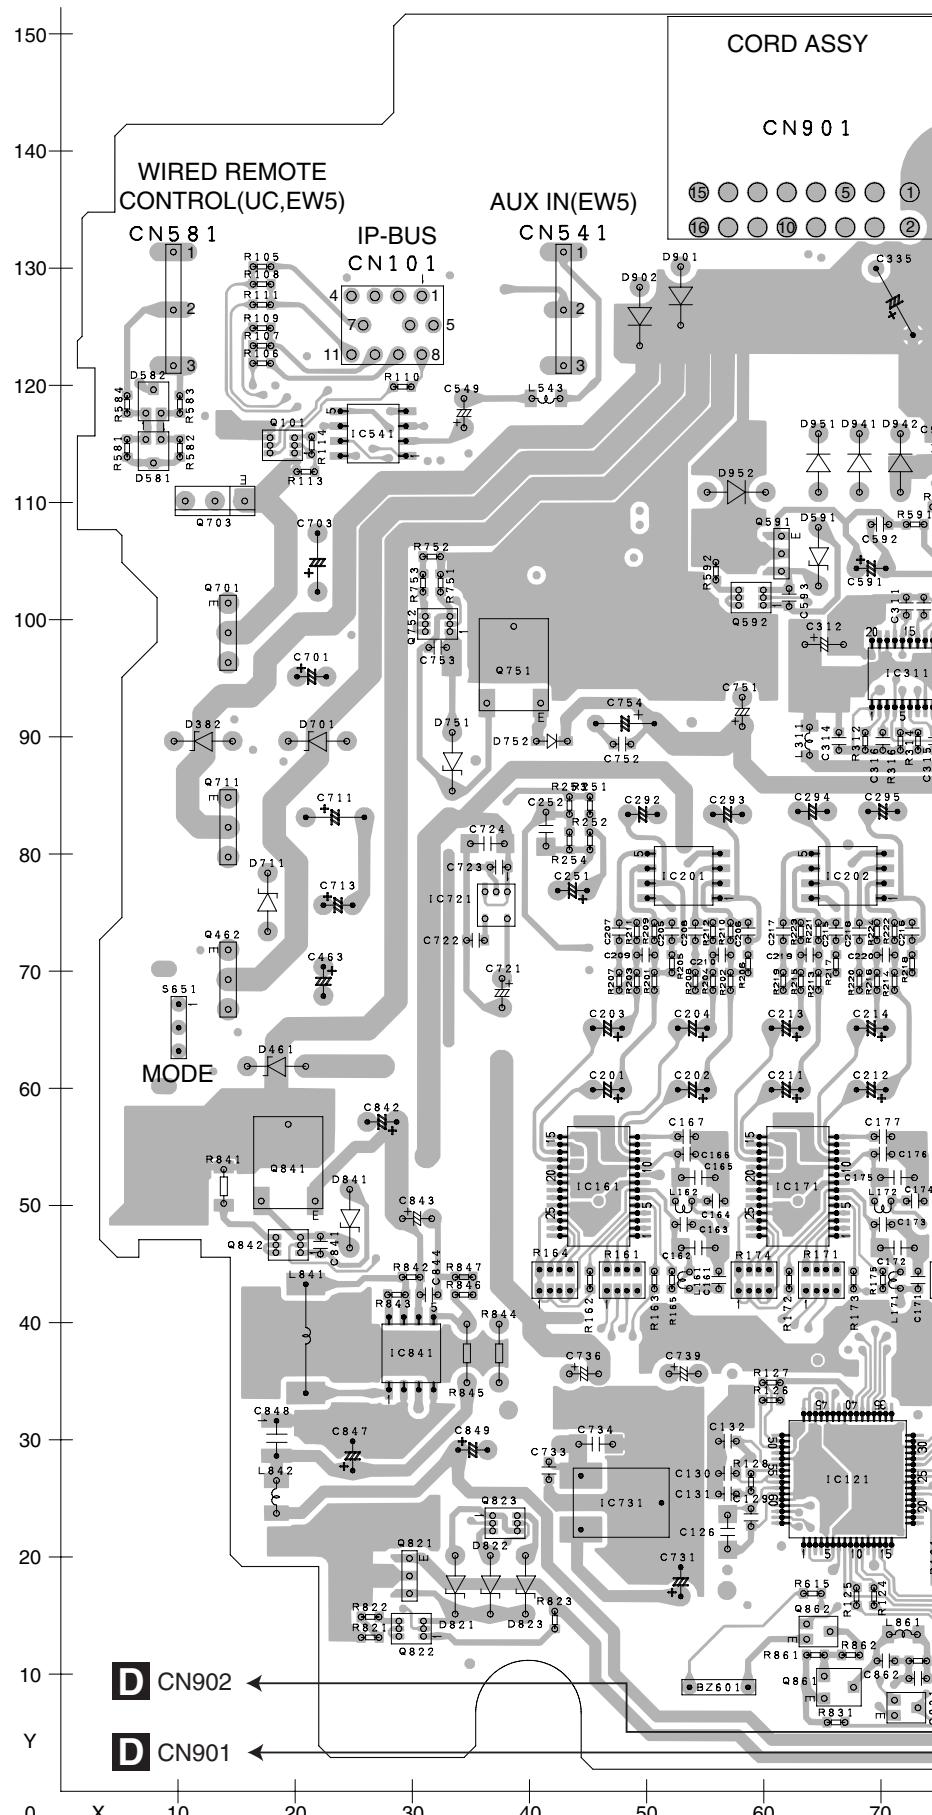

DEH-P880PRS/XN/UC

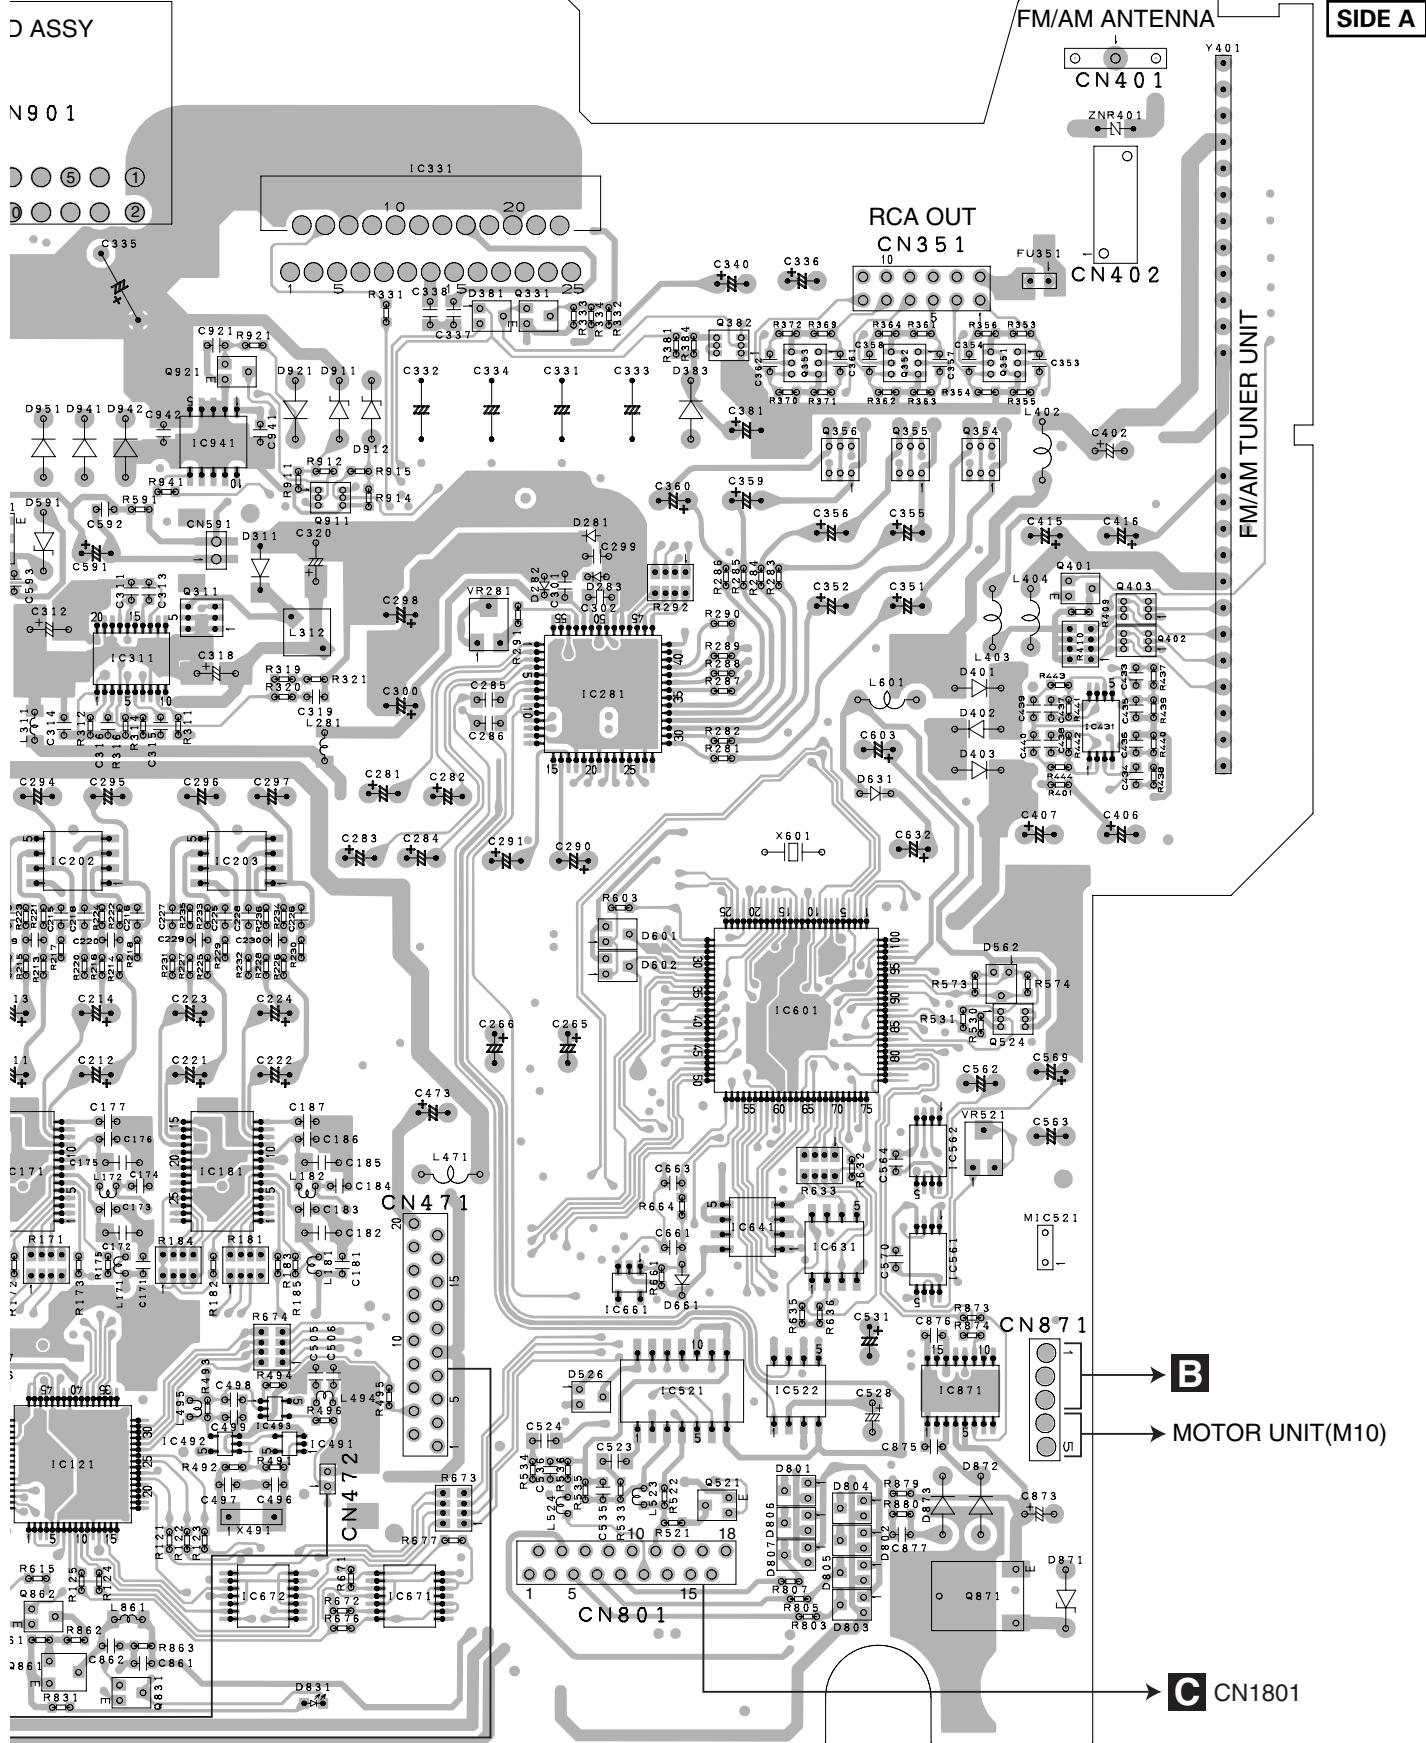

5

6

7

8

5

6

7

8

1


2

3

4

A

A TUNER AMP UNIT

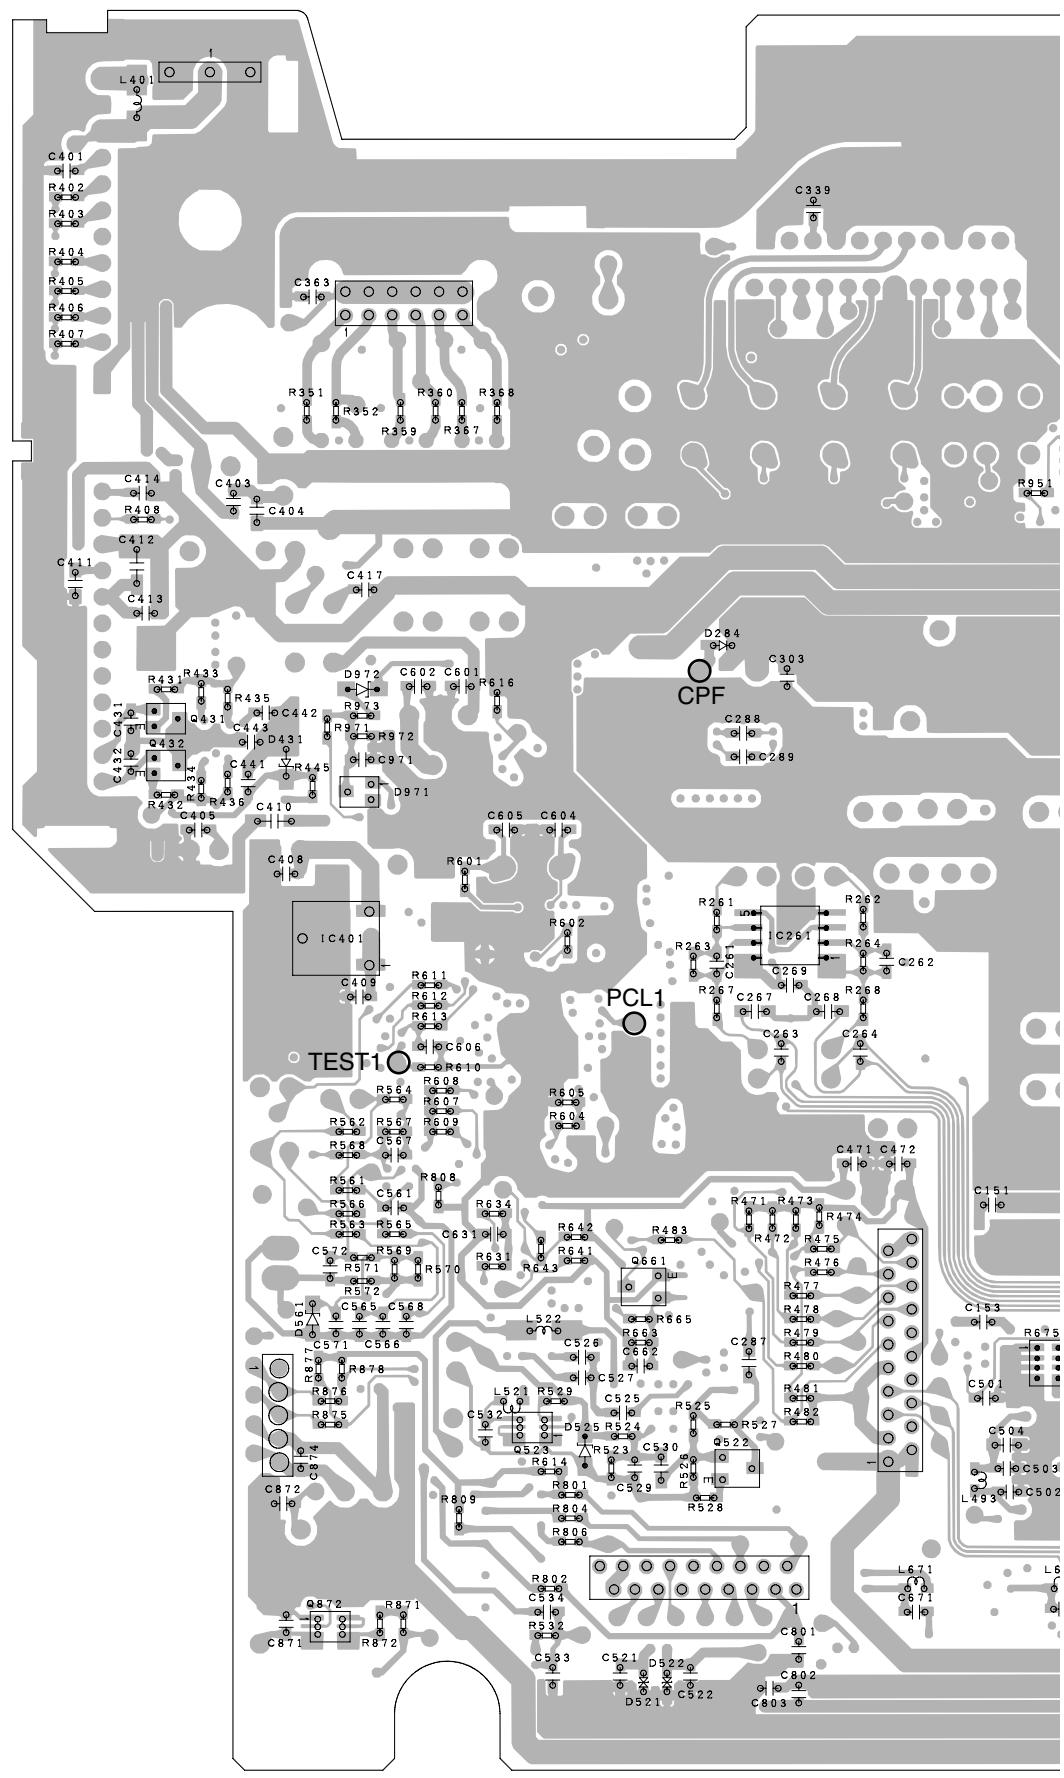

1

2


3

4

A

54

DEH-P880PRS/XN/UC

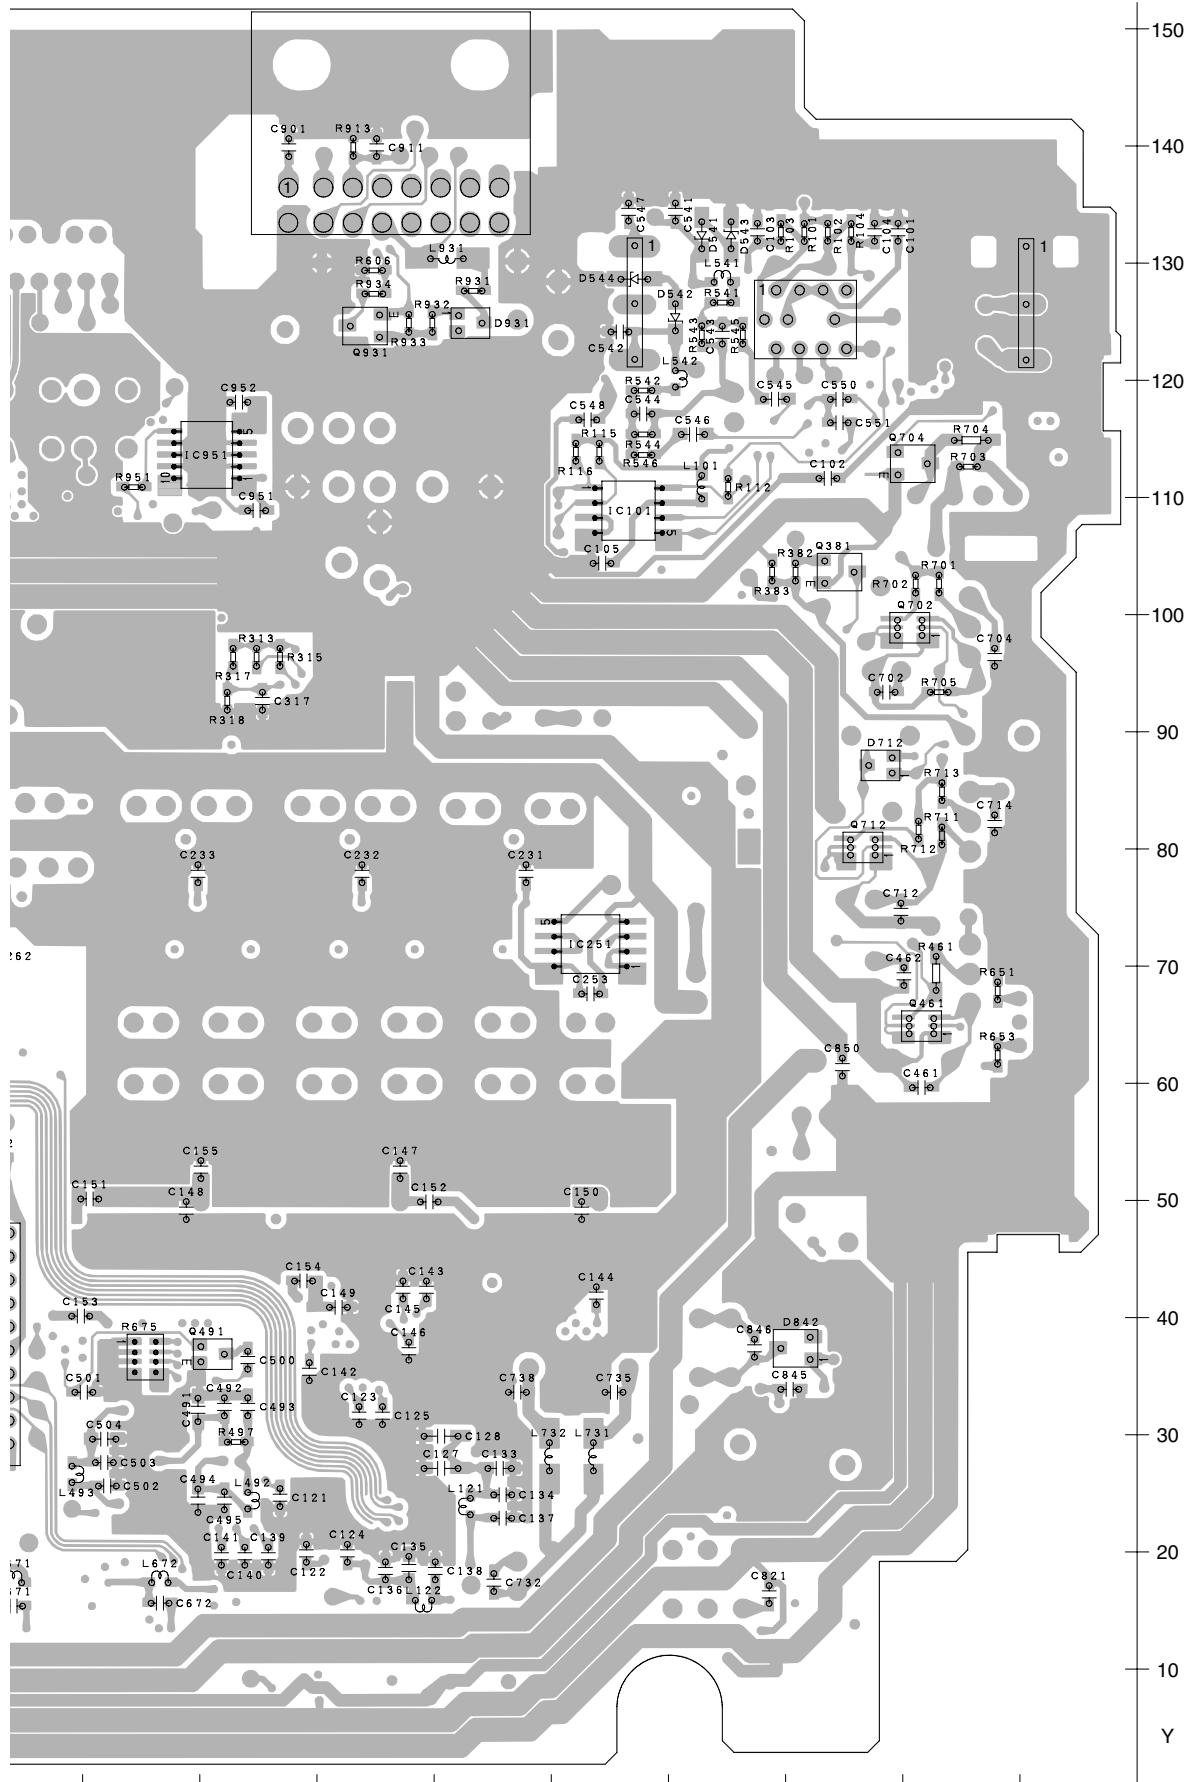

4.2 KEYBOARD UNIT

A

C KEYBOARD UNIT

B

C

D

E

F


C

1

2


3

4

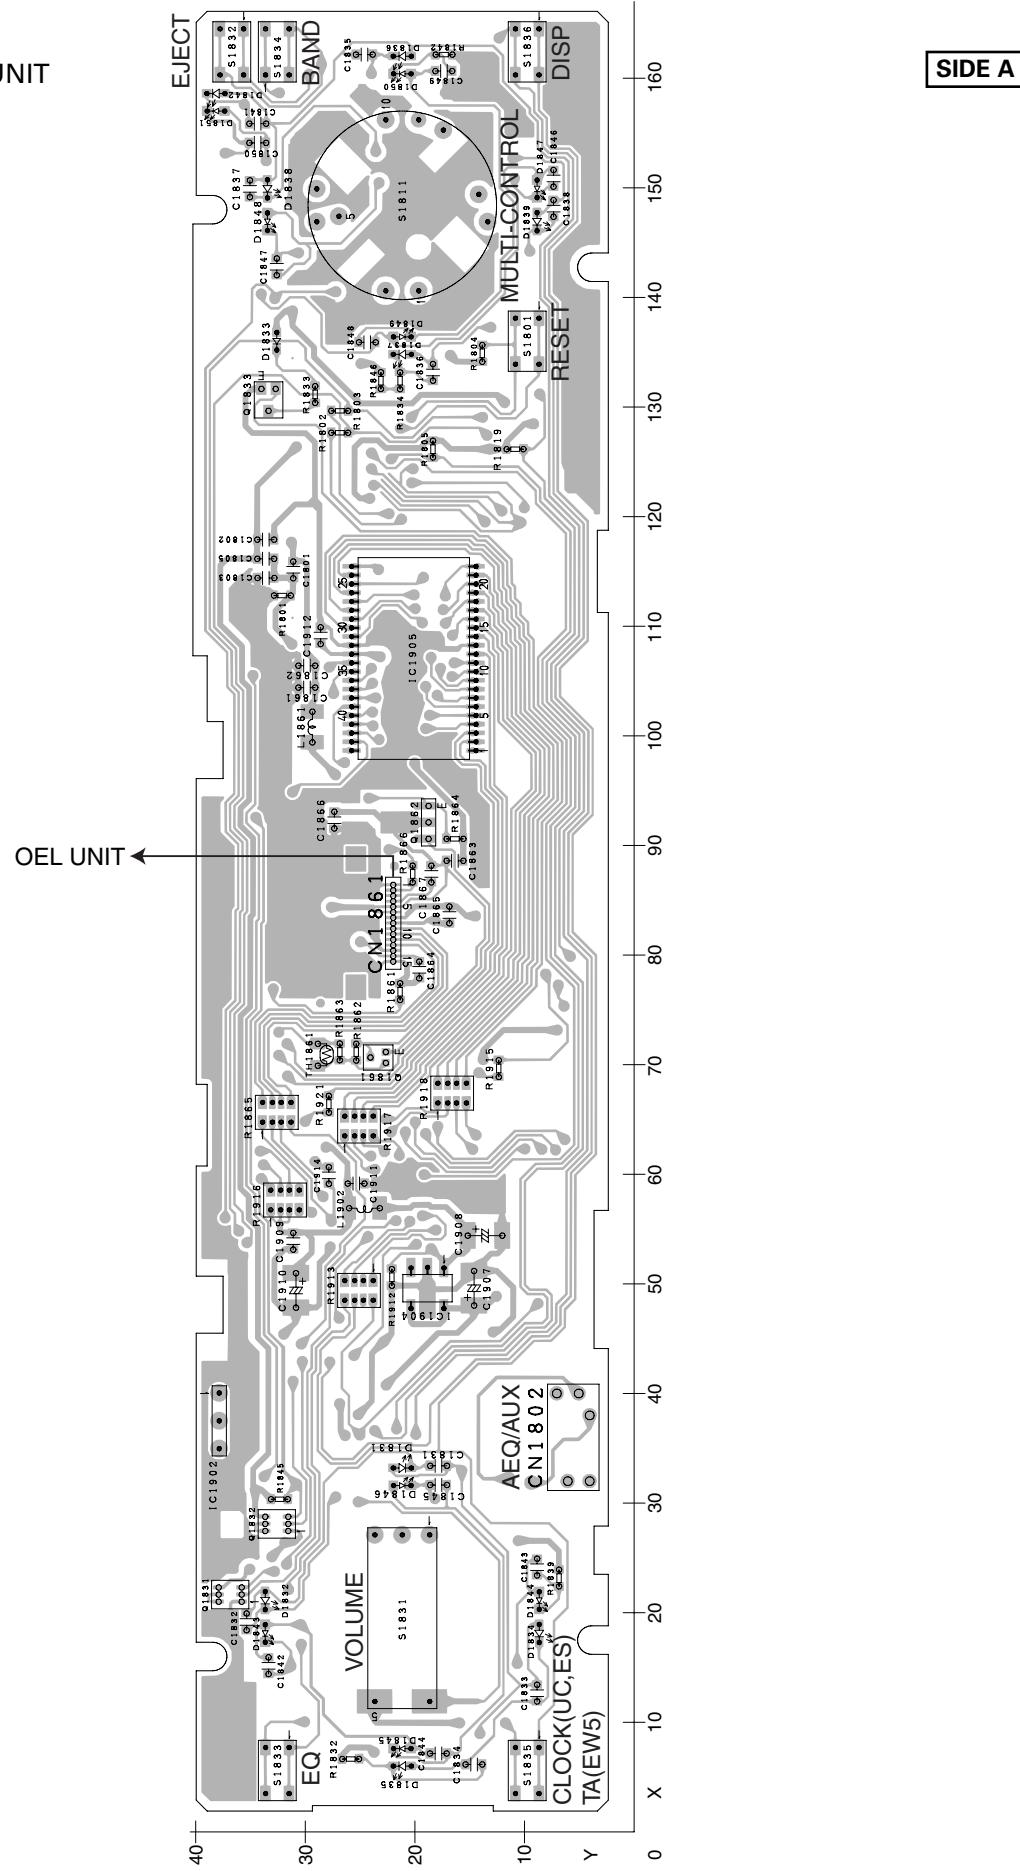

C KEYBOARD UNIT

SIDE B

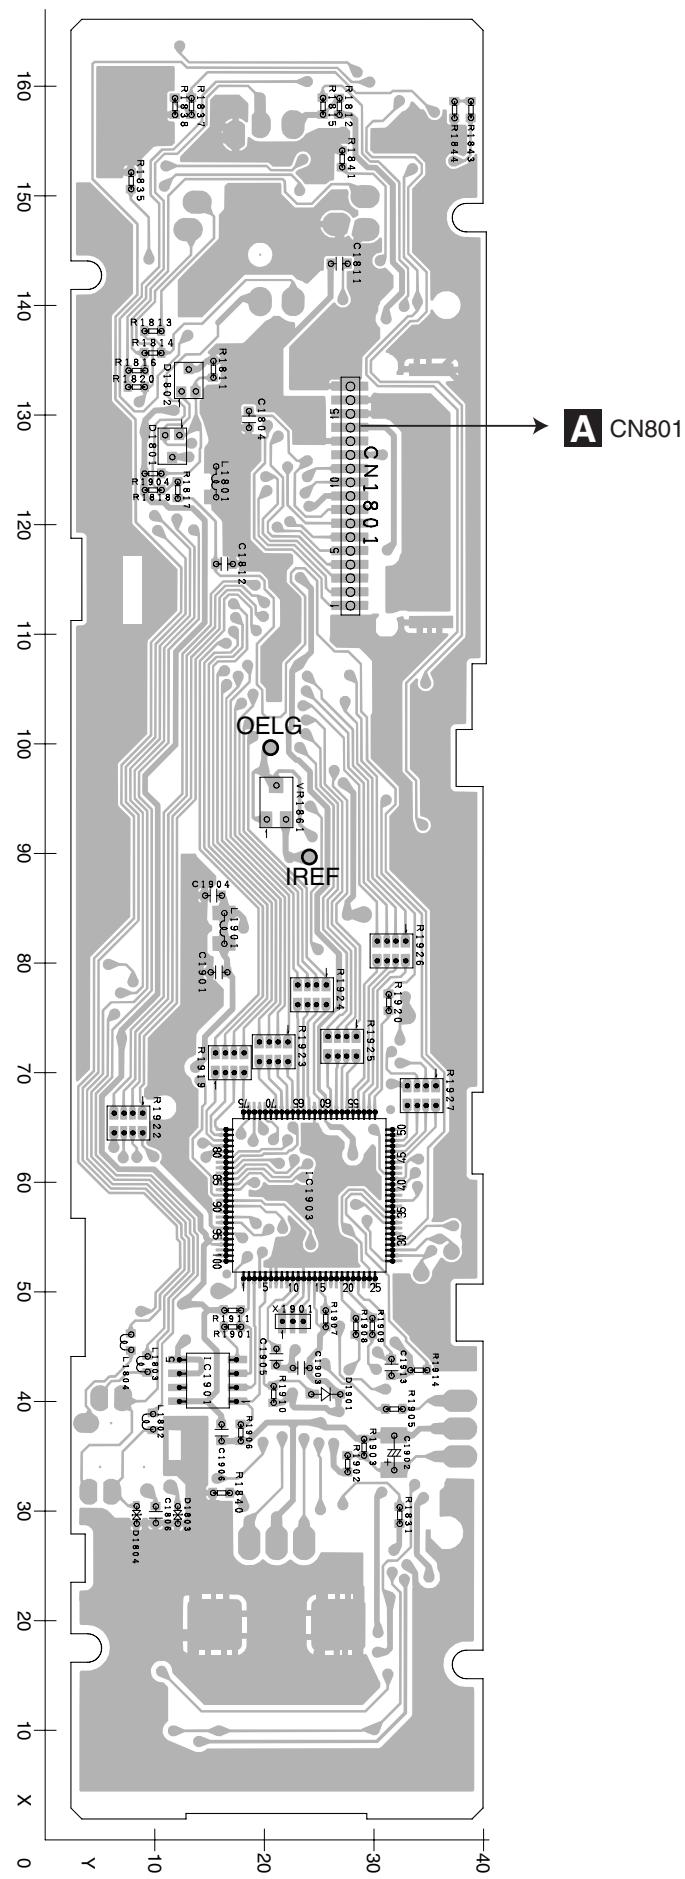

4.3 CD CORE UNIT(S10.5COMP1)

D CD CORE UNIT(S10.5COMP1)

SIDE A

A

B

C

D

E


F

58

DEH-P880PRS/XN/UC

A

PICKUP UNIT(P10.5)(SERVICE)

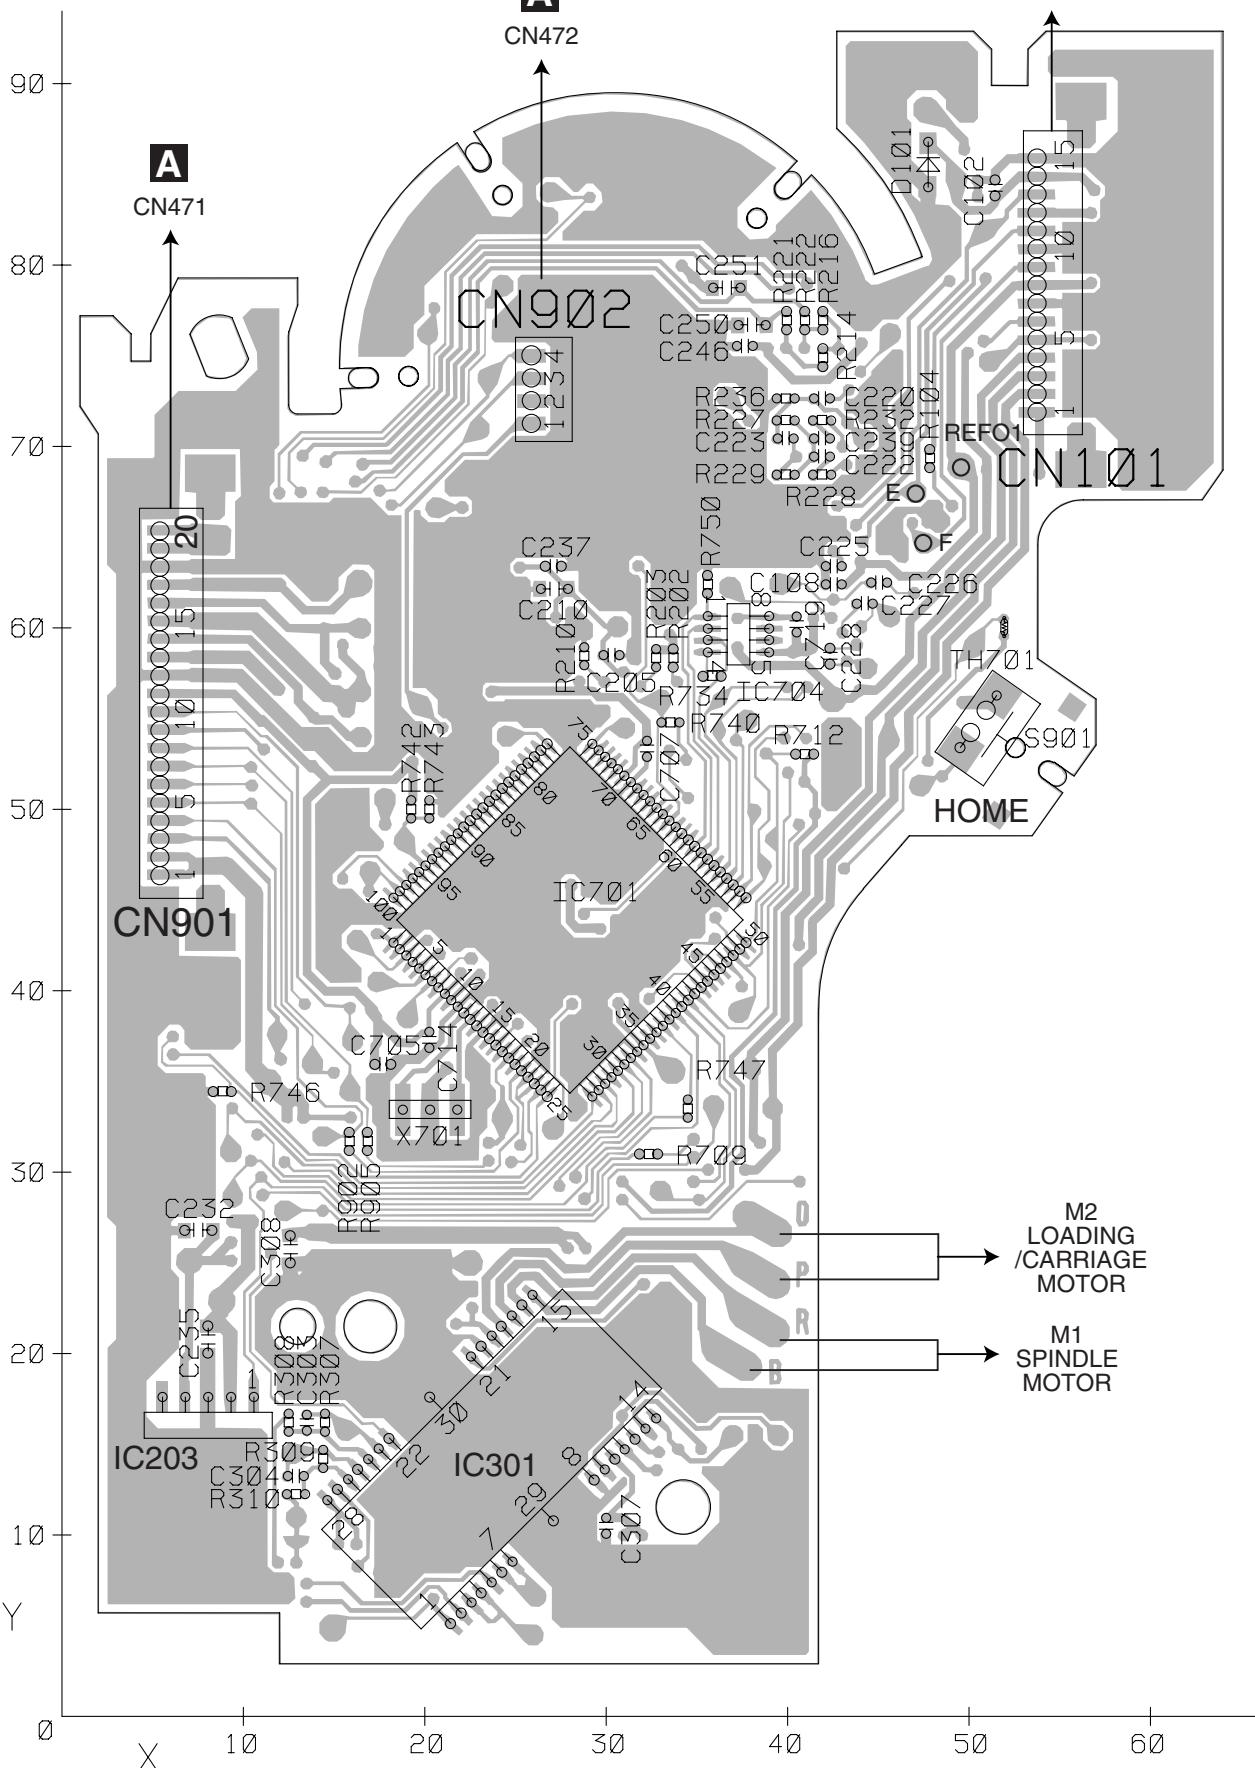

1


2

3

4

D CD CORE UNIT(S10.5COMP1)


SIDE B

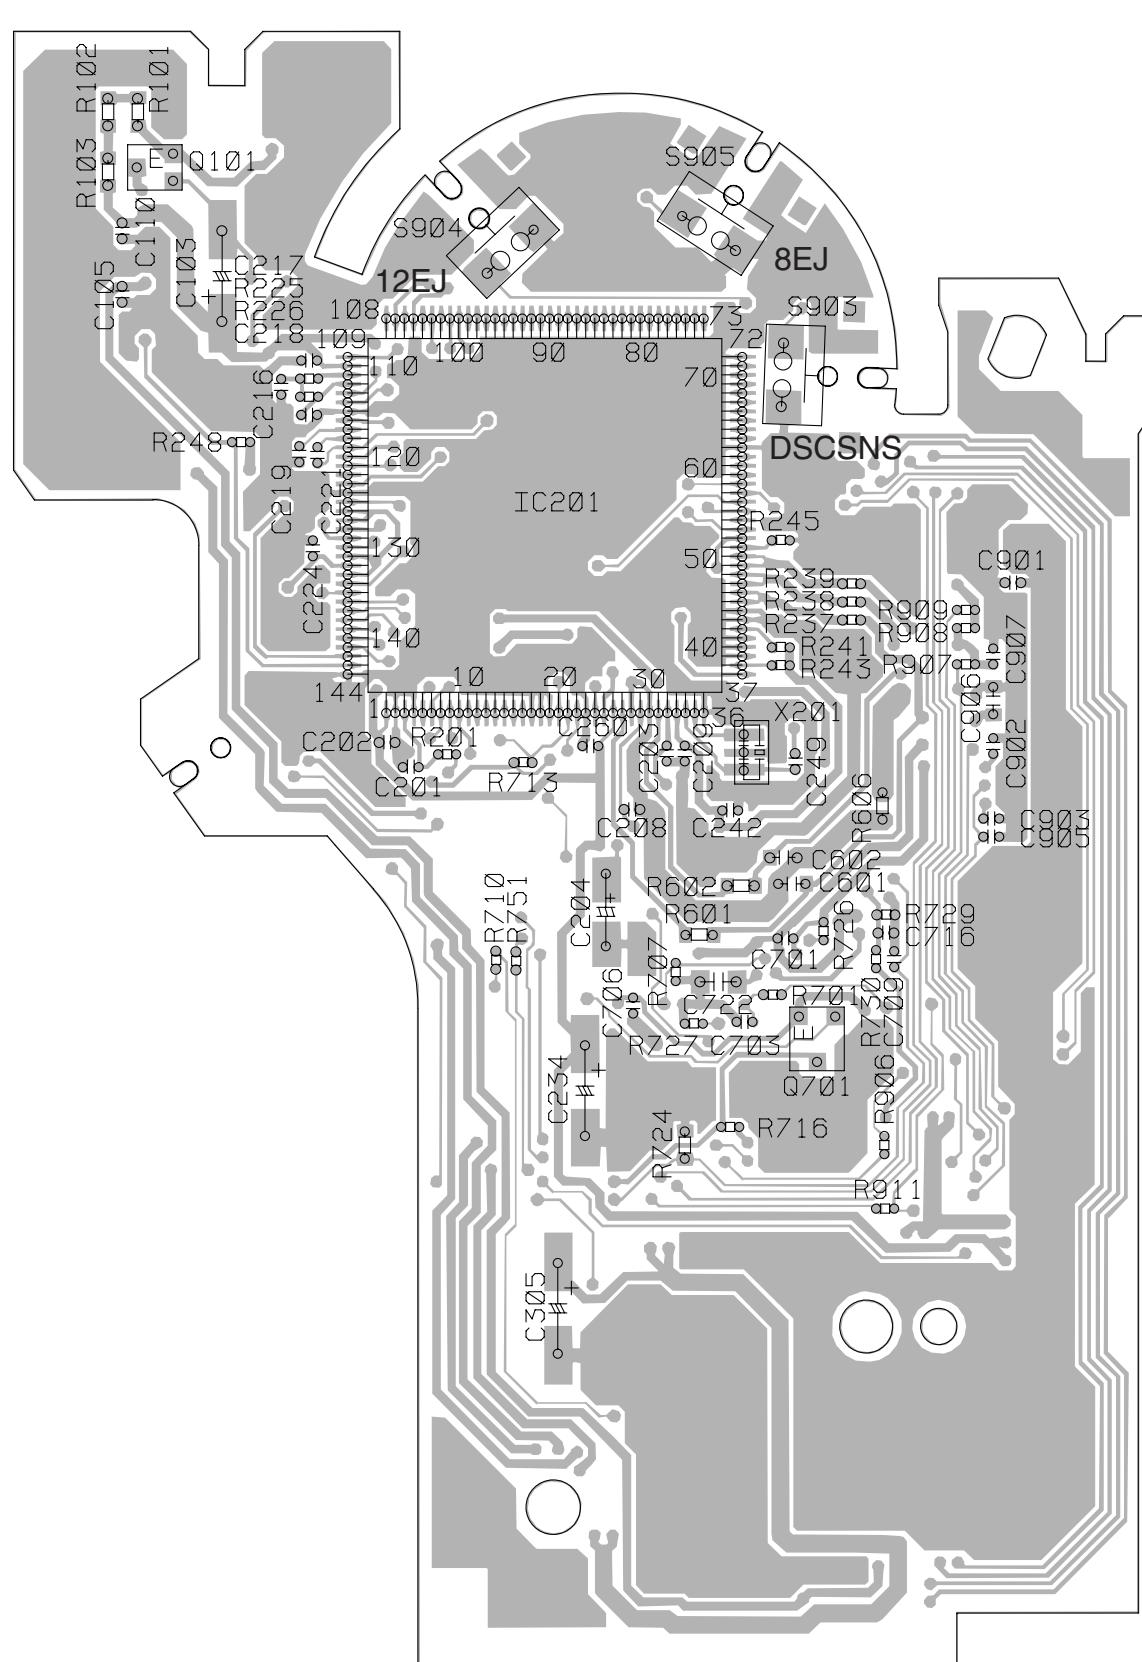

1 2 3 4
4.4 SWITCH UNIT

A

B SWITCH UNIT

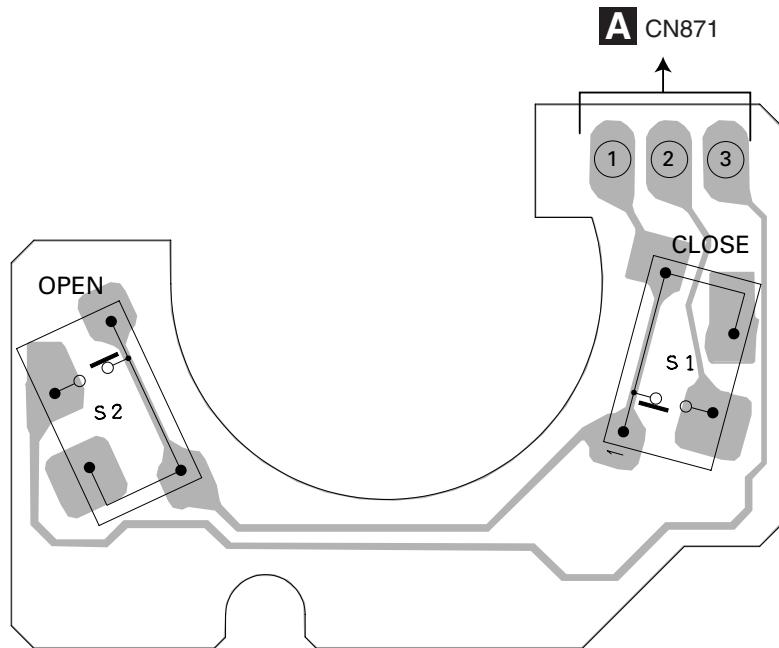

B

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J, RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Unit Number: CWN1478(UC model)		IC 492 (A,80,28) IC	TC7S04FU
		IC 493 (A,84,31) IC	TC7SH08FUS1
Unit Number: CWN1479(ES model)		IC 521 (A,119,33) IC	TC4066BF
		IC 522 (A,129,33) IC	BA3121F
Unit Name : Tuner Amp Unit		IC 601 (A,129,65) IC	PEG178A
Unit Number: CWN1477(EW5 model)		IC 631 (A,132,45) IC	BR25L320F-W
Unit Name : Tuner Amp Unit		IC 661 (A,115,42) IC	S-80835CNMC-B8U
Unit Number: CWS1389		IC 671 (A,96,15) IC	TC74VHCT08AFTS1
Unit Name : Switch Unit		IC 672 (A,83,15) IC	TC74VHC08FTS1
Unit Number:		IC 721 (A,37,76) IC	NJM2872F05
Unit Name : Keyboard Unit		IC 731 (A,49,25) IC	NJM2885DL1-33
Unit Number: CWX3381		IC 841 (A,30,37) IC	NJM2360M
Unit Name : CD Core Unit(S10.5COMP1)		IC 871 (A,143,33) IC	BA6288FS
		IC 941 (A,79,114) IC	TPD1018F
		Q 101 (A,19,115) Transistor	UMF23N
A		Q 331 (A,107,125) Transistor	DTC124EU
Unit Number: CWN1478(UC model)		Q 351 (A,147,121) Transistor	IMH23
Unit Number: CWN1479(ES model)		Q 352 (A,138,121) Transistor	IMH23
Unit Name : Tuner Amp Unit		Q 353 (A,130,121) Transistor	IMH23
		Q 354 (A,145,112) Transistor	IMH23
MISCELLANEOUS		Q 355 (A,139,112) Transistor	IMH23
IC 101 (B,43,109) IC	HA12241FP	Q 356 (A,133,112) Transistor	IMH23
IC 121 (A,67,27) IC	AK7732VT	Q 381 (B,25,104) Transistor	2SC3052-12
IC 161 (A,46,52) IC	PCM1793DB	Q 382 (A,123,122) Transistor	UMD3N
IC 171 (A,63,52) IC	PCM1793DB	Q 431 (B,160,92) Transistor	2SA1576
IC 181 (A,80,52) IC	PCM1793DB	Q 432 (B,160,88) Transistor	2SA1576
IC 201 (A,53,78) IC	NJM2114M	Q 461 (B,18,65) Transistor	UMD3N
IC 202 (A,67,78) IC	NJM2114M	Q 462 (A,14,69) Transistor	2SD2396
IC 203 (A,81,78) IC	NJM2114M	Q 521 (A,122,23) Transistor	DTC114EU
IC 251 (B,47,72) IC	NJM4558MD	Q 522 (B,111,28) Transistor	2SC3052-12
IC 261 (B,107,73) IC	NJM4558MD	Q 523 (B,129,31) Transistor	UMD2N
IC 281 (A,112,92) IC	PM9009A	Q 524 (A,147,65) Transistor	UMD2N
IC 331 (A,98,134) IC	PAL007B	Q 591 (A,60,106) Transistor	2SD1767
IC 401 (B,147,73) IC	NJM2885DL1-33	Q 592 (A,59,102) Transistor	UMD3N
IC 431 (A,155,90) IC	NJM4558V	Q 661 (B,119,43) Transistor	2SC3052-12
IC 491 (A,86,28) IC	TC7SU04FU	Q 701 (A,14,99) Transistor	2SD2396
		Q 702 (B,19,99) Transistor	UMD3N
		Q 711 (A,14,82) Transistor	2SD2396
		Q 712 (B,23,80) Transistor	UMD3N
		Q 751 (A,39,98) Transistor	2SD1760F5
		Q 752 (A,32,100) Transistor	UMD3N

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.	
A	Q 821	(A,28,18) Transistor	2SD1767	D 921	(A,86,117) Diode	
	Q 822	(A,30,14) Transistor	UMD3N	D 931	(B,57,125) Diode	
	Q 823	(A,38,23) Transistor	UMH1N	D 941	(A,68,113) Diode	
	Q 831	(A,72,7) Transistor	DTC114EU	D 942	(A,72,113) Diode	
	Q 841	(A,19,55) Transistor	2SD1760F5	D 971	(B,143,85) Diode Network	
B	Q 842	(A,19,47) Transistor	UMD3N	D 972	(B,143,94) Diode	
	Q 861	(A,66,9) Transistor	2SB710A	ZNR401	(A,156,141) Surge Protector	
	Q 862	(A,65,14) Transistor	DTC114EU	L 101	(B,37,111) Inductor	
	Q 871	(A,143,15) Transistor	2SD1760F5	L 121	(B,57,24) Inductor	
	Q 872	(B,146,14) Transistor	UMD3N	L 122	(B,61,16) Inductor	
	Q 911	(A,89,109) Transistor	UMX1N	L 161	(A,54,44) Inductor	
	Q 921	(A,81,120) Transistor	DTC114EU	L 162	(A,53,50) Inductor	
	Q 931	(B,66,125) Transistor	2SA1235A-12	L 171	(A,72,44) Inductor	
	D 281	(A,111,106) Diode	RB520S-30	L 172	(A,70,50) Inductor	
	D 282	(A,107,102) Diode	1SS400	L 181	(A,88,44) Inductor	
C	D 283	(A,112,102) Diode	RB521S-30	L 182	(A,87,50) Inductor	
	D 284	(B,112,98) Diode	RB521S-30	L 281	(A,89,88) Inductor	
	D 381	(A,103,125) Diode	DAN202U	L 401	(B,162,144) Chip Coil	
	D 382	(A,12,90) Diode	HZS9L(A2)	L 402	(A,150,113) Inductor	
	D 383	(A,120,117) Diode	1SS133	L 403	(A,146,99) Inductor	
	D 401	(A,144,93) Diode	1SR154-400	L 404	(A,149,99) Inductor	
	D 402	(A,144,89) Diode	1SR154-400	L 471	(A,99,51) Ferri-Inductor	
	D 403	(A,144,86) Diode	1SR154-400	L 492	(B,76,24) Inductor	
	D 431	(B,150,88) Diode	UDZS5R6(B)	L 493	(B,91,27) Inductor	
	D 461	(A,18,62) Diode	HZS7L(C3)	L 494	(A,89,32) Inductor	
D	D 521	(B,119,9) Diode	RSB6R8S	L 521	(B,130,33) Inductor	
	D 522	(B,117,9) Diode	RSB6R8S	L 522	(B,128,39) Inductor	
	D 525	(B,124,29) Diode	HZU3R9(B1)	L 523	(A,116,24) Inductor	
	D 526	(A,111,32) Diode	DAN202U	L 524	(A,109,23) Inductor	
	D 581	(A,8,114) Diode(UC)	DAN202U	L 601	(A,137,92) Ferri-Inductor	
E	D 582	(A,8,119) Diode(UC)	DAP202U	L 671	(B,96,17) Inductor	
	D 591	(A,65,105) Diode	HZS11L(B2)	L 672	(B,83,17) Inductor	
	D 631	(A,136,84) Diode	MA111	L 731	(B,46,28) Chip Coil	
	D 661	(A,119,42) Diode	MA111	L 732	(B,50,28) Chip Coil	
	D 701	(A,22,90) Diode	HZS9L(B2)	L 841	(A,21,39) Inductor	
F	D 711	(A,18,76) Diode	HZS9L(B3)	L 842	(A,18,25) Inductor	
	D 712	(B,22,87) Diode	DAN202U	L 931	(B,59,130) Inductor	
	D 751	(A,33,88) Diode	HZS6L(B3)	X 491	(A,82,22) Crystal Resonator 16.934 MHz	
	D 752	(A,42,90) Diode	RB551V-30	X 601	(A,129,79) Crystal Resonator 15.000 MHz	
	D 801	(A,129,24) Diode Network	DA204U	S 651	(A,10,65) Switch(MODE)	
G	D 802	(A,134,20) Diode Network	DA204U	VR281	(A,103,98) Semi-fixed 15 kΩ(B)	
	D 803	(A,134,15) Diode Network	DA204U	△FU351	(A,150,128) Fuse 3 A	
	D 804	(A,134,23) Diode Network	DA204U	Y 401	(A,165,146) FM/AM Tuner Unit	
	D 805	(A,134,17) Diode Network	DA204U	BZ601	(A,56,9) Buzzer	
	D 806	(A,129,22) Diode Network	DA204U	RESISTORS		
H	D 807	(A,129,19) Diode Network	DA204U	R 101	(B,28,133)	RS1/16S150J
	D 821	(A,34,18) Diode	HZS11L(A2)	R 102	(B,26,133)	RS1/16S470J
	D 822	(A,37,18) Diode(UC)	HZS6L(C3)	R 103	(B,30,133)	RS1/16S101J
	D 823	(A,40,18) Diode	HZS7L(B3)	R 104	(B,24,133)	RS1/16S101J
	D 831	(A,88,6) LED(UC)	SML412BC5T(NP)	R 105	(A,17,130)	RS1/16S181J
I	D 831	(A,88,6) LED(ES)	NECWB205-5780	R 106	(A,17,122)	RS1/16S181J
	D 841	(A,25,49) Diode	HZS9L(C2)	R 107	(A,17,123)	RS1/16S223J
	D 842	(B,29,37) Diode	RB411D	R 108	(A,17,129)	RS1/16S223J
	D 871	(A,152,15) Diode	HZS7L(B2)	R 109	(A,17,125)	RS1/16S102J
	D 872	(A,145,23) Diode	1SS133	R 110	(A,29,120)	RS1/16S222J
J	D 873	(A,141,23) Diode	1SS133	R 111	(A,17,127)	RS1/16S102J
	D 901	(A,53,128) Diode	MPG06G-6415G50	R 112	(B,35,111)	RS1/16S102J
	D 902	(A,49,126) Diode	MPG06G-6415G50	R 113	(A,21,113)	RS1/16S332J
	D 911	(A,90,117) Diode	HZS7L(C3)	R 114	(A,21,115)	RS1/16S562J
	D 912	(A,93,117) Diode	HZS7L(A1)			

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 115	(B,46,114)	RS1/16S472J	R 236	(A,84,73)	RSN1/16SE6800D
R 116	(B,48,114)	RS1/16S472J	R 251	(A,45,84)	RS1/16S332J
R 121	(A,75,20)	RS1/16S101J	R 252	(A,45,81)	RS1/16S563J
R 122	(A,77,20)	RS1/16S101J	R 253	(A,43,84)	RS1/16S682J
R 123	(A,78,20)	RS1/16S101J	R 254	(A,43,81)	RS1/16S473J
R 124	(A,69,17)	RS1/16S681J	R 261	(B,113,74)	RS1/16S223J
R 125	(A,68,17)	RS1/16S681J	R 262	(B,100,75)	RS1/16S223J
R 126	(A,61,33)	RS1/16S104J	R 263	(B,115,71)	RS1/16S153J
R 127	(A,61,35)	RS1/16S104J	R 264	(B,100,71)	RS1/16S153J
R 128	(A,59,26)	RS1/16S153J	R 267	(B,113,67)	RS1/16S101J
R 161	(A,48,44)	RAB4C101J	R 268	(B,100,67)	RS1/16S101J
R 162	(A,45,44)	RS1/16S473J	R 281	(A,123,87)	RS1/16S390J
R 163	(A,51,44)	RS1/16S101J	R 282	(A,123,88)	RS1/16S390J
R 164	(A,42,44)	RAB4C101J	R 283	(A,127,102)	RS1/16S390J
R 165	(A,52,44)	RS1/16S473J	R 284	(A,126,102)	RS1/16S390J
R 171	(A,65,44)	RAB4C101J	R 285	(A,124,102)	RS1/16S390J
R 172	(A,62,44)	RS1/16S473J	R 286	(A,123,102)	RS1/16S390J
R 173	(A,68,44)	RS1/16S101J	R 287	(A,123,93)	RS1/16S0R0J
R 174	(A,59,44)	RAB4C101J	R 288	(A,123,94)	RS1/16S0R0J
R 175	(A,70,44)	RS1/16S473J	R 289	(A,123,96)	RS1/16S0R0J
R 181	(A,82,44)	RAB4C101J	R 290	(A,123,98)	RS1/16S0R0J
R 182	(A,79,44)	RS1/16S473J	R 291	(A,105,99)	RS1/16S103J
R 183	(A,85,44)	RS1/16S101J	R 292	(A,118,102)	RAB4C101J
R 184	(A,76,44)	RAB4C101J	R 331	(A,94,125)	RS1/16S103J
R 185	(A,86,44)	RS1/16S473J	R 332	(A,113,125)	RS1/16S331J
R 201	(A,51,69)	RSN1/16SE1502D	R 333	(A,110,125)	RS1/16S103J
R 202	(A,57,69)	RSN1/16SE1502D	R 334	(A,111,125)	RS1/16S103J
R 203	(A,49,69)	RSN1/16SE1502D	R 351	(B,148,118)	RS1/16S390J
R 204	(A,56,69)	RSN1/16SE1502D	R 352	(B,145,118)	RS1/16S390J
R 205	(A,52,71)	RSN1/16SE1502D	R 353	(A,148,123)	RS1/16S223J
R 206	(A,59,71)	RSN1/16SE1502D	R 354	(A,145,118)	RS1/16S223J
R 207	(A,48,69)	RSN1/16SE1502D	R 359	(B,140,118)	RS1/16S390J
R 208	(A,54,69)	RSN1/16SE1502D	R 360	(B,137,118)	RS1/16S390J
R 209	(A,51,73)	RSN1/16SE6800D	R 361	(A,140,123)	RS1/16S223J
R 210	(A,57,73)	RSN1/16SE6800D	R 362	(A,137,118)	RS1/16S223J
R 211	(A,49,73)	RSN1/16SE6800D	R 367	(B,135,118)	RS1/16S390J
R 212	(A,56,73)	RSN1/16SE6800D	R 368	(B,132,118)	RS1/16S390J
R 213	(A,65,69)	RSN1/16SE1502D	R 369	(A,131,123)	RS1/16S223J
R 214	(A,71,69)	RSN1/16SE1502D	R 370	(A,128,118)	RS1/16S223J
R 215	(A,63,69)	RSN1/16SE1502D	R 381	(A,119,122)	RS1/16S473J
R 216	(A,70,69)	RSN1/16SE1502D	R 382	(B,29,104)	RS1/16S103J
R 217	(A,66,71)	RSN1/16SE1502D	R 383	(B,31,104)	RS1/16S473J
R 218	(A,73,71)	RSN1/16SE1502D	R 384	(A,120,122)	RS1/16S221J
R 219	(A,62,69)	RSN1/16SE1502D	R 401	(A,151,85)	RS1/16S471J
R 220	(A,68,69)	RSN1/16SE1502D	R 402	(B,168,136)	RS1/16S681J
R 221	(A,65,73)	RSN1/16SE6800D	R 403	(B,168,134)	RS1/16S681J
R 222	(A,71,73)	RSN1/16SE6800D	R 404	(B,168,131)	RS1/16S681J
R 223	(A,63,73)	RSN1/16SE6800D	R 405	(B,168,128)	RS1/16S681J
R 224	(A,70,73)	RSN1/16SE6800D	R 406	(B,168,126)	RS1/16S681J
R 225	(A,79,69)	RSN1/16SE1502D	R 407	(B,168,124)	RS1/16S681J
R 226	(A,85,69)	RSN1/16SE1502D	R 408	(B,162,109)	RS1/16S681J
R 227	(A,77,69)	RSN1/16SE1502D	R 431	(B,160,94)	RS1/16S222J
R 228	(A,84,69)	RSN1/16SE1502D	R 432	(B,160,85)	RS1/16S222J
R 229	(A,80,71)	RSN1/16SE1502D	R 433	(B,157,94)	RS1/16S561J
R 230	(A,87,71)	RSN1/16SE1502D	R 434	(B,157,86)	RS1/16S561J
R 231	(A,76,69)	RSN1/16SE1502D	R 437	(A,159,94)	RS1/16S103J
R 232	(A,82,69)	RSN1/16SE1502D	R 438	(A,159,85)	RS1/16S103J
R 233	(A,79,73)	RSN1/16SE6800D	R 439	(A,159,91)	RS1/16S103J
R 234	(A,85,73)	RSN1/16SE6800D	R 440	(A,159,88)	RS1/16S103J
R 235	(A,77,73)	RSN1/16SE6800D	R 441	(A,152,91)	RS1/16S103J

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	R 442	(A,152,88)	RS1/16S103J	R 631 (B,132,45)
	R 443	(A,151,93)	RS1/16S103J	R 633 (A,131,52)
	R 444	(A,151,86)	RS1/16S103J	R 634 (B,132,49)
	R 445	(B,147,86)	RS1/16S681J	R 635 (A,129,39)
	R 461	(B,17,69)	RS1/4SA561J	R 636 (A,131,39)
	R 471	(B,110,49)	RS1/16S682J	R 642 (B,125,47)
	R 472	(B,108,49)	RS1/16S682J	R 651 (B,12,68)
	R 473	(B,106,49)	RS1/16S682J	R 653 (B,12,62)
	R 474	(B,104,49)	RS1/16S682J	R 661 (A,117,43)
	R 475	(B,104,46)	RS1/16S221J	R 663 (B,119,38)
B	R 476	(B,104,44)	RS1/16S221J	R 664 (A,119,49)
	R 477	(B,106,42)	RS1/16S221J	R 665 (B,119,40)
	R 478	(B,106,40)	RS1/16S221J	R 671 (A,91,17)
	R 479	(B,106,38)	RS1/16S221J	R 672 (A,90,14)
	R 480	(B,106,36)	RS1/16S681J	R 673 (A,100,23)
	R 481	(B,106,34)	RS1/16S473J	R 674 (A,84,37)
	R 482	(B,106,32)	RS1/16S473J	R 675 (B,85,37)
	R 483	(B,117,47)	RS1/16S102J	R 676 (A,90,13)
	R 491	(A,84,26)	RN1/16SE1003D	R 677 (A,100,20)
	R 492	(A,81,26)	RS1/16S152J	R 701 (B,17,103)
C	R 493	(A,79,31)	RS1/16S101J	R 702 (B,19,103)
	R 494	(A,84,33)	RS1/16S103J	R 705 (B,17,93)
	R 495	(A,94,32)	RS1/16S472J	R 712 (B,19,82)
	R 497	(B,77,29)	RS1/16S0R0J	R 713 (B,17,85)
	R 521	(A,118,22)	RS1/16S103J	R 751 (A,32,103)
	R 523	(B,122,28)	RS1/16S104J	R 752 (A,32,105)
	R 524	(B,121,30)	RS1/16S222J	R 753 (A,31,103)
	R 525	(B,115,31)	RS1/16S683J	R 801 (B,125,25)
	R 526	(B,115,28)	RS1/16S153J	R 802 (B,127,17)
	R 527	(B,112,31)	RS1/16S682J	R 803 (A,130,14)
D	R 528	(B,114,25)	RS1/16S152J	R 804 (B,125,23)
	R 529	(B,127,33)	RS1/16S561J	R 805 (A,129,15)
	R 530	(A,145,64)	RS1/16S682J	R 806 (B,125,21)
	R 531	(A,143,65)	RS1/16S683J	R 807 (A,128,17)
	R 533	(A,114,24)	RS1/16S102J	R 808 (B,137,51)
	R 534	(A,106,26)	RS1/16S102J	R 809 (B,135,23)
	R 535	(A,111,24)	RS1/16S223J	R 821 (A,26,13)
	R 536	(A,109,26)	RS1/16S223J	R 822 (A,26,15)
	R 581	(A,6,115)	RS1/16S103J	R 823 (A,42,15)
	R 582	(A,10,115)	RS1/16S104J	R 831 (A,66,6) (UC)
E	R 583	(A,10,118) (UC)	RS1/16S102J	R 831 (A,66,6) (ES)
	R 584	(A,6,118) (UC)	RS1/16S102J	R 841 (A,14,52)
	R 591	(A,73,108)	RS1/16S1R0J	R 842 (A,30,44)
	R 592	(A,56,104)	RS1/16S391J	R 843 (A,29,42)
	R 601	(B,134,78)	RS1/16S0R0J	R 844 (A,37,37)
	R 602	(B,126,73)	RS1/16S473J	R 845 (A,35,37)
	R 603	(A,114,74)	RS1/16S473J	R 846 (A,34,42)
	R 604	(B,126,57) (ES)	RS1/16S104J	R 861 (A,64,12)
	R 605	(B,126,59) (UC)	RS1/16S104J	R 862 (A,67,12)
	R 606	(B,65,129)	RS1/16S473J	R 863 (A,73,11)
F	R 607	(B,136,58)	RS1/16S104J	R 871 (B,140,14)
	R 608	(B,136,60)	RS1/16S104J	R 872 (B,142,14)
	R 609	(B,136,56)	RS1/16S104J	R 873 (A,144,39)
	R 610	(B,137,62)	RS1/16S473J	R 874 (A,144,38)
	R 611	(B,137,69)	RS1/16S681J	R 875 (B,146,31)
	R 612	(B,137,67)	RS1/16S681J	R 876 (B,146,33)
	R 613	(B,137,65)	RS1/16S681J	R 877 (B,147,36)
	R 614	(B,127,27)	RS1/16S473J	R 878 (B,145,36)
	R 615	(A,64,17)	RS1/16S102J	R 911 (A,86,111)
	R 616	(B,132,93)	RS1/16S473J	R 912 (A,89,111)

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
R 913 (B,67,140)	RS1/16S472J	C 184 (A,90,50)	CCSRCH102J50
R 914 (A,92,109)	RS1/16S473J	C 185 (A,88,52)	CKSYB106K6R3
R 915 (A,92,111)	RS1/16S103J	C 186 (A,87,54)	CCSRCH102J50
R 921 (A,83,122)	RS1/16S103J	C 187 (A,87,56)	CKSRYB105K6R3
R 931 (B,57,128)	RS1/16S153J	C 201 (A,47,60) 10 µF/16 V	CCH1532
R 932 (B,60,125)	RS1/16S472J	C 202 (A,54,60) 10 µF/16 V	CCH1532
R 933 (B,62,125)	RS1/16S472J	C 203 (A,47,65) 10 µF/16 V	CCH1532
R 934 (B,65,127)	RS1/16S102J	C 204 (A,54,65) 10 µF/16 V	CCH1532
R 941 (A,75,110)	RS1/16S103J	C 205 (A,52,73)	CCSRCH221J50
R 971 (B,146,91)	RS1/16S102J	C 206 (A,59,73)	CCSRCH221J50
R 972 (B,143,90)	RS1/16S153J	C 207 (A,48,73)	CCSRCH221J50
R 973 (B,143,92)	RS1/16S102J	C 208 (A,54,73)	CCSRCH221J50
CAPACITORS		C 209 (A,50,71)	CCSRCH821J50
		C 210 (A,56,71)	CCSRCH821J50
		C 211 (A,62,60) 10 µF/16 V	CCH1532
C 101 (B,20,133)	CKSRYB104K16	C 212 (A,69,60) 10 µF/16 V	CCH1532
C 105 (B,46,104)	CKSRYB104K16	C 213 (A,62,65) 10 µF/16 V	CCH1532
C 121 (B,73,25)	CKSRYB104K16	C 214 (A,69,65) 10 µF/16 V	CCH1532
C 122 (B,71,20)	CKSRYB104K16	C 215 (A,66,73)	CCSRCH221J50
C 123 (B,66,32)	CKSRYB104K16	C 216 (A,73,73)	CCSRCH221J50
C 124 (B,67,20)	CKSRYB104K16	C 217 (A,62,73)	CCSRCH221J50
C 125 (B,64,32)	CKSRYB104K16	C 218 (A,68,73)	CCSRCH221J50
C 126 (A,57,22)	CKSYB106K6R3	C 219 (A,64,71)	CCSRCH821J50
C 127 (B,59,27)	CKSYB106K6R3	C 220 (A,70,71)	CCSRCH821J50
C 128 (B,59,30)	CKSYB106K6R3	C 221 (A,77,60) 10 µF/16 V	CCH1532
C 129 (A,59,23)	CKSRYB104K16	C 222 (A,84,60) 10 µF/16 V	CCH1532
C 130 (A,57,27)	CKSRYB104K16	C 223 (A,77,65) 10 µF/16 V	CCH1532
C 131 (A,57,25)	CKSRYB682K50	C 224 (A,84,65) 10 µF/16 V	CCH1532
C 132 (A,57,30)	CKSRYB104K16	C 225 (A,80,73)	CCSRCH221J50
C 134 (B,54,25)	CKSRYB103K50	C 226 (A,87,73)	CCSRCH221J50
C 135 (B,62,19)	CKSQYB225K10	C 227 (A,76,73)	CCSRCH221J50
C 136 (B,64,18)	CKSRYB103K50	C 228 (A,82,73)	CCSRCH221J50
C 137 (B,54,23)	CKSRYB473K25	C 229 (A,78,71)	CCSRCH821J50
C 138 (B,60,18)	CKSRYB473K25	C 230 (A,84,71)	CCSRCH821J50
C 139 (B,74,20)	CCSRCH470J50	C 231 (B,52,78)	CKSRYB104K16
C 140 (B,76,20)	CCSRCH470J50	C 232 (B,66,78)	CKSRYB104K16
C 141 (B,78,20)	CCSRCH470J50	C 233 (B,80,78)	CKSRYB104K16
C 142 (B,71,35)	CCSRCH470J50	C 251 (A,44,77) 10 µF/16 V	CCH1532
C 143 (B,61,42)	CCSRCH470J50	C 252 (A,41,82)	CKSYB106K6R3
C 144 (B,46,42)	CCSRCH470J50	C 253 (B,47,68)	CKSRYB104K16
C 145 (B,63,42)	CCSRCH470J50	C 261 (B,113,71)	CCSRCH220J50
C 146 (B,62,37)	CCSRCH470J50	C 262 (B,98,71)	CCSRCH220J50
C 147 (B,63,53)	CKSRYB102K50	C 263 (B,107,63)	CKSRYB332K50
C 161 (A,56,44)	CCSRCH102J50	C 264 (B,101,63)	CKSRYB332K50
C 162 (A,54,46)	CKSYB106K6R3	C 265 (A,109,62)	CEAL2R2M50
C 163 (A,53,48)	CCSRCH102J50	C 266 (A,103,62)	CEAL2R2M50
C 164 (A,56,50)	CCSRCH102J50	C 267 (B,110,67)	CKSQYB225K10
C 165 (A,54,52)	CKSYB106K6R3	C 268 (B,103,67)	CKSQYB225K10
C 166 (A,53,54)	CCSRCH102J50	C 269 (B,107,69)	CKSRYB104K25
C 167 (A,53,56)	CKSRYB105K6R3	C 281 (A,94,84)	CEJQ2R2M50
C 171 (A,73,44)	CCSRCH102J50	C 282 (A,99,84)	CEJQ2R2M50
C 172 (A,71,46)	CKSYB106K6R3	C 283 (A,92,78)	CEJQ2R2M50
C 173 (A,70,48)	CCSRCH102J50	C 284 (A,97,78)	CEJQ2R2M50
C 174 (A,73,50)	CCSRCH102J50	C 285 (A,103,92)	CKSQYB225K10
C 175 (A,71,52)	CKSYB106K6R3	C 286 (A,103,90)	CKSQYB225K10
C 176 (A,70,54)	CCSRCH102J50	C 287 (B,110,37)	CKSQYB225K10
C 177 (A,70,56)	CKSRYB105K6R3	C 288 (B,111,90)	CKSRYB104K50
C 181 (A,90,44)	CCSRCH102J50	C 289 (B,111,88)	CKSRYB104K50
C 182 (A,88,46)	CKSYB106K6R3	C 290 (A,110,78)	CEAL100M16
C 183 (A,87,48)	CCSRCH102J50	C 291 (A,104,78)	CEAL100M16

Circuit Symbol and No.Part No.Circuit Symbol and No.Part No.

A	C 292	(A,50,83) 10 μ F/16 V	CCH1563	C 473	(A,98,57)	CEJQ101M10
	C 293	(A,57,83) 10 μ F/16 V	CCH1563	C 491	(B,80,32)	CKSQYB225K10
	C 294	(A,64,84) 10 μ F/16 V	CCH1563	C 492	(B,78,32)	CKSRYB103K50
	C 295	(A,70,84) 10 μ F/16 V	CCH1563	C 494	(B,80,24)	CKSQYB225K10
	C 296	(A,78,84) 10 μ F/16 V	CCH1563	C 495	(B,78,24)	CKSRYB103K50
	C 297	(A,84,84) 10 μ F/16 V	CCH1563	C 496	(A,84,25)	CCSRCH100D50
B	C 298	(A,95,99) 56 μ F/10 V	CCH1701	C 497	(A,80,25)	CCSRCH100D50
	C 299	(A,112,104)	CKSQYB474K16	C 498	(A,81,32)	CCSRCH220J50
	C 300	(A,95,91) 56 μ F/10 V	CCH1701	C 499	(A,81,31)	CCSRCH470J50
	C 301	(A,109,102)	CKSQYB475K10	C 502	(B,88,26)	CKSRYB103K50
	C 302	(A,112,101)	CKSQYB105K16	C 503	(B,88,28)	CKSRYB103K50
	C 303	(B,107,95)	CKSRYB104K16	C 504	(B,88,30)	CKSQYB225K10
C	C 331	(A,109,117)	CFTNA274J50	C 505	(A,88,34)	CCSRCH151J50
	C 332	(A,97,117)	CFTNA274J50	C 506	(A,89,34)	CCSRCH390J50
	C 333	(A,115,117)	CFTNA274J50	C 521	(B,121,10)	CKSRYB221K50
	C 334	(A,103,117)	CFTNA274J50	C 522	(B,115,10)	CKSRYB221K50
	C 335	(A,71,127) 3 300 μ F/16 V	CCH1547	C 523	(A,113,27)	CKSQYB105K10
	C 336	(A,129,128) 10 μ F/16 V	CCH1532	C 524	(A,107,29)	CKSQYB105K10
D	C 337	(A,100,125)	CKSQYB225K10	C 525	(B,121,32)	CKSRYB104K16
	C 338	(A,98,125)	CKSQYB225K10	C 526	(B,124,37)	CKSRYB104K16
	C 339	(B,105,135)	CKSRYB104K16	C 527	(B,124,35)	CKSRYB105K10
	C 340	(A,123,127)	CEHAR330M10	C 528	(A,135,31)	CEAL100M16
	C 351	(A,138,100) 10 μ F/16 V	CCH1532	C 529	(B,120,28)	CCSRCH681J50
	C 352	(A,132,100) 10 μ F/16 V	CCH1532	C 530	(B,118,28)	CKSQYB225K10
E	C 355	(A,138,106) 10 μ F/16 V	CCH1532	C 531	(A,135,37)	CEJQ101M6R3
	C 356	(A,132,106) 10 μ F/16 V	CCH1532	C 532	(B,133,31)	CKSRYB103K50
	C 359	(A,125,109) 10 μ F/16 V	CCH1532	C 533	(B,127,10)	CKSRYB104K16
	C 360	(A,118,109) 10 μ F/16 V	CCH1532	C 534	(B,127,15)	CKSRYB471K50
	C 381	(A,125,115)	CEJQ220M16	C 535	(A,112,24)	CKSRYB682K50
	C 401	(B,168,138)	CKSRYB103K50	C 536	(A,108,26)	CKSRYB682K50
F	C 402	(A,156,113)	CEAL101M10	C 591	(A,69,104)	CEJQ100M16
	C 403	(B,154,110)	CKSRYB104K16	C 592	(A,70,108)	CKSRYB103K50
	C 404	(B,152,109)	CKSQYB475K10	C 593	(A,62,102)	CKSRYB103K50
	C 405	(B,157,82)	CKSRYB103K50	C 602	(B,138,94)	CKSRYB103K50
	C 406	(A,157,80)	CEJQ101M10	C 603	(A,136,88)	CEJQ4R7M35
	C 407	(A,150,80)	CEJQ220M25	C 604	(B,126,82)	CCSRCH180J50
G	C 408	(B,150,78)	CKSRYB103K50	C 605	(B,131,82)	CCSRCH180J50
	C 409	(B,143,68)	CKSRYB103K50	C 606	(B,137,64)	CCSRCH470J50
	C 410	(B,151,83)	CKSYB475K16	C 631	(B,132,48)	CKSRYB104K16
	C 412	(B,162,105)	CKSYB475K16	C 632	(A,139,79)	CEJQ101M16
	C 413	(B,162,101)	CKSRYB103K50	C 661	(A,118,45)	CKSRYB105K10
	C 414	(B,162,111)	CKSRYB103K50	C 662	(B,119,36)	CKSRYB104K16
H	C 415	(A,150,106)	CEJQ470M10	C 671	(B,96,15)	CKSRYB104K16
	C 416	(A,157,106)	CEJQ470M10	C 672	(B,83,16)	CKSRYB104K16
	C 417	(B,143,103)	CKSRYB102K50	C 701	(A,21,95)	CEJQ101M16
	C 431	(B,163,91)	CKSRYB332K50	C 702	(B,21,93)	CKSRYB103K50
	C 432	(B,163,88)	CKSRYB332K50	C 703	(A,22,105)	CEJQ221M10
	C 433	(A,158,94)	CKSRYB474K10	C 704	(B,12,96)	CKSRYB102K50
I	C 434	(A,158,85)	CKSRYB474K10	C 711	(A,23,83)	CEJQ221M10
	C 435	(A,158,91)	CCSRCH470J50	C 712	(B,20,75)	CKSRYB472K50
	C 436	(A,158,88)	CCSRCH470J50	C 713	(A,24,76)	CEJQ2R2M50
	C 437	(A,151,91)	CCSRCH470J50	C 714	(B,12,82)	CKSRYB102K50
	C 438	(A,151,88)	CCSRCH470J50	C 721	(A,38,68) 47 μ F/16 V	CCH1533
	C 439	(A,149,91)	CKSRYB474K10	C 722	(A,35,73)	CKSRYB104K16
J	C 440	(A,149,88)	CKSRYB474K10	C 723	(A,37,79)	CKSRYB104K16
	C 441	(B,153,86)	CKSRYB105K10	C 724	(A,36,81)	CKSYB475K10
	C 442	(B,151,92)	CKSRYB105K10	C 731	(A,53,18)	CEAL220M6R3
	C 461	(B,18,60)	CKSRYB473K50	C 732	(B,55,17)	CKSRYB104K16
	C 462	(B,20,69)	CKSRYB102K50	C 733	(A,42,27)	CKSRYB104K16
	C 463	(A,22,69)	CEJQ101M10	C 734	(A,46,30)	CKSYB475K10

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
C 735 (B,45,34)	CCSRCH101J50	IC 601 (A,129,65) IC	PEG176A
C 736 (A,45,36) 100 µF/10 V	CCH1511	IC 631 (A,132,45) IC	BR25L320F-W
C 738 (B,53,34)	CCSRCH101J50	IC 661 (A,115,42) IC	S-80835CNMC-B8U
C 739 (A,53,36)	CEAL101M6R3	IC 671 (A,96,15) IC	TC74VHCT08AFTS1
C 751 (A,58,92)	CEAL470M6R3	IC 672 (A,83,15) IC	TC74VHC08FTS1
		IC 721 (A,37,76) IC	A NJM2872F05
C 752 (A,48,89)	CKSRYB103K50	IC 731 (A,49,25) IC	NJM2885DL1-33
C 753 (A,32,98)	CKSRYB472K50	IC 841 (A,30,37) IC	NJM2360M
C 754 (A,48,99) 0.1 F/5.5 V	CCL1050	IC 871 (A,143,33) IC	BA6288FS
C 801 (B,106,12)	CKSRYB104K16	IC 941 (A,79,114) IC	TPD1018F
C 821 (B,31,16)	CKSRYB473K25		
C 841 (A,22,47)	CKSRYB103K50	Q 101 (A,19,115) Transistor	UMF23N
C 842 (A,27,57)	CEJQ470M25	Q 331 (A,107,125) Transistor	DTC124EU
C 843 (A,30,49)	CEAL101M10	Q 351 (A,147,121) Transistor	IMH23
C 844 (A,31,42)	CKSRYB104K16	Q 352 (A,138,121) Transistor	IMH23
C 845 (B,30,34)	CCSRCH331J50	Q 353 (A,130,121) Transistor	IMH23
C 846 (B,33,37)	CKSRYB103K50	Q 354 (A,145,112) Transistor	B IMH23
C 847 (A,25,29)	CEJQ470M25	Q 355 (A,139,112) Transistor	IMH23
C 848 (A,18,30) 4.7 µF	CCG1111	Q 356 (A,133,112) Transistor	IMH23
C 849 (A,35,29)	CEJQ470M25	Q 381 (B,25,104) Transistor	2SC3052-12
C 850 (B,25,61)	CKSRYB474K10	Q 382 (A,123,122) Transistor	UMD3N
C 862 (A,70,11)	CKSRYB105K10	Q 401 (A,153,101) Transistor	DTC143EU
C 871 (B,150,14)	CKSRYB224K10	Q 402 (A,158,97) Transistor	UMH1N
C 872 (B,150,25)	CKSRYB104K16	Q 403 (A,158,100) Transistor	UMH1N
C 873 (A,150,22)	CEAL220M16	Q 431 (B,160,92) Transistor	2SA1576
C 874 (B,148,28)	CKSRYB102K50	Q 432 (B,160,88) Transistor	2SA1576
C 875 (A,141,28)	CCSRCH101J50	Q 461 (B,18,65) Transistor	C UMD3N
C 876 (A,141,38)	CCSRCH101J50	Q 462 (A,14,69) Transistor	2SD2396
C 911 (B,65,140)	CKSRYB104K16	Q 522 (B,111,28) Transistor	2SC3052-12
C 921 (A,79,122)	CKSRYB105K10	Q 523 (B,129,31) Transistor	UMD2N
C 941 (A,83,115)	CKSRYB473K25	Q 591 (A,60,106) Transistor	2SD1767
C 942 (A,75,115)	CKSRYB104K16	Q 592 (A,59,102) Transistor	D UMD3N
C 971 (B,143,88)	CKSRYB104K16	Q 661 (B,119,43) Transistor	2SC3052-12
		Q 701 (A,14,99) Transistor	2SD2396
		Q 702 (B,19,99) Transistor	UMD3N
		Q 711 (A,14,82) Transistor	2SD2396
		Q 712 (B,23,80) Transistor	D UMD3N
		Q 751 (A,39,98) Transistor	2SD1760F5
		Q 752 (A,32,100) Transistor	UMD3N
		Q 821 (A,28,18) Transistor	2SD1767
		Q 822 (A,30,14) Transistor	UMD3N

A**Unit Number : CWN1477(EW5 model)****Unit Name : Tuner Amp Unit****MISCELLANEOUS**

IC 101 (B,43,109) IC	HA12241FP	Q 823 (A,38,23) Transistor	UMH1N
IC 121 (A,67,27) IC	AK7732VT	Q 831 (A,72,7) Transistor	DTC114EU
IC 161 (A,46,52) IC	PCM1793DB	Q 841 (A,19,55) Transistor	2SD1760F5
IC 171 (A,63,52) IC	PCM1793DB	Q 842 (A,19,47) Transistor	UMD3N
IC 181 (A,80,52) IC	PCM1793DB	Q 861 (A,66,9) Transistor	2SB710A
IC 201 (A,53,78) IC	NJM2114M	Q 862 (A,65,14) Transistor	DTC114EU
IC 202 (A,67,78) IC	NJM2114M	Q 871 (A,143,15) Transistor	E 2SD1760F5
IC 203 (A,81,78) IC	NJM2114M	Q 872 (B,146,14) Transistor	UMD3N
IC 251 (B,47,72) IC	NJM4558MD	Q 911 (A,89,109) Transistor	UMX1N
IC 261 (B,107,73) IC	NJM4558MD	Q 921 (A,81,120) Transistor	DTC114EU
IC 281 (A,112,92) IC	PM9009A	Q 931 (B,66,125) Transistor	2SA1235A-12
IC 331 (A,98,134) IC	PAL007B	D 281 (A,111,106) Diode	RB520S-30
IC 401 (B,147,73) IC	NJM2885DL1-33	D 282 (A,107,102) Diode	1SS400
IC 431 (A,155,90) IC	NJM4558V	D 283 (A,112,102) Diode	RB521S-30
IC 491 (A,86,28) IC	TC7SU04FU	D 284 (B,112,98) Diode	RB521S-30
IC 492 (A,80,28) IC	TC7S04FU	D 381 (A,103,125) Diode	DAN202U
IC 493 (A,84,31) IC	TC7SH08FUS1	D 382 (A,12,90) Diode	HZS9L(A2)
IC 541 (A,27,116) IC	BA3121F	D 383 (A,120,117) Diode	1SS133
IC 561 (A,140,44) IC	NJM4558V	D 401 (A,144,93) Diode	1SR154-400
IC 562 (A,140,53) IC	NJM4558V	D 402 (A,144,89) Diode	1SR154-400

Circuit Symbol and No.		Part No.	Circuit Symbol and No.	Part No.
A	D 403	(A,144,86) Diode	1SR154-400	L 404 (A,149,99) Inductor
	D 431	(B,150,88) Diode	UDZS5R6(B)	L 471 (A,99,51) Ferri-Inductor
	D 461	(A,18,62) Diode	HZS7L(C3)	L 492 (B,76,24) Inductor
	D 521	(B,119,9) Diode	RSB6R8S	L 493 (B,91,27) Inductor
	D 525	(B,124,29) Diode	HZU3R9(B1)	L 494 (A,89,32) Inductor
B	D 541	(B,37,132) Diode	UDZS6R8(B)	L 521 (B,130,33) Inductor
	D 542	(B,39,125) Diode	UDZS6R8(B)	L 541 (B,35,128) Inductor
	D 543	(B,35,132) Diode	UDZS6R8(B)	L 542 (B,39,120) Inductor
	D 544	(B,43,129) Diode	UDZS6R8(B)	L 543 (A,41,119) Inductor
	D 561	(B,147,40) Diode	UDZS3R9(B)	L 601 (A,137,92) Ferri-Inductor
C	D 562	(A,146,68) Diode	RB706F-40	L 671 (B,96,17) Inductor
	D 581	(A,8,114) Diode	DAN202U	L 672 (B,83,17) Inductor
	D 582	(A,8,119) Diode	DAP202U	L 731 (B,46,28) Chip Coil
	D 591	(A,65,105) Diode	HZS11L(B2)	L 732 (B,50,28) Chip Coil
	D 631	(A,136,84) Diode	MA111	L 841 (A,21,39) Inductor
D	D 661	(A,119,42) Diode	MA111	L 842 (A,18,25) Inductor
	D 701	(A,22,90) Diode	HZS9L(B2)	L 931 (B,59,130) Inductor
	D 711	(A,18,76) Diode	HZS9L(B3)	X 491 (A,82,22) Crystal Resonator 16.934 MHz CSS1620
	D 712	(B,22,87) Diode	DAN202U	X 601 (A,129,79) Crystal Resonator 15.000 MHz CSS1653
	D 751	(A,33,88) Diode	HZS6L(B3)	S 651 (A,10,65) Switch(MODE) CSH1051
E	D 752	(A,42,90) Diode	RB551V-30	VR281 (A,103,98) Semi-fixed 15 kΩ(B) CCP1397
	D 801	(A,129,24) Diode Network	DA204U	VR521 (A,145,54) Semi-fixed 10 kΩ(B) CCP1448
	D 802	(A,134,20) Diode Network	DA204U	△FU351 (A,150,128) Fuse 3 A CEK1286
	D 803	(A,134,15) Diode Network	DA204U	MIC521 (A,148,45) Microphone CPM1068
	D 804	(A,134,23) Diode Network	DA204U	Y 401 (A,165,146) FM/AM Tuner Unit CWE1801
F	D 805	(A,134,17) Diode Network	DA204U	BZ601 (A,56,9) Buzzer CPV1062
	D 806	(A,129,22) Diode Network	DA204U	RESISTORS
	D 807	(A,129,19) Diode Network	DA204U	
	D 821	(A,34,18) Diode	HZS11L(A2)	R 101 (B,28,133) RS1/16S150J
	D 823	(A,40,18) Diode	HZS7L(B3)	R 102 (B,26,133) RS1/16S470J
G	D 831	(A,88,6) LED	NECWB205-5780	R 103 (B,30,133) RS1/16S101J
	D 841	(A,25,49) Diode	HZS9L(C2)	R 104 (B,24,133) RS1/16S101J
	D 842	(B,29,37) Diode	RB411D	R 105 (A,17,130) RS1/16S181J
	D 871	(A,152,15) Diode	HZS7L(B2)	R 106 (A,17,122) RS1/16S181J
	D 872	(A,145,23) Diode	1SS133	R 107 (A,17,123) RS1/16S223J
H	D 873	(A,141,23) Diode	1SS133	R 108 (A,17,129) RS1/16S223J
	D 901	(A,53,128) Diode	MPG06G-6415G50	R 109 (A,17,125) RS1/16S102J
	D 902	(A,49,126) Diode	MPG06G-6415G50	R 110 (A,29,120) RS1/16S222J
	D 911	(A,90,117) Diode	HZS7L(C3)	R 111 (A,17,127) RS1/16S102J
	D 912	(A,93,117) Diode	HZS7L(A1)	R 112 (B,35,111) RS1/16S102J
I	D 921	(A,86,117) Diode	MPG06G-6415G50	R 113 (A,21,113) RS1/16S332J
	D 931	(B,57,125) Diode	DAN202U	R 114 (A,21,115) RS1/16S562J
	D 941	(A,68,113) Diode	MPG06G-6415G50	R 115 (B,46,114) RS1/16S472J
	D 942	(A,72,113) Diode	MPG06G-6415G50	R 116 (B,48,114) RS1/16S472J
	D 971	(B,143,85) Diode Network	DA204U	R 121 (A,75,20) RS1/16S101J
J	D 972	(B,143,94) Diode	HZU7L(C2)	R 122 (A,77,20) RS1/16S101J
	ZNR401	(A,156,141) Surge Protector	RCCA-201Q31UA-PI	R 123 (A,78,20) RS1/16S101J
	L 101	(B,37,111) Inductor	LCTC3R3K2125	R 124 (A,69,17) RS1/16S681J
	L 121	(B,57,24) Inductor	CTF1379	R 125 (A,68,17) RS1/16S681J
	L 122	(B,61,16) Inductor	CTF1379	R 126 (A,61,33) RS1/16S104J
K	L 161	(A,54,44) Inductor	CTF1379	R 127 (A,61,35) RS1/16S104J
	L 162	(A,53,50) Inductor	CTF1379	R 128 (A,59,26) RS1/16S153J
	L 171	(A,72,44) Inductor	CTF1379	R 161 (A,48,44) RAB4C101J
	L 172	(A,70,50) Inductor	CTF1379	R 162 (A,45,44) RS1/16S473J
	L 181	(A,88,44) Inductor	CTF1379	R 163 (A,51,44) RS1/16S101J
L	L 182	(A,87,50) Inductor	CTF1379	R 164 (A,42,44) RAB4C101J
	L 281	(A,89,88) Inductor	LCTAW2R2J2520	R 165 (A,52,44) RS1/16S473J
	L 401	(B,162,144) Chip Coil	LCTAW4R7J2520	R 171 (A,65,44) RAB4C101J
	L 402	(A,150,113) Inductor	LAU1R0K	R 172 (A,62,44) RS1/16S473J
	L 403	(A,146,99) Inductor	LAU1R0K	

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
R 173 (A,68,44)	RS1/16S101J	R 287 (A,123,93)	RS1/16S0R0J
R 174 (A,59,44)	RAB4C101J	R 288 (A,123,94)	RS1/16S0R0J
R 175 (A,70,44)	RS1/16S473J	R 289 (A,123,96)	RS1/16S0R0J
R 181 (A,82,44)	RAB4C101J	R 290 (A,123,98)	RS1/16S0R0J
R 182 (A,79,44)	RS1/16S473J	R 291 (A,105,99)	RS1/16S103J
R 183 (A,85,44)	RS1/16S101J	R 292 (A,118,102)	RAB4C101J
R 184 (A,76,44)	RAB4C101J	R 331 (A,94,125)	RS1/16S103J
R 185 (A,86,44)	RS1/16S473J	R 332 (A,113,125)	RS1/16S331J
R 201 (A,51,69)	RN1/16SE1502D	R 333 (A,110,125)	RS1/16S103J
R 202 (A,57,69)	RN1/16SE1502D	R 334 (A,111,125)	RS1/16S103J
R 203 (A,49,69)	RN1/16SE1502D	R 351 (B,148,118)	RS1/16S390J
R 204 (A,56,69)	RN1/16SE1502D	R 352 (B,145,118)	RS1/16S390J
R 205 (A,52,71)	RN1/16SE1502D	R 353 (A,148,123)	RS1/16S223J
R 206 (A,59,71)	RN1/16SE1502D	R 354 (A,145,118)	RS1/16S223J
R 207 (A,48,69)	RN1/16SE1502D	R 359 (B,140,118)	RS1/16S390J
R 208 (A,54,69)	RN1/16SE1502D	R 360 (B,137,118)	RS1/16S390J
R 209 (A,51,73)	RN1/16SE6800D	R 361 (A,140,123)	RS1/16S223J
R 210 (A,57,73)	RN1/16SE6800D	R 362 (A,137,118)	RS1/16S223J
R 211 (A,49,73)	RN1/16SE6800D	R 367 (B,135,118)	RS1/16S390J
R 212 (A,56,73)	RN1/16SE6800D	R 368 (B,132,118)	RS1/16S390J
R 213 (A,65,69)	RN1/16SE1502D	R 369 (A,131,123)	RS1/16S223J
R 214 (A,71,69)	RN1/16SE1502D	R 370 (A,128,118)	RS1/16S223J
R 215 (A,63,69)	RN1/16SE1502D	R 381 (A,119,122)	RS1/16S473J
R 216 (A,70,69)	RN1/16SE1502D	R 382 (B,29,104)	RS1/16S103J
R 217 (A,66,71)	RN1/16SE1502D	R 383 (B,31,104)	RS1/16S473J
R 218 (A,73,71)	RN1/16SE1502D	R 384 (A,120,122)	RS1/16S221J
R 219 (A,62,69)	RN1/16SE1502D	R 401 (A,151,85)	RS1/16S471J
R 220 (A,68,69)	RN1/16SE1502D	R 402 (B,168,136)	RS1/16S681J
R 221 (A,65,73)	RN1/16SE6800D	R 403 (B,168,134)	RS1/16S681J
R 222 (A,71,73)	RN1/16SE6800D	R 404 (B,168,131)	RS1/16S681J
R 223 (A,63,73)	RN1/16SE6800D	R 405 (B,168,128)	RS1/16S681J
R 224 (A,70,73)	RN1/16SE6800D	R 406 (B,168,126)	RS1/16S681J
R 225 (A,79,69)	RN1/16SE1502D	R 407 (B,168,124)	RS1/16S681J
R 226 (A,85,69)	RN1/16SE1502D	R 408 (B,162,109)	RS1/16S681J
R 227 (A,77,69)	RN1/16SE1502D	R 409 (A,153,99)	RS1/16S103J
R 228 (A,84,69)	RN1/16SE1502D	R 410 (A,153,97)	RAB4C223J
R 229 (A,80,71)	RN1/16SE1502D	R 431 (B,160,94)	RS1/16S182J
R 230 (A,87,71)	RN1/16SE1502D	R 432 (B,160,85)	RS1/16S182J
R 231 (A,76,69)	RN1/16SE1502D	R 433 (B,157,94)	RS1/16S821J
R 232 (A,82,69)	RN1/16SE1502D	R 434 (B,157,86)	RS1/16S821J
R 233 (A,79,73)	RN1/16SE6800D	R 437 (A,159,94)	RS1/16S103J
R 234 (A,85,73)	RN1/16SE6800D	R 438 (A,159,85)	RS1/16S103J
R 235 (A,77,73)	RN1/16SE6800D	R 439 (A,159,91)	RS1/16S103J
R 236 (A,84,73)	RN1/16SE6800D	R 440 (A,159,88)	RS1/16S103J
R 251 (A,45,84)	RS1/16S332J	R 441 (A,152,91)	RS1/16S103J
R 252 (A,45,81)	RS1/16S563J	R 442 (A,152,88)	RS1/16S103J
R 253 (A,43,84)	RS1/16S682J	R 443 (A,151,93)	RS1/16S103J
R 254 (A,43,81)	RS1/16S473J	R 444 (A,151,86)	RS1/16S103J
R 261 (B,113,74)	RS1/16S223J	R 445 (B,147,86)	RS1/16S681J
R 262 (B,100,75)	RS1/16S223J	R 461 (B,17,69)	RS1/4SA561J
R 263 (B,115,71)	RS1/16S153J	R 471 (B,110,49)	RS1/16S682J
R 264 (B,100,71)	RS1/16S153J	R 472 (B,108,49)	RS1/16S682J
R 267 (B,113,67)	RS1/16S101J	R 473 (B,106,49)	RS1/16S682J
R 268 (B,100,67)	RS1/16S101J	R 474 (B,104,49)	RS1/16S682J
R 281 (A,123,87)	RS1/16S390J	R 475 (B,104,46)	RS1/16S221J
R 282 (A,123,88)	RS1/16S390J	R 476 (B,104,44)	RS1/16S221J
R 283 (A,127,102)	RS1/16S390J	R 477 (B,106,42)	RS1/16S221J
R 284 (A,126,102)	RS1/16S390J	R 478 (B,106,40)	RS1/16S221J
R 285 (A,124,102)	RS1/16S390J	R 479 (B,106,38)	RS1/16S221J
R 286 (A,123,102)	RS1/16S390J	R 480 (B,106,36)	RS1/16S681J

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	
A	R 481	(B,106,34)	RS1/16S473J	R 633 (A,131,52)	RAB4C681J
	R 482	(B,106,32)	RS1/16S473J	R 634 (B,132,49)	RS1/16S104J
	R 483	(B,117,47)	RS1/16S102J	R 635 (A,129,39)	RS1/16S104J
	R 491	(A,84,26)	RN1/16SE1003D	R 636 (A,131,39)	RS1/16S104J
	R 492	(A,81,26)	RS1/16S152J	R 642 (B,125,47)	RS1/16S104J
	R 493	(A,79,31)	RS1/16S101J	R 651 (B,12,68)	RS1/16S0R0J
B	R 494	(A,84,33)	RS1/16S103J	R 653 (B,12,62)	RS1/16S473J
	R 495	(A,94,32)	RS1/16S472J	R 661 (A,117,43)	RS1/16S183J
	R 497	(B,77,29)	RS1/16S0R0J	R 663 (B,119,38)	RS1/16S473J
	R 522	(A,118,24)	RS1/16S0R0J	R 664 (A,119,49)	RS1/16S102J
	R 523	(B,122,28)	RS1/16S104J	R 665 (B,119,40)	RS1/16S222J
	R 524	(B,121,30)	RS1/16S222J	R 671 (A,91,17)	RS1/16S681J
C	R 525	(B,115,31)	RS1/16S683J	R 672 (A,90,14)	RS1/16S681J
	R 526	(B,115,28)	RS1/16S153J	R 673 (A,100,23)	RAB4C681J
	R 527	(B,112,31)	RS1/16S682J	R 674 (A,84,37)	RAB4C272J
	R 528	(B,114,25)	RS1/16S152J	R 675 (B,85,37)	RAB4C472J
	R 529	(B,127,33)	RS1/16S561J	R 676 (A,90,13)	RS1/16S473J
	R 531	(A,143,65)	RS1/16S683J	R 677 (A,100,20)	RS1/16S473J
D	R 532	(B,127,13)	RS1/16S0R0J	R 701 (B,17,103)	RS1/16S471J
	R 541	(B,35,127)	RS1/16S101J	R 702 (B,19,103)	RS1/16S561J
	R 542	(B,42,119)	RS1/16S101J	R 705 (B,17,93)	RS1/16S473J
	R 543	(B,37,124)	RS1/16S223J	R 712 (B,19,82)	RS1/16S471J
	R 544	(B,42,115)	RS1/16S223J	R 713 (B,17,85)	RS1/16S471J
	R 545	(B,34,124)	RS1/16S102J	R 751 (A,32,103)	RS1/16S333J
E	R 546	(B,42,114)	RS1/16S102J	R 752 (A,32,105)	RS1/16S681J
	R 561	(B,144,51)	RS1/16S103J	R 753 (A,31,103)	RS1/16S821J
	R 562	(B,144,56)	RS1/16S153J	R 801 (B,125,25)	RS1/16S222J
	R 563	(B,144,48)	RS1/16S153J	R 802 (B,127,17)	RS1/16S222J
	R 564	(B,140,59)	RS1/16S103J	R 803 (A,130,14)	RS1/16S222J
	R 565	(B,140,48)	RS1/16S223J	R 804 (B,125,23)	RS1/16S222J
F	R 566	(B,144,49)	RS1/16S102J	R 805 (A,129,15)	RS1/16S222J
	R 567	(B,140,56)	RS1/16S563J	R 806 (B,125,21)	RS1/16S222J
	R 568	(B,144,54)	RS1/16S101J	R 807 (A,128,17)	RS1/16S222J
	R 569	(B,140,45)	RS1/16S152J	R 808 (B,137,51)	RS1/16S104J
	R 570	(B,138,45)	RS1/16S152J	R 809 (B,135,23)	RS1/16S104J
	R 571	(B,143,46)	RS1/16S104J	R 821 (A,26,13)	RS1/16S221J
G	R 572	(B,143,44)	RS1/16S222J	R 822 (A,26,15)	RS1/16S271J
	R 573	(A,144,68)	RS1/16S104J	R 823 (A,42,15)	RS1/16S473J
	R 574	(A,149,68)	RS1/16S104J	R 831 (A,66,6)	RS1/16S181J
	R 581	(A,6,115)	RS1/16S103J	R 841 (A,14,52)	RS1/4SA471J
	R 582	(A,10,115)	RS1/16S104J	R 842 (A,30,44)	RS1/16S1R0J
	R 583	(A,10,118)	RS1/16S102J	R 843 (A,29,42)	RS1/16S391J
H	R 584	(A,6,118)	RS1/16S102J	R 844 (A,37,37)	RD1/4PU332J
	R 591	(A,73,108)	RS1/16S1R0J	R 845 (A,35,37)	RD1/4PU332J
	R 592	(A,56,104)	RS1/16S391J	R 846 (A,34,42)	RS1/16S121J
	R 601	(B,134,78)	RS1/16S0R0J	R 861 (A,64,12)	RS1/16S103J
	R 602	(B,126,73)	RS1/16S473J	R 862 (A,67,12)	RS1/16S222J
	R 603	(A,114,74)	RS1/16S473J	R 863 (A,73,11)	RS1/16S473J
I	R 606	(B,65,129)	RS1/16S473J	R 871 (B,140,14)	RS1/16S471J
	R 607	(B,136,58)	RS1/16S104J	R 872 (B,142,14)	RS1/16S471J
	R 608	(B,136,60)	RS1/16S104J	R 873 (A,144,39)	RS1/16S102J
	R 609	(B,136,56)	RS1/16S104J	R 874 (A,144,38)	RS1/16S102J
	R 610	(B,137,62)	RS1/16S473J	R 875 (B,146,31)	RS1/16S102J
	R 611	(B,137,69)	RS1/16S681J	R 876 (B,146,33)	RS1/16S102J
J	R 612	(B,137,67)	RS1/16S681J	R 877 (B,147,36)	RS1/16S104J
	R 613	(B,137,65)	RS1/16S681J	R 878 (B,145,36)	RS1/16S104J
	R 614	(B,127,27)	RS1/16S473J	R 911 (A,86,111)	RS1/16S473J
	R 615	(A,64,17)	RS1/16S102J	R 912 (A,89,111)	RS1/16S104J
	R 616	(B,132,93)	RS1/16S473J	R 913 (B,67,140)	RS1/16S472J
	R 631	(B,132,45)	RS1/16S104J	R 914 (A,92,109)	RS1/16S473J

Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
R 915 (A,92,111)	RS1/16S103J	C 186 (A,87,54)	CCSRCH102J50
R 921 (A,83,122)	RS1/16S103J	C 187 (A,87,56)	CKSRYB105K6R3
R 931 (B,57,128)	RS1/16S153J	C 201 (A,47,60) 10 µF/16 V	CCH1532
R 932 (B,60,125)	RS1/16S472J	C 202 (A,54,60) 10 µF/16 V	A CCH1532
R 933 (B,62,125)	RS1/16S472J	C 203 (A,47,65) 10 µF/16 V	CCH1532
R 934 (B,65,127)	RS1/16S102J	C 204 (A,54,65) 10 µF/16 V	CCH1532
R 941 (A,75,110)	RS1/16S103J	C 205 (A,52,73)	CCSRCH221J50
R 971 (B,146,91)	RS1/16S102J	C 206 (A,59,73)	CCSRCH221J50
R 972 (B,143,90)	RS1/16S153J	C 207 (A,48,73)	CCSRCH221J50
R 973 (B,143,92)	RS1/16S102J	C 208 (A,54,73)	CCSRCH221J50
CAPACITORS		C 209 (A,50,71)	CCSRCH821J50
		C 210 (A,56,71)	CCSRCH821J50
		C 211 (A,62,60) 10 µF/16 V	CCH1532
C 101 (B,20,133)	CKSRYB104K16	C 212 (A,69,60) 10 µF/16 V	B CCH1532
C 105 (B,46,104)	CKSRYB104K16	C 213 (A,62,65) 10 µF/16 V	CCH1532
C 121 (B,73,25)	CKSRYB104K16	C 214 (A,69,65) 10 µF/16 V	CCH1532
C 122 (B,71,20)	CKSRYB104K16	C 215 (A,66,73)	CCSRCH221J50
C 123 (B,66,32)	CKSRYB104K16	C 216 (A,73,73)	CCSRCH221J50
C 124 (B,67,20)	CKSRYB104K16	C 217 (A,62,73)	CCSRCH221J50
C 125 (B,64,32)	CKSRYB104K16	C 218 (A,68,73)	CCSRCH221J50
C 126 (A,57,22)	CKSYB106K6R3	C 219 (A,64,71)	CCSRCH821J50
C 127 (B,59,27)	CKSYB106K6R3	C 220 (A,70,71)	CCSRCH821J50
C 128 (B,59,30)	CKSYB106K6R3	C 221 (A,77,60) 10 µF/16 V	CCH1532
C 129 (A,59,23)	CKSRYB104K16	C 222 (A,84,60) 10 µF/16 V	C CCH1532
C 130 (A,57,27)	CKSRYB104K16	C 223 (A,77,65) 10 µF/16 V	CCH1532
C 131 (A,57,25)	CKSRYB682K50	C 224 (A,84,65) 10 µF/16 V	CCH1532
C 132 (A,57,30)	CKSRYB104K16	C 225 (A,80,73)	CCSRCH221J50
C 134 (B,54,25)	CKSRYB103K50	C 226 (A,87,73)	CCSRCH221J50
C 135 (B,62,19)	CKSQYB225K10	C 227 (A,76,73)	CCSRCH221J50
C 136 (B,64,18)	CKSRYB103K50	C 228 (A,82,73)	CCSRCH221J50
C 137 (B,54,23)	CKSRYB473K25	C 229 (A,78,71)	CCSRCH821J50
C 138 (B,60,18)	CKSRYB473K25	C 230 (A,84,71)	CCSRCH821J50
C 139 (B,74,20)	CCSRCH470J50	C 231 (B,52,78)	CKSRYB104K16
C 140 (B,76,20)	CCSRCH470J50	C 232 (B,66,78)	CKSRYB104K16
C 141 (B,78,20)	CCSRCH470J50	C 233 (B,80,78)	CKSRYB104K16
C 142 (B,71,35)	CCSRCH470J50	C 251 (A,44,77) 10 µF/16 V	D CCH1532
C 143 (B,61,42)	CCSRCH470J50	C 252 (A,41,82)	CKSYB106K6R3
C 144 (B,46,42)	CCSRCH470J50	C 253 (B,47,68)	CKSRYB104K16
C 145 (B,63,42)	CCSRCH470J50	C 261 (B,113,71)	CCSRCH220J50
C 146 (B,62,37)	CCSRCH470J50	C 262 (B,98,71)	CCSRCH220J50
C 147 (B,63,53)	CKSRYB102K50	C 263 (B,107,63)	CKSRYB332K50
C 161 (A,56,44)	CCSRCH102J50	C 264 (B,101,63)	CKSRYB332K50
C 162 (A,54,46)	CKSYB106K6R3	C 265 (A,109,62)	CEAL2R2M50
C 163 (A,53,48)	CCSRCH102J50	C 266 (A,103,62)	CEAL2R2M50
C 164 (A,56,50)	CCSRCH102J50	C 267 (B,110,67)	CKSQYB225K10
C 165 (A,54,52)	CKSYB106K6R3	C 268 (B,103,67)	CKSQYB225K10
C 166 (A,53,54)	CCSRCH102J50	C 269 (B,107,69)	CKSRYB104K25
C 167 (A,53,56)	CKSRYB105K6R3	C 281 (A,94,84)	CEJQ2R2M50
C 171 (A,73,44)	CCSRCH102J50	C 282 (A,99,84)	CEJQ2R2M50
C 172 (A,71,46)	CKSYB106K6R3	C 283 (A,92,78)	CEJQ2R2M50
C 173 (A,70,48)	CCSRCH102J50	C 284 (A,97,78)	CEJQ2R2M50
C 174 (A,73,50)	CCSRCH102J50	C 285 (A,103,92)	CKSQYB225K10
C 175 (A,71,52)	CKSYB106K6R3	C 286 (A,103,90)	CKSQYB225K10
C 176 (A,70,54)	CCSRCH102J50	C 287 (B,110,37)	E CKSQYB225K10
C 177 (A,70,56)	CKSRYB105K6R3	C 288 (B,111,90)	CKSRYB104K50
C 181 (A,90,44)	CCSRCH102J50	C 289 (B,111,88)	CKSRYB104K50
C 182 (A,88,46)	CKSYB106K6R3	C 290 (A,110,78)	CEAL100M16
C 183 (A,87,48)	CCSRCH102J50	C 291 (A,104,78)	CEAL100M16
C 184 (A,90,50)	CCSRCH102J50	C 292 (A,50,83) 10 µF/16 V	F CCH1563
C 185 (A,88,52)	CKSYB106K6R3	C 293 (A,57,83) 10 µF/16 V	CCH1563

	Circuit Symbol and No.	Part No.	Circuit Symbol and No.	Part No.
A	C 294 (A,64,84) 10 µF/16 V	CCH1563	C 492 (B,78,32)	CKSRYB103K50
	C 295 (A,70,84) 10 µF/16 V	CCH1563	C 494 (B,80,24)	CKSQYB225K10
	C 296 (A,78,84) 10 µF/16 V	CCH1563	C 495 (B,78,24)	CKSRYB103K50
	C 297 (A,84,84) 10 µF/16 V	CCH1563	C 496 (A,84,25)	CCSRCH100D50
	C 298 (A,95,99) 56 µF/10 V	CCH1701	C 497 (A,80,25)	CCSRCH100D50
	C 299 (A,112,104)	CKSQYB474K16	C 498 (A,81,32)	CCSRCH220J50
	C 300 (A,95,91) 56 µF/10 V	CCH1701	C 499 (A,81,31)	CCSRCH470J50
	C 301 (A,109,102)	CKSQYB475K10	C 502 (B,88,26)	CKSRYB103K50
	C 302 (A,112,101)	CKSQYB105K16	C 503 (B,88,28)	CKSRYB103K50
	C 303 (B,107,95)	CKSRYB104K16	C 504 (B,88,30)	CKSQYB225K10
B	C 331 (A,109,117)	CFTNA274J50	C 505 (A,88,34)	CCSRCH151J50
	C 332 (A,97,117)	CFTNA274J50	C 506 (A,89,34)	CCSRCH390J50
	C 333 (A,115,117)	CFTNA274J50	C 521 (B,121,10)	CKSRYB221K50
	C 334 (A,103,117)	CFTNA274J50	C 529 (B,120,28)	CCSRCH681J50
	C 335 (A,71,127) 3 300 µF/16 V	CCH1547	C 530 (B,118,28)	CKSQYB225K10
C	C 336 (A,129,128) 10 µF/16 V	CCH1532	C 531 (A,135,37)	CEJQ101M6R3
	C 337 (A,100,125)	CKSQYB225K10	C 532 (B,133,31)	CKSRYB103K50
	C 338 (A,98,125)	CKSQYB225K10	C 541 (B,39,134)	CKSRYB221K50
	C 339 (B,105,135)	CKSRYB104K16	C 542 (B,44,124)	CKSRYB221K50
	C 340 (A,123,127)	CEHAR330M10	C 543 (B,35,124)	CKSRYB471K50
C	C 351 (A,138,100) 10 µF/16 V	CCH1532	C 544 (B,42,117)	CKSRYB471K50
	C 352 (A,132,100) 10 µF/16 V	CCH1532	C 545 (B,31,118)	CKSQYB225K10
	C 355 (A,138,106) 10 µF/16 V	CCH1532	C 546 (B,38,115)	CKSQYB225K10
	C 356 (A,132,106) 10 µF/16 V	CCH1532	C 547 (B,43,134)	CKSRYB104K16
	C 359 (A,125,109) 10 µF/16 V	CCH1532	C 548 (B,47,117)	CKSRYB471K50
C	C 360 (A,118,109) 10 µF/16 V	CCH1532	C 549 (A,34,118)	CEAL220M16
	C 381 (A,125,115)	CEJQ220M16	C 550 (B,25,118)	CKSRYB105K10
	C 401 (B,168,138)	CKSRYB103K50	C 551 (B,25,116)	CKSRYB104K16
	C 402 (A,156,113)	CEAL101M10	C 561 (B,140,50)	CKSRYB105K10
	C 403 (B,154,110)	CKSRYB104K16	C 562 (A,145,59)	CEALNP4R7M16
D	C 404 (B,152,109)	CKSQYB475K10	C 563 (A,151,55)	CEALNP4R7M16
	C 405 (B,157,82)	CKSRYB103K50	C 564 (A,137,52)	CKSRYB105K10
	C 406 (A,157,80)	CEJQ101M10	C 565 (B,143,40)	CKSRYB474K10
	C 407 (A,150,80)	CEJQ220M25	C 566 (B,141,40)	CKSRYB104K16
	C 408 (B,150,78)	CKSRYB103K50	C 567 (B,140,54)	CCSRCH101J50
E	C 409 (B,143,68)	CKSRYB103K50	C 568 (B,139,40)	CKSRYB105K10
	C 410 (B,151,83)	CKSYB475K16	C 569 (A,151,60)	CEAL100M16
	C 412 (B,162,105)	CKSYB475K16	C 570 (A,137,44)	CKSRYB105K10
	C 413 (B,162,101)	CKSRYB103K50	C 571 (B,145,40)	CKSRYB105K6R3
	C 414 (B,162,111)	CKSRYB103K50	C 572 (B,146,45)	CKSRYB105K6R3
E	C 415 (A,150,106)	CEJQ470M10	C 591 (A,69,104)	CEJQ100M16
	C 416 (A,157,106)	CEJQ470M10	C 592 (A,70,108)	CKSRYB103K50
	C 417 (B,143,103)	CKSRYB102K50	C 593 (A,62,102)	CKSRYB103K50
	C 431 (B,163,91)	CKSRYB222K50	C 602 (B,138,94)	CKSRYB103K50
	C 432 (B,163,88)	CKSRYB222K50	C 603 (A,136,88)	CEJQ4R7M35
E	C 433 (A,158,94)	CKSRYB474K10	C 604 (B,126,82)	CCSRCH180J50
	C 434 (A,158,85)	CKSRYB474K10	C 605 (B,131,82)	CCSRCH180J50
	C 435 (A,158,91)	CCSRCH470J50	C 606 (B,137,64)	CCSRCH470J50
	C 436 (A,158,88)	CCSRCH470J50	C 631 (B,132,48)	CKSRYB104K16
	C 437 (A,151,91)	CCSRCH470J50	C 632 (A,139,79)	CEJQ101M16
F	C 438 (A,151,88)	CCSRCH470J50	C 661 (A,118,45)	CKSRYB105K10
	C 439 (A,149,91)	CKSRYB474K10	C 662 (B,119,36)	CKSRYB104K16
	C 440 (A,149,88)	CKSRYB474K10	C 671 (B,96,15)	CKSRYB104K16
	C 441 (B,153,86)	CKSRYB105K10	C 672 (B,83,16)	CKSRYB104K16
	C 442 (B,151,92)	CKSRYB105K10	C 701 (A,21,95)	CEJQ101M16
F	C 461 (B,18,60)	CKSRYB473K50	C 702 (B,21,93)	CKSRYB103K50
	C 462 (B,20,69)	CKSRYB102K50	C 703 (A,22,105)	CEJQ221M10
	C 463 (A,22,69)	CEJQ101M10	C 704 (B,12,96)	CKSRYB102K50
	C 473 (A,98,57)	CEJQ101M10	C 711 (A,23,83)	CEJQ221M10
	C 491 (B,80,32)	CKSQYB225K10	C 712 (B,20,75)	CKSRYB472K50

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
C 713 (A,24,76)	CEJQ2R2M50	Q 1832 (A,28,33)	Transistor(UC) UMD22N
C 714 (B,12,82)	CKSRYB102K50	Q 1833 (A,131,33)	Transistor DTC114EU
C 721 (A,38,68) 47 µF/16 V	CCH1533	Q 1861 (A,71,23)	Transistor 2SC4617
C 722 (A,35,73)	CKSRYB104K16	Q 1862 (A,92,21)	Transistor 2SD1664
C 723 (A,37,79)	CKSRYB104K16	D 1801 (B,127,12)	Diode DAN202U
C 724 (A,36,81)	CKSYB475K10	D 1802 (B,133,13)	Diode DAP202U
C 731 (A,53,18)	CEAL220M6R3	D 1803 (B,30,12)	Diode RSB6R8S
C 732 (B,55,17)	CKSRYB104K16	D 1804 (B,30,8)	Diode RSB6R8S
C 733 (A,42,27)	CKSRYB104K16	D 1831 (A,33,21)	LED(UC) SML412BC5T(NP)
C 734 (A,46,30)	CKSYB475K10	D 1832 (A,21,34)	LED(UC) SML412BC5T(NP)
C 735 (B,45,34)	CCSRCH101J50	D 1833 (A,136,33)	LED SML-310LT(MN)
C 736 (A,45,36) 100 µF/10 V	CCH1511	D 1834 (A,18,9)	LED(UC) SML412BC5T(NP)
C 738 (B,53,34)	CCSRCH101J50	D 1835 (A,6,21)	LED(UC) SML412BC5T(NP)
C 739 (A,53,36)	CEAL101M6R3	D 1836 (A,162,21)	LED(UC) SML412BC5T(NP)
C 751 (A,58,92)	CEAL470M6R3	D 1837 (A,135,21)	LED(UC) SML412BC5T(NP)
C 752 (A,48,89)	CKSRYB103K50	D 1838 (A,150,33)	LED(UC) SML412BC5T(NP)
C 753 (A,32,98)	CKSRYB472K50	D 1839 (A,147,9)	LED(UC) SML412BC5T(NP)
C 754 (A,48,99) 0.1 F/5.5 V	CCL1050	D 1842 (A,159,38)	LED(UC) SML412BC5T(NP)
C 821 (B,31,16)	CKSRYB473K25	D 1843 (A,18,34)	LED NECWB205-5780
C 841 (A,22,47)	CKSRYB103K50	D 1844 (A,21,9)	LED NECWB205-5780
C 842 (A,27,57)	CEJQ470M25	D 1845 (A,8,21)	LED NECWB205-5780
C 843 (A,30,49)	CEAL101M10	D 1846 (A,32,21)	LED NECWB205-5780
C 844 (A,31,42)	CKSRYB104K16	D 1847 (A,150,9)	LED NECWB205-5780
C 845 (B,30,34)	CCSRCH331J50	D 1848 (A,147,33)	LED NECWB205-5780
C 846 (B,33,37)	CKSRYB103K50	D 1849 (A,136,21)	LED NECWB205-5780
C 847 (A,25,29)	CEJQ470M25	D 1850 (A,160,21)	LED NECWB205-5780
C 848 (A,18,30) 4.7 µF	CCG1111	D 1851 (A,157,38)	LED NECWB205-5780
C 849 (A,35,29)	CEJQ470M25	D 1901 (B,41,26)	Diode 1SS355
C 850 (B,25,61)	CKSRYB474K10	L 1802 (B,38,10)	Inductor(UC, ES) CTF1379
C 862 (A,70,11)	CKSRYB105K10	L 1803 (B,43,9)	Inductor CTF1379
C 871 (B,150,14)	CKSRYB224K10	L 1804 (B,45,8)	Inductor CTF1379
C 872 (B,150,25)	CKSRYB104K16	L 1861 (A,101,29)	Inductor CTF1617
C 873 (A,150,22)	CEAL220M16	L 1902 (A,57,25)	Inductor CTF1617
C 874 (B,148,28)	CKSRYB102K50	TH1861 (A,71,29)	Thermistor CCX1037
C 875 (A,141,28)	CCSRCH101J50	X 1901 (B,47,23)	Ceramic Resonator 16.000 MHz CSS1616
C 876 (A,141,38)	CCSRCH101J50	S 1801 (A,136,10)	Push Switch CSG1155
C 911 (B,65,140)	CKSRYB104K16	S 1811 (A,148,21)	Switch(MULTI-CONTROL) CSX1065
C 921 (A,79,122)	CKSRYB105K10	S 1831 (A,20,21)	Encoder(VOLUME) CSD1104
C 941 (A,83,115)	CKSRYB473K25	S 1832 (A,162,37)	Push Switch CSG1155
C 942 (A,75,115)	CKSRYB104K16	S 1833 (A,6,33)	Push Switch CSG1155
C 971 (B,143,88)	CKSRYB104K16	S 1834 (A,162,33)	Push Switch CSG1155
		S 1835 (A,6,10)	Push Switch CSG1155
		S 1836 (A,162,10)	Push Switch CSG1155
		VR1861 (B,95,21)	Semi-fixed 10 kΩ(B) CCP1229
		OEL Unit	MXS8232

B**Unit Number : CWS1389****Unit Name : Switch Unit****C****Unit Number :****Unit Name : Keyboard Unit****MISCELLANEOUS**

IC 1902 (A,38,38) IC	GP1UX51RK
IC 1903 (B,59,24) IC	PEG179A
IC 1904 (A,50,19) IC	S-818A33AUC-BGN
IC 1905 (A,107,20) IC	PD8160A
Q 1831 (A,22,37) Transistor(UC)	UMD22N

RESISTORS

R 1802 (A,128,27)	RS1/16S222J
R 1803 (A,130,27)	RS1/16S222J
R 1804 (A,135,14)	RS1/16S104J
R 1805 (A,126,18)	RS1/16S103J
R 1812 (B,158,27)	RS1/16S473J
R 1813 (B,138,10)	RS1/16S473J
R 1814 (B,136,10)	RS1/16S822J
R 1815 (B,158,25)	RS1/16S102J
R 1816 (B,134,8)	RS1/16S332J
R 1817 (B,123,12)	RS1/16S102J
R 1818 (B,123,10)	RS1/16S473J
R 1819 (A,126,11)	RS1/16S103J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.	Part No.		
A	R 1820	(B,133,8)	RS1/16S222J	C 1837	(A,150,35) (UC)	CKSRYF104Z50
	R 1831	(B,30,32) (UC)	RS1/16S241J	C 1838	(A,148,7) (UC)	CKSRYF104Z50
	R 1832	(A,7,26) (UC)	RS1/16S241J	C 1841	(A,156,34) (UC)	CKSRYF104Z50
	R 1833	(A,131,29)	RS1/16S181J	C 1842	(A,15,33)	CKSRYF104Z50
	R 1834	(A,132,21) (UC)	RS1/16S101J	C 1843	(A,24,9)	CKSRYF104Z50
	R 1835	(B,151,8) (UC)	RS1/16S561J	C 1844	(A,7,18)	CKSRYF104Z50
	R 1837	(B,158,13) (UC)	RS1/16S392J	C 1845	(A,32,18)	CKSRYF104Z50
	R 1838	(B,158,12) (UC)	RS1/16S272J	C 1846	(A,151,7)	CKSRYF104Z50
	R 1839	(A,23,7)	RS1/16S271J	C 1847	(A,143,33)	CKSRYF104Z50
	R 1840	(B,32,16)	RS1/16S271J	C 1848	(A,136,24)	CKSRYF104Z50
B	R 1841	(B,153,27)	RS1/16S271J	C 1849	(A,161,17)	CKSRYF104Z50
	R 1842	(A,162,17)	RS1/16S271J	C 1850	(A,154,34)	CKSRYF104Z50
	R 1843	(B,158,39)	RS1/16S332J	C 1864	(A,79,20)	CKSRYB104K25
	R 1844	(B,158,37)	RS1/16S562J	C 1865	(A,84,17)	CKSRYB104K25
	R 1845	(A,30,32) (EW5, ES)	RS1/16S0R0J	C 1866	(A,92,27)	CKSRYB104K25
C	R 1846	(A,132,23) (UC)	RS1/16S820J	C 1867	(A,87,19)	CSZSRB104K25
	R 1861	(A,77,21)	RS1/16S3902D	C 1902	(B,35,32)	CSZSR100M16
	R 1862	(A,71,25)	RS1/16S1802D	C 1903	(B,43,23)	CKSRYB103K50
	R 1863	(A,71,27)	RS1/16S6802D	C 1905	(B,44,21)	CKSRYF104Z50
	R 1864	(A,91,16)	RS1/16S392J	C 1907	(A,50,15)	CSZSR4R7M16
D	R 1865	(A,66,33)	RAB4C101J	C 1908	(A,54,14)	CSZSR4R7M10
	R 1866	(A,87,20)	RS1/16S152J	C 1909	(A,54,31)	CKSRYB103K50
	R 1902	(B,34,28)	RS1/16S101J	C 1910	(A,49,31)	CSZSR4R7M10
	R 1903	(B,36,29)	RS1/16S103J	C 1911	(A,59,25)	CKSRYB103K50
	R 1904	(B,125,10)	RS1/16S103J	C 1912	(A,109,29)	CKSRYB103K50
E	R 1905	(B,39,32)	RS1/16S2R2J	C 1913	(B,43,32)	CCSRCH470J50
	R 1907	(B,48,26)	RS1/16S473J	C 1914	(A,60,28)	CCSRCH470J50
	R 1908	(B,47,28)	RS1/16S102J	D		
	R 1909	(B,47,30)	RS1/16S102J	Unit Number : CWX3381		
	R 1910	(B,41,21)	RS1/16S154J	Unit Name : CD Core Unit(S10.5COMP1)		
F	R 1911	(B,48,17)	RS1/16S104J	MISCELLANEOUS		
	R 1912	(A,51,22)	RS1/16S222J	IC 201	(B,39,70) IC	UPD63763CGJ
	R 1913	(A,49,25)	RAB4C102J	IC 203	(A,12,16) IC	NJM2886DL3-33
	R 1914	(B,43,34)	RS1/16S473J	IC 301	(A,28,18) IC	BA5835FP
	R 1915	(A,70,12)	RS1/16S221J	IC 701	(A,32,48) IC	PE5561A
G	R 1916	(A,58,32)	RAB4C473J	IC 704	(A,41,64) IC	BR93L56RFVM-W
	R 1917	(A,64,25)	RAB4C101J	Q 101	(B,60,89) Transistor	2SA1577
	R 1918	(A,67,17)	RAB4C101J	Q 701	(B,24,41) Transistor	UN2111
	R 1919	(B,71,17)	RAB4C101J	X 701	(A,24,37) Ceramic Resonator 4.000 MHz	CSS1652
	R 1920	(B,76,31)	RS1/16S101J	S 901	(A,57,57) Switch(HOME)	CSN1067
H	R 1921	(A,66,28)	RS1/16S101J	S 903	(B,23,78) Switch(DSCSNS)	CSN1067
	R 1922	(B,65,8)	RAB4C101J	S 904	(B,42,87) Switch(12EJ)	CSN1068
	R 1923	(B,72,21)	RAB4C101J	S 905	(B,28,88) Switch(8EJ)	CSN1068
	R 1924	(B,77,24)	RAB4C101J	RESISTORS		
	R 1925	(B,72,27)	RAB4C101J	R 101	(B,61,92)	RS1/10SR2R4J
I	R 1926	(B,81,32)	RAB4C101J	R 102	(B,63,92)	RS1/10SR2R4J
	R 1927	(B,68,34)	RAB4C101J	R 103	(B,63,89)	RS1/10SR2R7J
	CAPACITORS		R 104	(A,52,73)	RS1/16SS102J	
	C 1801	(A,115,31)	CKSRYB104K25	R 201	(B,44,57)	RS1/16SS102J
	C 1804	(B,130,19)	CCSRCH102J50	R 202	(A,38,62)	RS1/16SS473J
J	C 1805	(A,116,34)	CKSRYB104K25	R 203	(A,37,62)	RS1/16SS473J
	C 1806	(B,30,10)	CKSRYB104K25	R 210	(A,33,62)	RS1/16SS0R0J
	C 1831	(A,33,18) (UC)	CKSRYF104Z50	R 214	(A,46,79)	RS1/16SS472J
	C 1832	(A,19,35) (UC)	CKSRYF104Z50	R 216	(A,46,81)	RS1/16SS472J
	C 1833	(A,13,9) (UC)	CKSRYF104Z50	R 221	(A,44,81)	RS1/16SS103J
K	C 1834	(A,6,15) (UC)	CKSRYF104Z50	R 222	(A,45,81)	RS1/16SS103J
	C 1835	(A,162,25) (UC)	CKSRYF104Z50			
L	C 1836	(A,133,18) (UC)	CKSRYF104Z50			

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
R 225 (B,52,78)	RS1/16SS103J	C 228 (A,46,62)	CKSSYB103K16
R 226 (B,52,77)	RS1/16SS393J	C 232 (A,12,31)	CKSRYB105K10
R 227 (A,44,75)	RS1/16SS562J	C 237 (A,31,67)	CKSSYB104K10
R 228 (A,46,72)	RS1/16SS122J	C 239 (A,46,74)	CCSSCH220J50
R 229 (A,44,72)	RS1/16SS472J	C 246 (A,42,80)	CKSSYB104K10
R 232 (A,46,75)	RS1/16SS122J		
R 237 (B,22,64)	RS1/16SS221J	C 249 (B,25,57)	CKSSYB221K50
R 238 (B,22,65)	RS1/16SS221J	C 250 (A,42,81)	CKSRYB102K50
R 239 (B,22,66)	RS1/16SS221J	C 251 (A,41,83)	CKSRYB102K50
R 241 (B,26,63)	RS1/16SS333J	C 303 (A,18,20)	CKSSYB472K25
R 243 (B,26,62)	RS1/16SS333J	C 304 (A,17,17)	CKSSYB103K16
R 245 (B,26,69)	RS1/16SS333J	C 307 (A,34,15)	CKSSYB104K10
R 248 (B,55,74)	RS1/16SS105J	C 308 (A,17,30)	CKSRYB105K10
R 307 (A,19,20)	RS1/16SS183J	C 701 (B,25,47)	CKSSYB104K10
R 308 (A,17,20)	RS1/16SS183J	C 703 (B,28,42)	CKSSYB103K16
R 309 (A,18,18)	RS1/16SS183J	C 706 (B,34,43)	CKSSYB104K10
R 310 (A,17,16)	RS1/16SS183J	C 707 (A,36,57)	CKSSYB104K10
R 701 (B,26,44)	RS1/16SS221J	C 714 (A,24,41)	CKSSYB104K10
R 707 (B,32,45)	RS1/16SS473J	C 719 (A,45,64)	CKSSYB104K10
R 709 (A,36,35)	RS1/16SS222J	C 722 (B,29,45)	CKSQYB475K6R3
R 710 (B,41,46)	RS1/16SS102J	C 903 (B,14,54)	CKSSYB471K50
R 712 (A,45,57)	RS1/16SS222J		
R 713 (B,40,57)	RS1/16SS222J		
R 716 (B,29,37)	RS1/16SS472J	M 1	Pickup Unit(P10.5)(Service) CXX1942
R 724 (B,31,36)	RS1/16S473J	M 2	Motor Unit(SPINDLE) CXC6742
R 726 (B,23,47)	RS1/16SS103J	M 10	Motor Unit(LOADING/CARRIAGE) CXC4026
R 727 (B,31,42)	RS1/16SS473J		Motor Unit(FLAP) XXA7400
R 729 (B,20,48)	RS1/16SS223J		
R 730 (B,20,46)	RS1/16SS473J		
R 734 (A,40,61)	RS1/16SS472J		
R 740 (A,38,59)	RS1/16SS222J		
R 746 (A,13,38)	RS1/16SS104J		
R 750 (A,40,66)	RS1/16SS473J		
R 751 (B,40,46)	RS1/16SS102J		
R 902 (A,20,36)	RS1/16SS221J		
R 905 (A,21,36)	RS1/16SS221J		
R 906 (B,20,36)	RS1/16SS221J		
R 909 (B,16,65)	RS1/16SS0R0J		

CAPACITORS

C 103 (B,57,83)	CEVW101M16
C 108 (A,47,66)	CKSSYB104K10
C 201 (B,46,56)	CKSSYB102K50
C 202 (B,47,58)	CKSSYB104K10
C 205 (A,34,63)	CKSSYB104K10
C 208 (B,34,54)	CKSSYB104K10
C 209 (B,31,57)	CKSSYB104K10
C 210 (A,31,66)	CKSRYB105K10
C 216 (B,53,77)	CKSSYB332K50
C 217 (B,52,79)	CKSSYB104K10
C 218 (B,52,76)	CKSSYB473K10
C 219 (B,52,74)	CKSSYB104K10
C 220 (A,46,77)	CKSSYB182K50
C 221 (B,51,74)	CKSSYB104K10
C 222 (A,46,73)	CCSSCH560J50
C 223 (A,44,74)	CCSSCH4R0C50
C 224 (B,52,68)	CKSSYB104K10
C 225 (A,47,67)	CKSSYB103K16
C 226 (A,49,67)	CCSSCH680J50
C 227 (A,48,65)	CCSSCH470J50

6. ADJUSTMENT

6.1 OEL ADJUSTMENT


A



● Adjustment point

KEYBOARD UNIT (SIDE B)

B

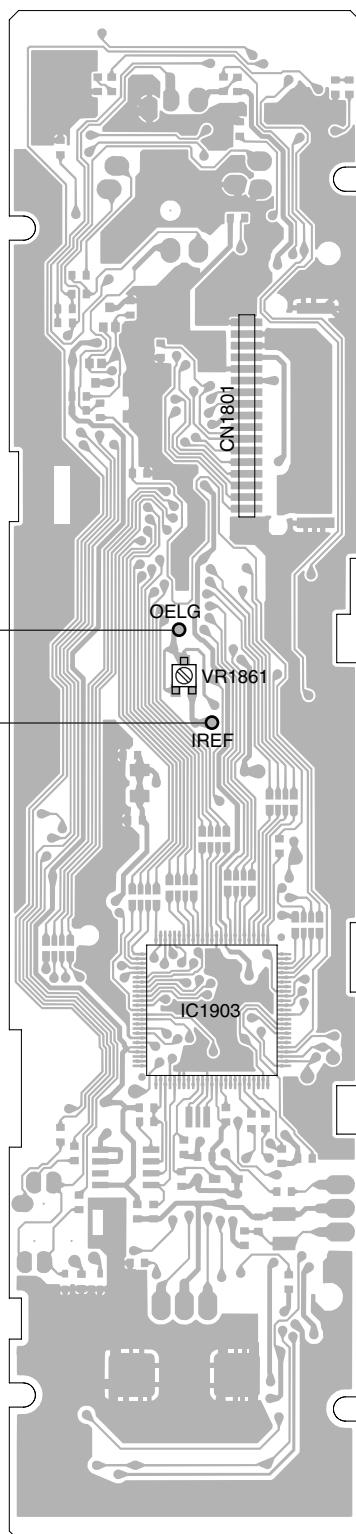

C

D

E

F

<When the OEL Unit has been replaced>

1. Use VR1861 to adjust the resistance between IREF and OELG to $3.4\text{ k}\Omega$.

6.2 CD ADJUSTMENT

1) Cautions on adjustments

- In this product the single voltage (3.3V) is used for the regulator. The reference voltage is the REFO1 (1.65V) instead of the GND.

If you should mistakenly short the REFO1 with the GND during adjustment, accurate voltage will not be obtained, and the servo's misoperation will apply excessive shock to the pickup. To avoid such problems:

- a. Do not mix up the REFO1 with the GND when connecting the (-) probe of measuring instruments. Especially on an oscilloscope, avoid connecting the (-) probe for CH1 to the GND.
- b. In many cases, measuring instruments have the same potential as that for the (-) probe. Be sure to set the measuring instruments to the floating state.
- c. If you have mistakenly connected the REFO1 to the GND, turn off the regulator or the power immediately.
- Before mounting and removing filters or leads for adjustment, be sure to turn off the regulator.
- For stable circuit operation, keep the mechanism operating for about one minute or more after the regulator is turned on.
- In the test mode, any software protections will not work. Avoid applying any mechanical or electrical shock to the mechanism during adjustment.
- The RFI and RFO signals with a wide frequency range are easy to oscillate. When observing the signals, insert a resistor of 1k ohms in series.
- The load and eject operation is not guaranteed with the mechanism upside down. If the mechanism is blocked due to mistaken eject operation, reset the product or turn off and on the ACC to restore it.

2) Test mode

This mode is used to adjust the CD mechanism module.

- To enter the test mode.
While pressing the EJECT and DISP keys at the same time, reset.
- To exit from the test mode.
Turn off the ACC and back up.

Notes:

- a. During ejection, do not press any other keys than the EJECT key until the loaded disc is ejected.
- b. If you have pressed the (→) key or (←) key during focus search, turn off the power immediately to protect the actuator from damage caused by the lens stuck.
- c. For the TR jump modes except 100TR, the track jump operation will continue even if the key is released.
- d. For the CRG move and 100TR jump modes, the tracking loop will be closed at the same time when the key is released.
- e. When the power is turned off and on, the jump mode is reset to the single TR (91), the RF amp gain is set to 0dB, and the auto-adjustment values are reset to the default settings.

A

B


C

D

E

F

● Flow Chart

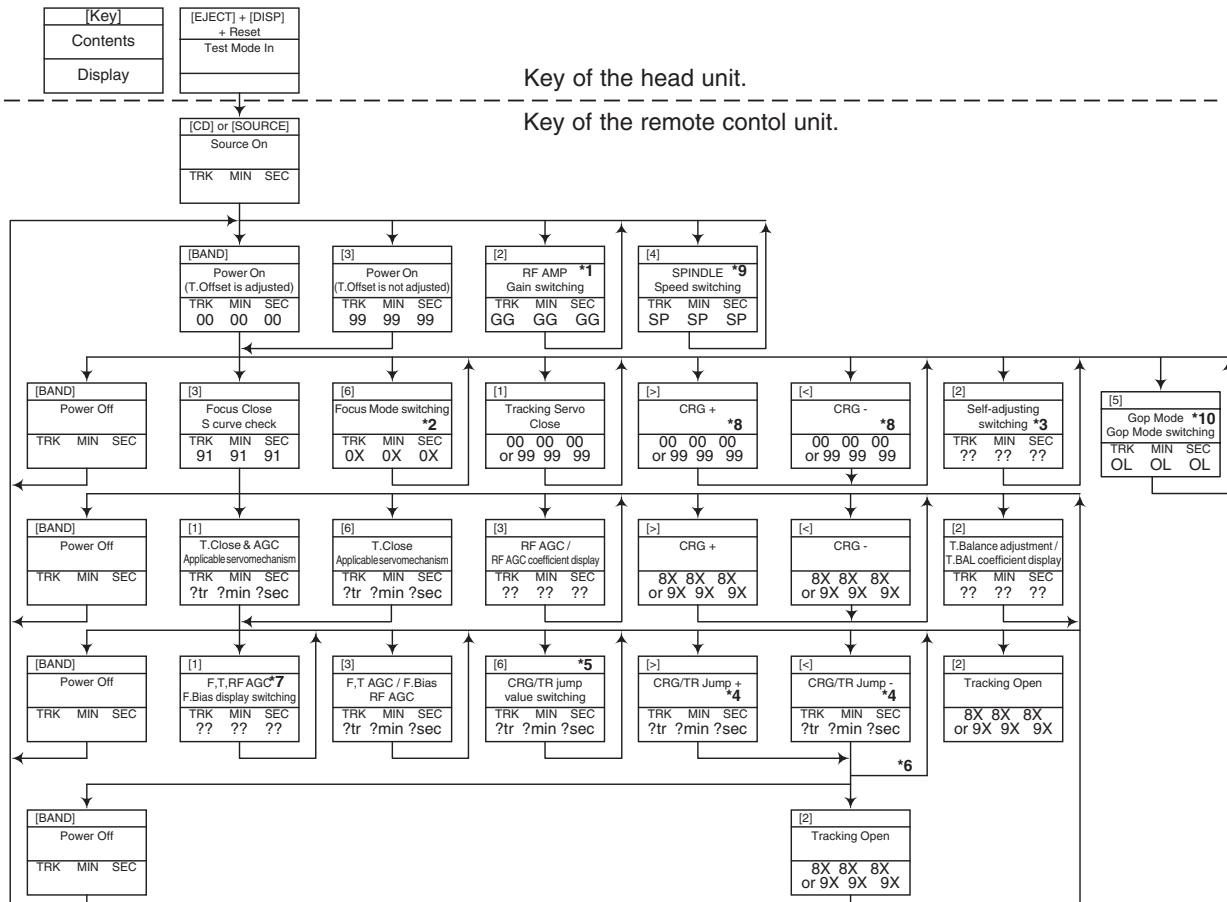

*1) TYP → + 6 dB → + 12 dB
 TRK MIN SEC → TRK 06 MIN 06 SEC 06 → TRK 12 MIN 12 SEC 12

*2) Focus Close → S Curve check setting → F EQ measurement setting
 TRK 00 MIN 00 SEC 00 → TRK 01 MIN 01 SEC 01 → TRK 02 MIN 02 SEC 02
 (TRK 99 MIN 99 SEC 99)

*3) F.Offset Display → RF.Offset → T.Offset Display → Switch to the order of the original display

*4) 1TR/4TR/10TR/32TR/100TR
 *5) Single → 4TR → 10TR → 32TR → 100TR → CRG Move
 9x(8x):91(81) 92(82) 93(83) 94(84) 95(85) 96(86)

*6) Only at the time of CRG move, 100TR jump

*7) TRK/MIN/SEC → F.AGC → T.AGC Gain → F.Bias → RF AGC

*8) CRG motor voltage = 2 [V]

*9) TYP (1X) → 2X → 1X
 TRK MIN SEC → TRK 22 MIN 22 SEC 22 → TRK 11 MIN 11 SEC 11

[Key]	Operation
	Test Mode
[BAND]	Power On/Off
[>]	CRG + / TR Jump + (Direction of the external surface)
[<]	CRG - / TR Jump - (Direction of the internal surface)
[1]	T. CLS & AGC & Applicable servomechanism / AGC,AGC display setting
[2]	RF Gain switching / Offset adjustment display / T.Balance adjustment / T. Open
[3]	F. Close,S Curve / Rough Servo and RF AGC / F.T.RF AGC
[4]	SPDL 1X/2X switching As for the double speed(2x), audio output <u>cannot</u> be supported.
[5]	Error Rate measurement ON : ERR 30Counts Start BER display data[%]
[6]	F. Mode switching / Tracking Close / CRG•TR Jump Switching

*10) OFF(TYP) → FORCUS → TRACKING
 TRK MIN SEC → TRK 70 MIN 70 SEC 70 → TRK 71 MIN 71 SEC 71

• As for the double speed (2x), audio output cannot be supported

- *) After the [Eject] key is pressed keys other than the [Eject] key should not be pressed, until disc ejection is complete.
- When the key [2] or [3] is pressed during the Focus Search, the power supply should be immediately turned off (otherwise the lens sticks to Wall, causing the actuator to be damaged).
- In the case of TR jump other than to 100TR, the function shall continue to be processed even if the TR jump key is released. As for the CRG Move and 100TR Jump, the mechanism shall be set to the Tracking Close mode when the key is released.
- When the power is turned on/off the jump mode is reset to the Single TR (91) while the gain of the RFAMP is reset to 0 dB. At the same time all the self-adjusting values shall return to the default setting.

6.3 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT



A

• Note :

The grating angle of the PU unit cannot be adjusted after the PU unit is changed. The PU unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted PU unit for the CD mechanism module. Changing the PU unit is thus best considered as a last resort. However, if the PU unit must be changed, the grating should be checked using the procedure below.

• Purpose :


To check that the grating is within an acceptable range when the PU unit is changed.

• Symptoms of Mal-adjustment :

If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or taking a long time for track searching.

• Method :

- | | |
|-----------------------|----------------------------|
| • Measuring Equipment | • Oscilloscope, Two L.P.F. |
| • Measuring Points | • E, F, REFO1 |
| • Disc | • TCD-782 |
| • Mode | • TEST MODE |

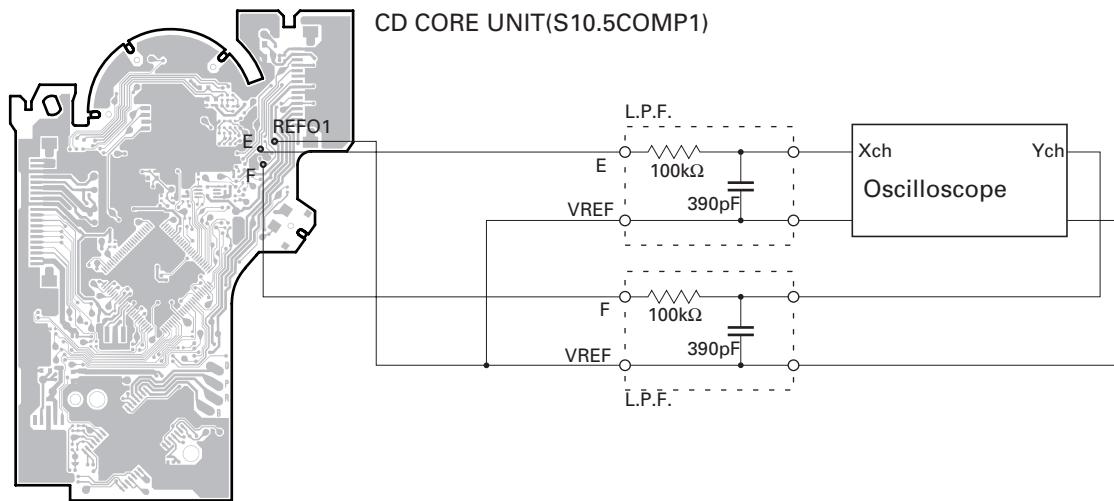

• Checking Procedure

1. In test mode, load the disc and switch the 3V regulator on.
2. Using the → and ← buttons, move the PU unit to the innermost track.
3. Press key 3 to close focus, the display should read "91". Press key 2 to implement the tracking balance adjustment the display should now read "81". Press key 3. The display will change, returning to "81" on the fourth press.
4. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within 75°. Refer to the photographs supplied to determine the phase angle.
5. If the phase difference is determined to be greater than 75° try changing the PU unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than 75° then the mechanism should be judged to be at fault.

• Note

Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" (the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

• Hint


Reloading the disc changes the clamp position and may decrease the "wobble".

Grating waveform


Ech → Xch 20mV/div, AC

Fch → Ych 20mV/div, AC


A

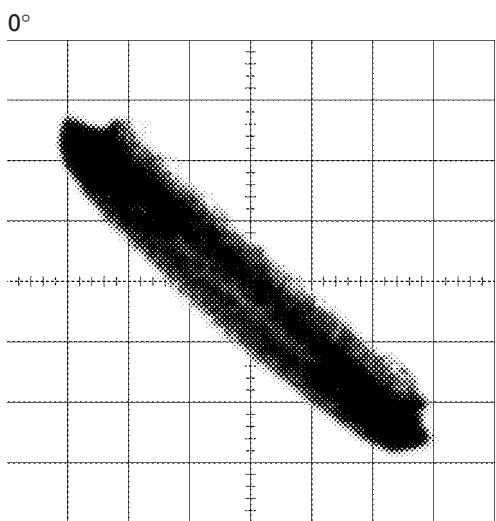


B

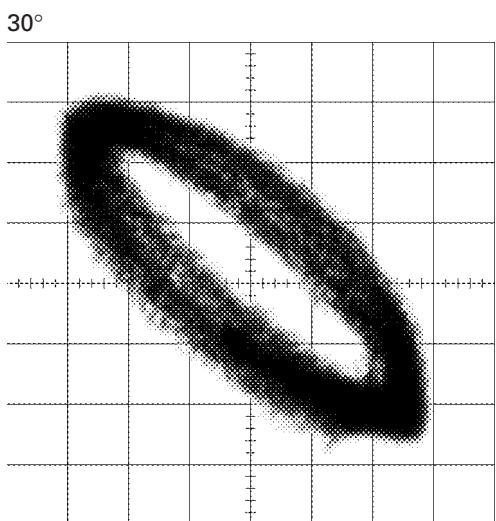


C

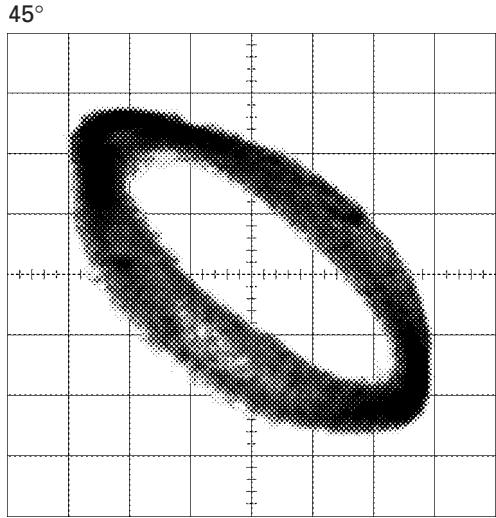


D

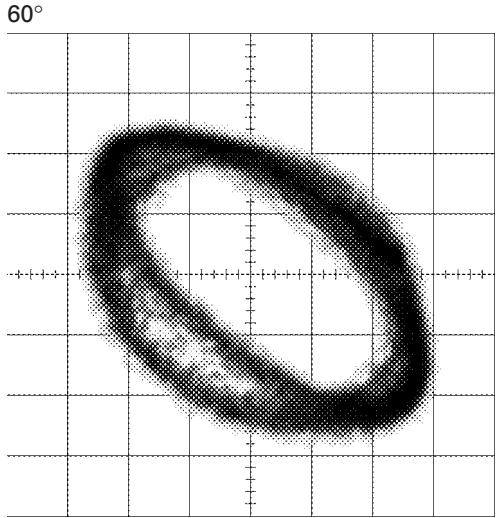

E

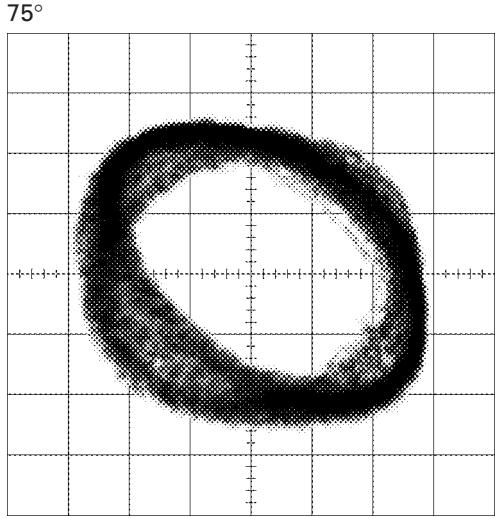

F

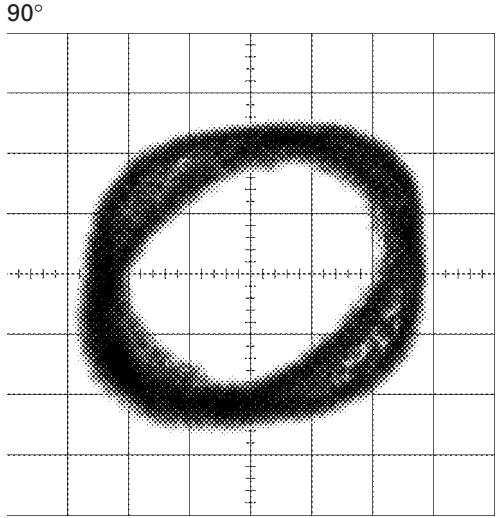

6.4 ERROR MODE

● Error Messages

If a CD is not operative or stopped during operation due to an error, the error mode is turned on and cause(s) of the error is indicated with a corresponding number. This arrangement is intended at reducing nonsense calls from the users and also for facilitating trouble analysis and repair work in servicing.

(1) Basic Indication Method

1) When SERRORM is selected for the CSMOD (CD mode area for the system), error codes are written to DMIN (minutes display area) and DSEC (seconds display area). The same data is written to DMIN and DSEC. DTNO remains in blank as before.

2) Head unit display examples

Depending on display capability of LCD used, display will vary as shown below. xx contains the error number.

8-digit display	6-digit display	4-digit display
ERROR-xx	ERR-xx	E-xx

(2) Error Code List

Code	Class	Displayed error code	Description of the code and potential cause(s)
10	Electricity	Carriage Home NG SERVO LSI Communication Error	CRG can't be moved to inner diameter. CRG can't be moved from inner diameter. → Failure on home switch or CRG move mechanism. Communication error between microcomputer and SERVO LSI.
11	Electricity	Focus Servo NG	Focusing not available. → Stains on rear side of disc or excessive vibrations on REWRITABLE.
12	Electricity	Spindle Lock NG Subcode NG	Spindle not locked. Sub-code is strange (not readable). → Failure on spindle, stains or damages on disc, or excessive vibrations. A disc not containing CD-R data is found. Turned over disc are found, though rarely. CD signal error.
17	Electricity	Setup NG	AGC protection doesn't work. Focus can be easily lost. → Damages or stains on disc, or excessive vibrations on REWRITABLE.
30	Electricity	Search Time Out	Failed to reach target address. → CRG tracking error or damages on disc.
44	Electricity	ALL Skip	Skip setting for all track. (CD-R/RW)
50	Mechanism	CD On Mech Error	Mechanical error during CD ON. → Defective loading motor, mechanical lock and mechanical sensor.
A0	System	Power Supply NG	Power (VD) is ground faulted. → Failure on SW transistor or power supply (failure on connector).

Remarks: Mechanical errors are not displayed (because a CD is turned off in these errors).

Unreadable TOC does not constitute an error. An intended operation continues in this case.

Upper digits of an error code are subdivided as shown below:

1x: Setup relevant errors, 3x: Search relevant errors, Ax: Other errors.

6.5 E.VOL IC OSCILLATING FREQUENCY ADJUSTMENT



Specification	Measuring point	Adjustment point	Remarks
400 kHz ± 10 kHz	IC281 (Pin 49) TP•CPF	VR281 (for source other than AM)	Beat may be generated for AM

Note)

The frequency is always 400 kHz for the sources other than AM, however, it may become 514 kHz by received frequency for AM, adjust it with the source other than AM.

B

6.6 SYSTEM MICROCOMPUTER TEST PROGRAM



● PCL output

In the normal operation mode (with the detachable panel installed, the ACC switched ON, the standby mode cancelled), shift the TEST1 (Pin 86) terminal to H.

The clock signal is output from the PCL1 terminal (Pin 37).

The frequency of the clock signal is 468.750 kHz that is one 32nd of the fundamental frequency.

The clock signal should be 468.750 kHz ± 13 Hz.

If the clock signal is out of the range, the X'tal (X601) should be replaced with new one.

D

E

F

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY

A

● Removing the Case (not shown)

1. Remove the two screws and then remove the Case.

● Removing the CD Mechanism Module (Fig.1)

- Remove the four screws.

Disconnect the connector and then remove the CD Mechanism Module.

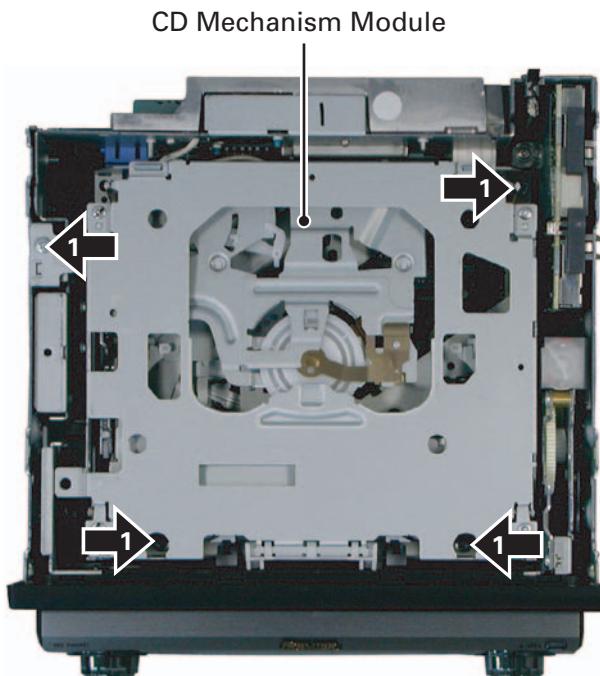


Fig.1

B

C

D

E

● Removing the Grille Assy (Fig.2)

- Remove the four screws.

Disconnect the connector and then remove the Grille Assy.

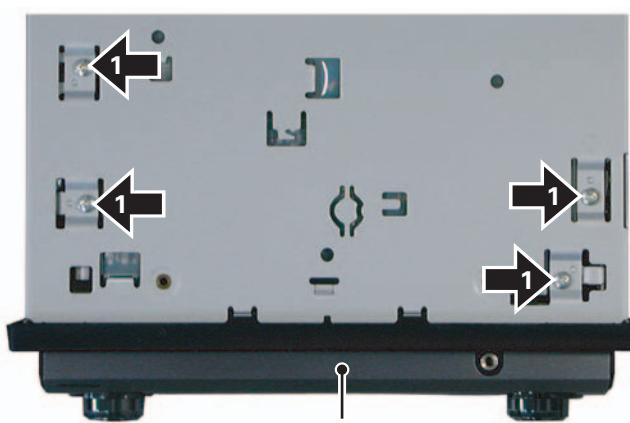


Fig.2

F

● Removing the Tuner Amp Unit (Fig.3)

- A **1** Remove the two screws.
- 2** Straighten the tabs at three locations indicated.
- 3** Remove the screw and then remove the Tuner Amp Unit.

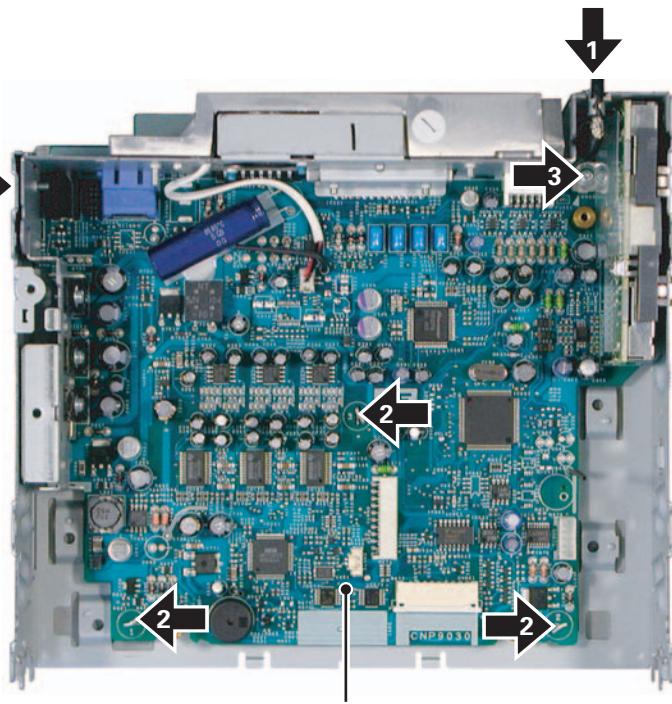


Fig.3

C


D

E

F

● How to hold the Mechanism Unit


1. Hold the Upper and Lower Frames.
2. Do not hold the front portion of the Upper Frame, because it is not very solid.

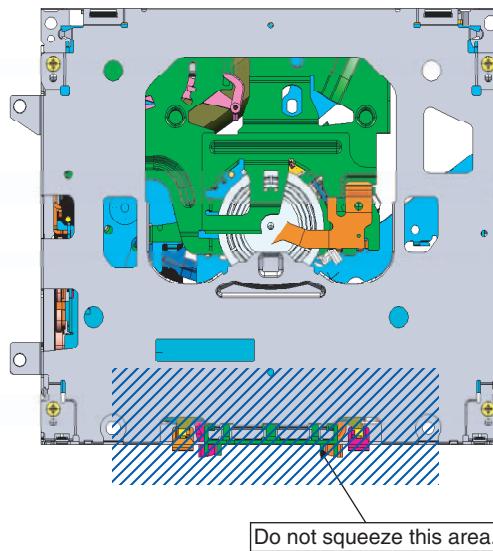

● Removing the Upper and Lower Frames


1. With a disc inserted and clamped in the mechanism, remove the two Springs (A), the six Springs (B), and the four Screws.
2. Turn the Upper Frame using the part "a" as a pivot, and remove the Upper Frame.
3. While lifting the Carriage Mechanism, remove it from the three Dampers.

Caution: When assembling, be sure to apply some alcohol to the Dampers and assemble the mechanism in a clamped state.

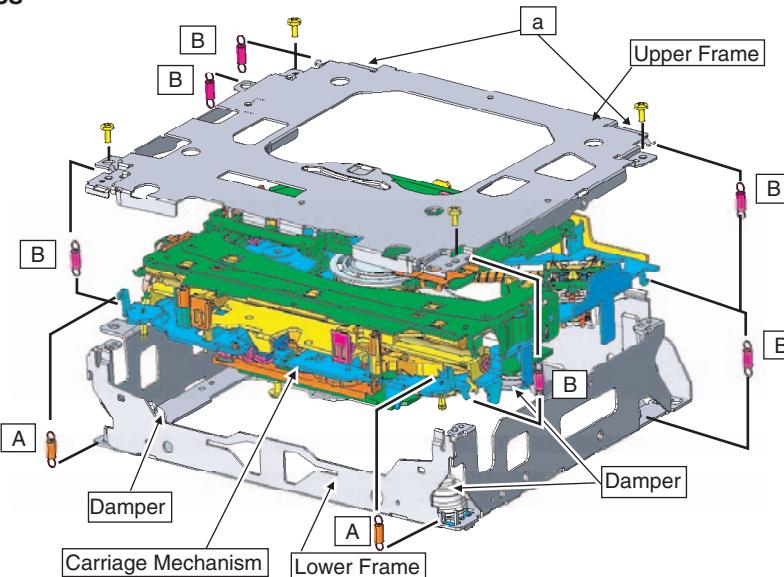

● How to remove the CD Core Unit

1. Apply Shorting Solder to the flexible cable of the Pickup, and disconnect it from the connector.
2. Unsolder the four leads, and loosen the Screw.
3. Remove the CD Core Unit.
Caution: When assembling the CD Core Unit, assemble it with the SW in a clamped state so as not to damage it.

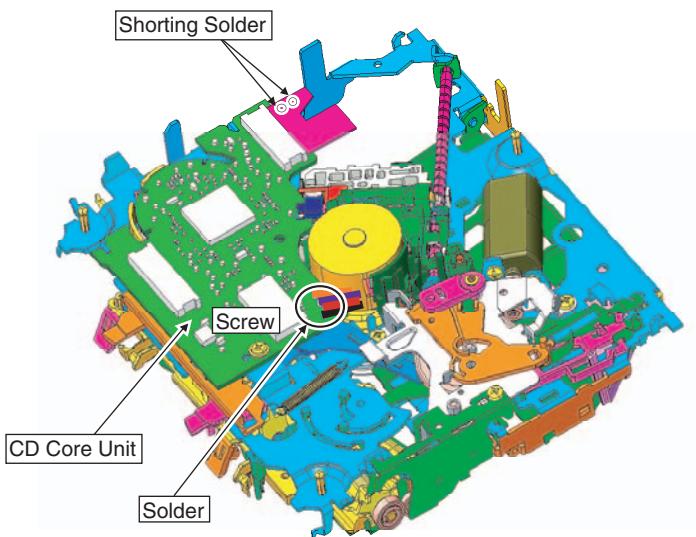


● How to remove the Pickup Unit


1. Make the system in the carriage mechanism mode, and have it clamped.
2. Remove the CD Core Unit and remove the leads from the Inner Holder.
3. Remove the Poly Washer, Change Arm, and Pickup Lock Arm.
4. While releasing from the hook of the Inner Holder, lift the end of the Feed Screw.

Caution: When assembling, move the Planet Gear to the load/eject position before setting the Feed Screw in the Inner Holder.

Assemble the sub unit side of the Pickup, taking the plate (Chassis) in-between. When treating the leads of the Load Carriage Motor Assy, do not make them loose over the Feed Screw.

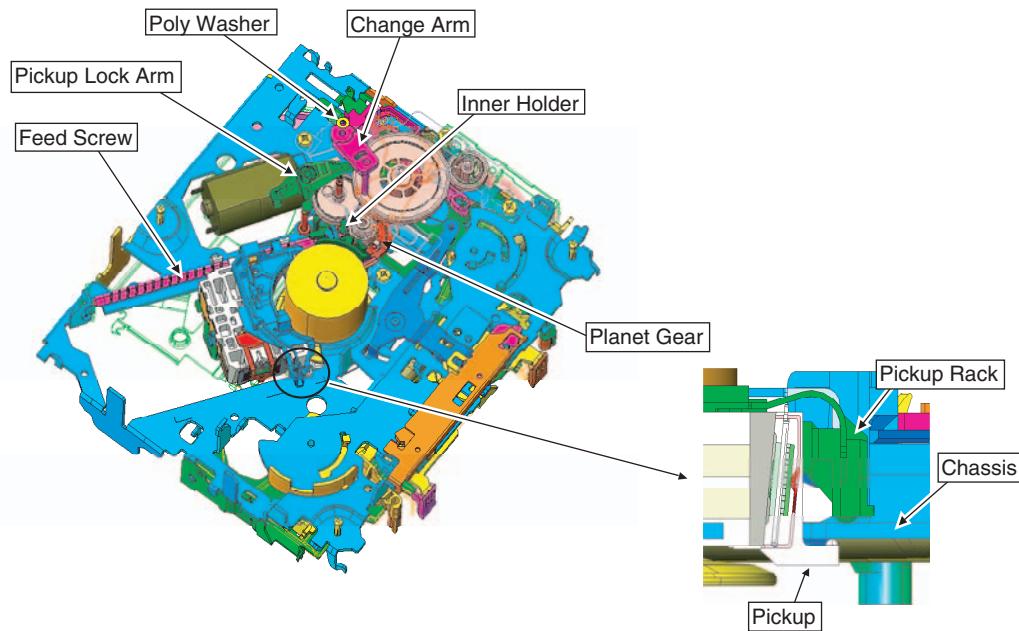

7.1.2 CONNECTOR FUNCTION DESCRIPTION

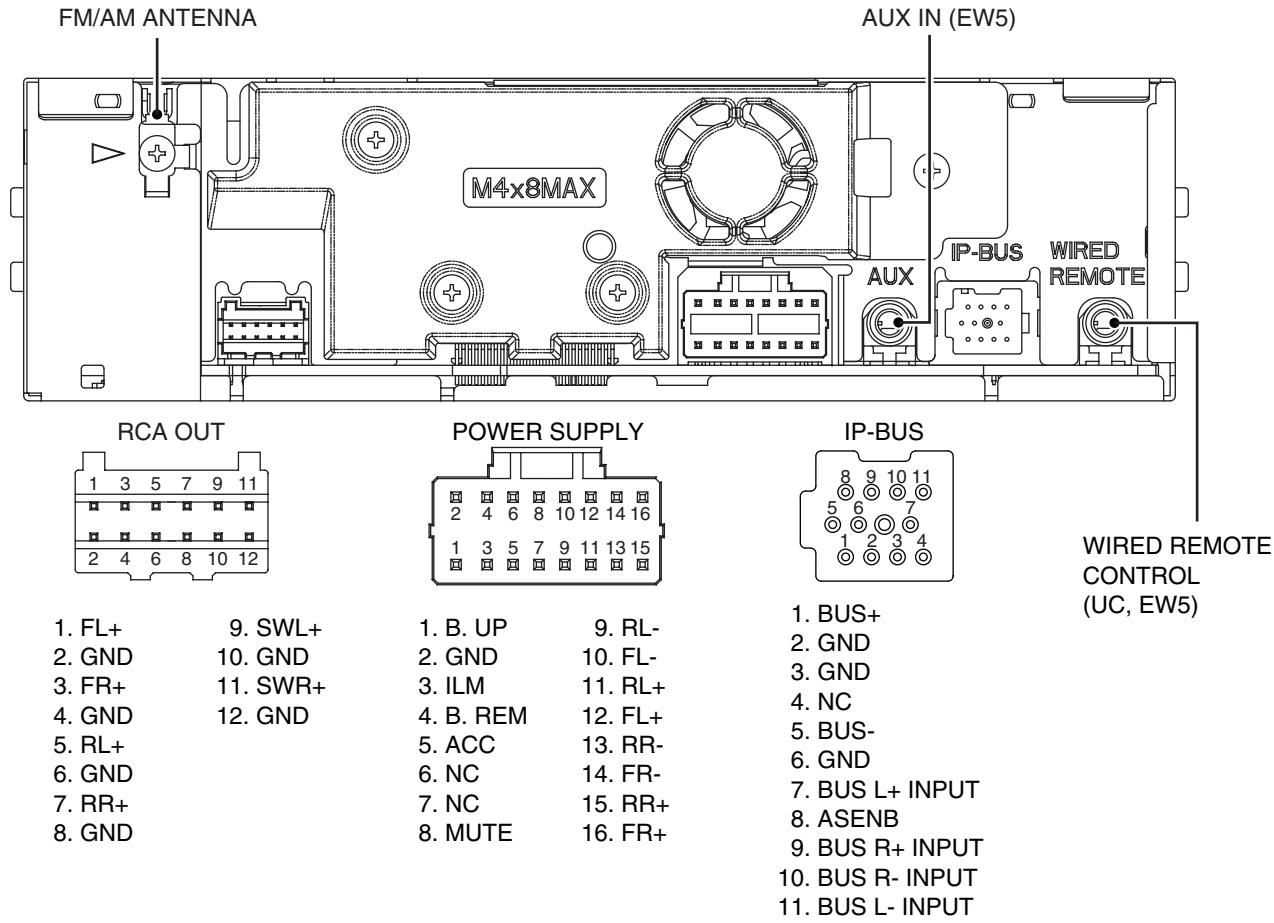

7.2 IC

1


2

3

4


A	HA12241FP TC7SH08FUS1 AK7732VT PCM1793DB PM9009A TC74VHCT08AFTS1 TC74VHC08FTS1 BR25L320F-W PEG178A	PEG176A PAL007B PEG179A PD8160A GP1UX51RK UPD63763CGJ PE5561A BR93L56RFVM-W NJM2886DL3-33
---	--	---

B HA12241FP

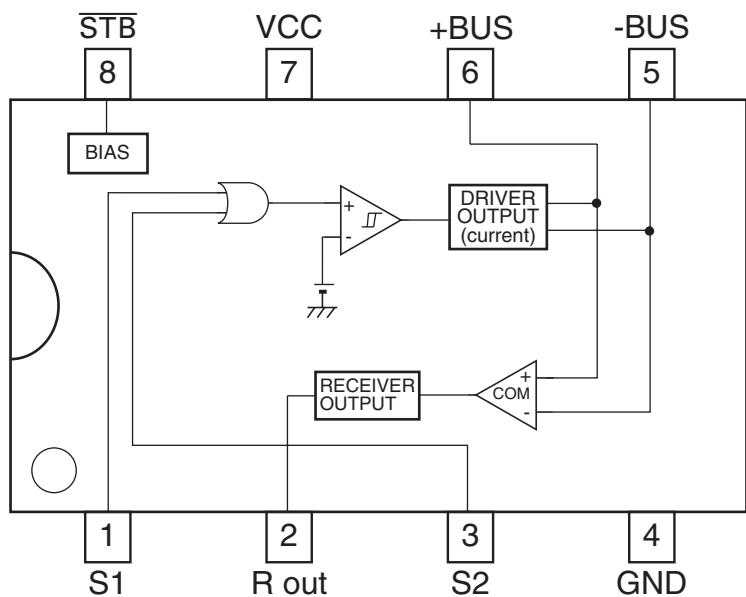

C

* TC7SH08FUS1

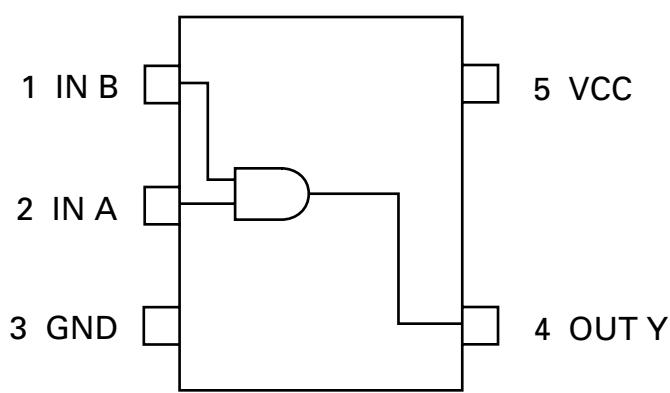


E

IC's marked by * are MOS type.
Be careful in handling them because they are very
liable to be damaged by electrostatic induction.


F

* AK7732VT

● Pin Layout

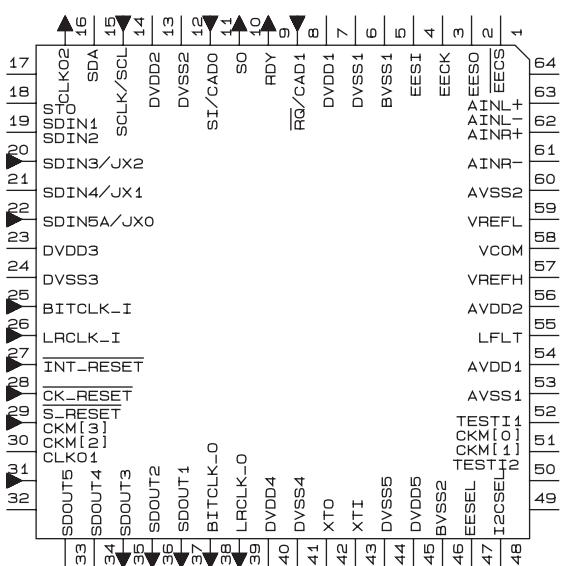

● Block Diagram

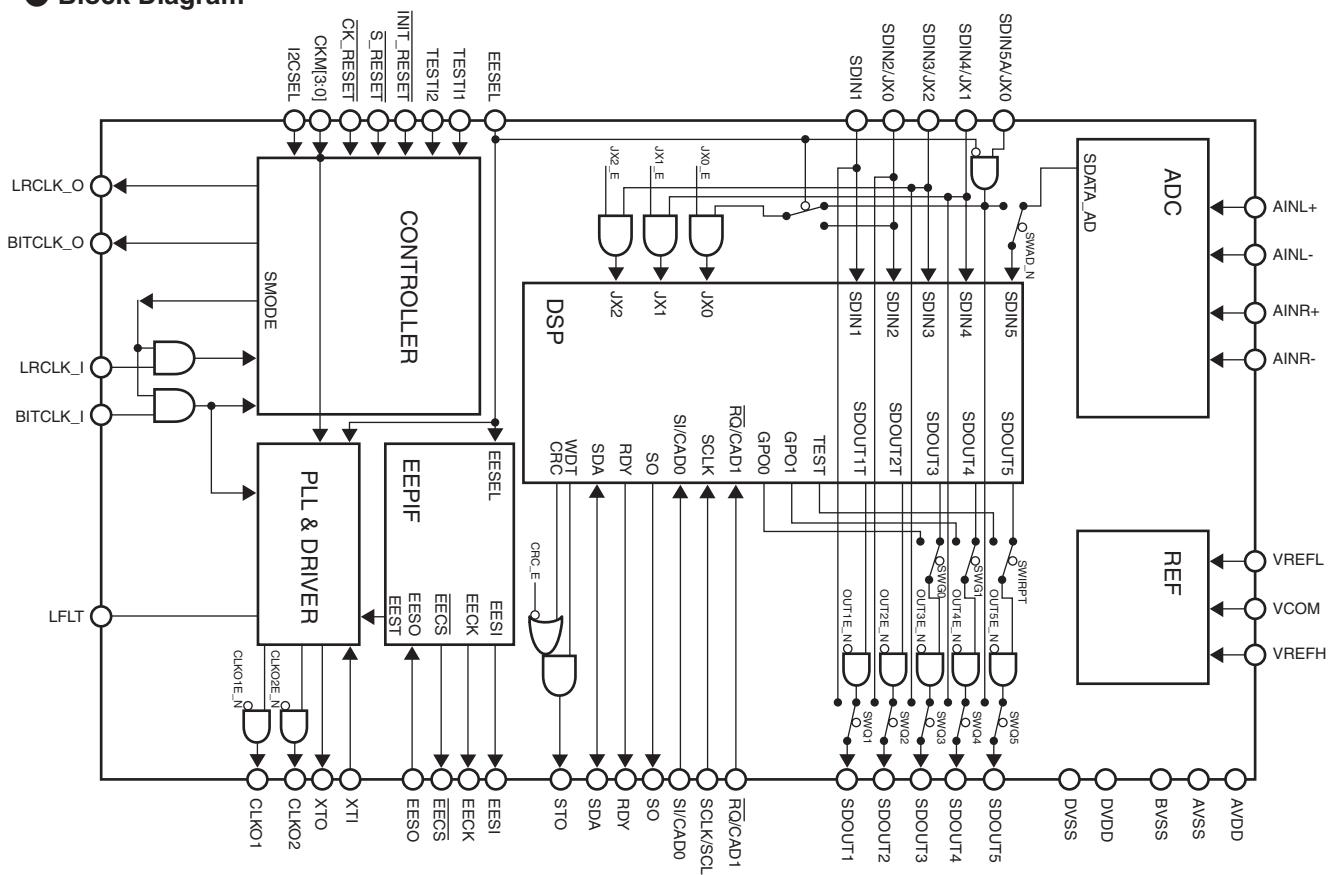


* PCM1793DB

● Pin Layout

LRCK	1	FMT2
BCK	2	FMT1
DATA	3	FMT0
MUTE	4	DEMP1
SCK	5	DEMP0
RST	6	ZEROL
VDD	7	ZEROR
DGND	8	VCCF
AGNDF	9	VCCL
VCCR	10	AGNDL
AGNDR	11	VOUTL
VOUTR	12	VOUTL+
VOUTR+	13	AGNDC
VCOM	14	VCCC

● Block Diagram

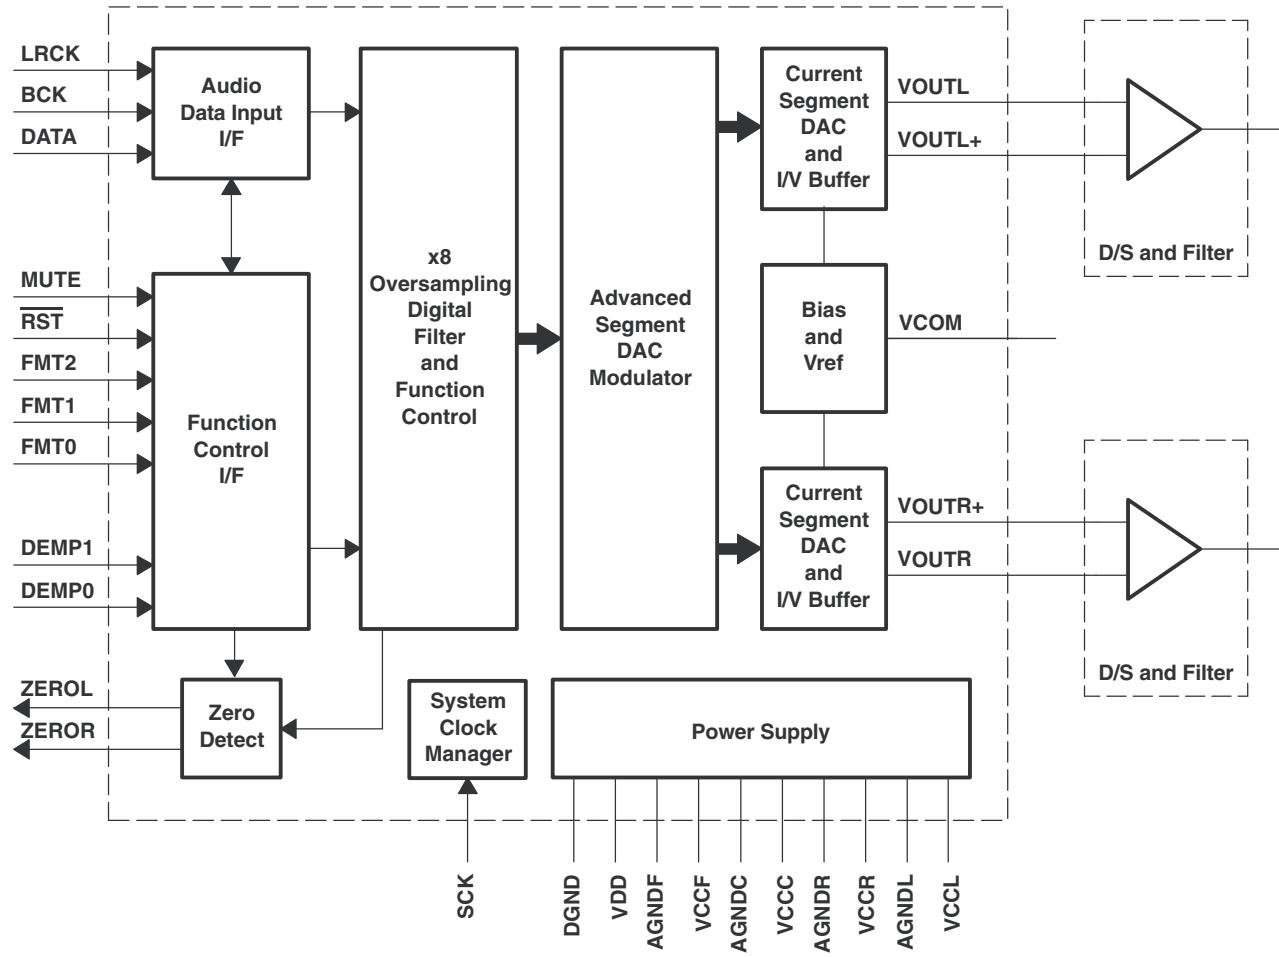

● Pin Functions(PM9009A)

Pin No.	Pin Name	I/O	Function and Operation
1	Si1L+	I	Stereo source signal input 1 Lch (Balance : Hot)
2	Si1L-	I	Stereo source signal input 1 Lch (Balance : Cold)
3	Si1R+	I	Stereo source signal input 1 Rch (Balance : Cold)
4	Si1R-	I	Stereo source signal input 1 Rch (Balance : Hot)
5	S.GND.1		Signal GND
6	Si2L	I	Stereo source signal input 2 Lch
7	Si2R	I	Stereo source signal input 2 Rch
8	S.GND.2		Signal GND
9	Si3L	I	Stereo source signal input 3 Lch
10	Si3R	I	Stereo source signal input 3 Rch
11	Si4L	I	Stereo source signal input 4 Lch
12	Si4R	I	Stereo source signal input 4 Rch
13	S.GND.3		Signal GND
14	So2L	O	Source selector signal output 2 Lch
15	So2R	O	Source selector signal output 2 Rch
16	So1L	O	Source selector signal output 1 Lch
17	So1R	O	Source selector signal output 1 Rch
18	S.GND.4		Signal GND
19	Vi1	I	Volume signal input 1ch
20	Vi2	I	Volume signal input 2ch
21	S.GND.5		Signal GND
22	Vi3	I	Volume signal input 3ch
23	Vi4	I	Volume signal input 4ch
24	S.GND.6		Signal GND
25	Vi5	I	Volume signal input 5ch
26	Vi6	I	Volume signal input 6ch
27	S.GND.7		Signal GND
28	Vi7	I	Volume signal input 7ch
29	Vo1a	O	Volume signal output 1ch (for RCA-out)
30	Vo2a	O	Volume signal output 2ch (for RCA-out)
31	Vo3a	O	Volume signal output 3ch (for RCA-out)
32	Vo4a	O	Volume signal output 4ch (for RCA-out)
33	Vo5a	O	Volume signal output 5ch (for RCA-out)
34	Vo6a	O	Volume signal output 6ch (for RCA-out)
35	Vo7a	O	Volume signal output 7ch (for RCA-out)
36	Vo1b	O	Volume signal output 1ch (for Power-IC)
37	Vo2b	O	Volume signal output 2ch (for Power-IC)
38	Vo3b	O	Volume signal output 3ch (for Power-IC)
39	Vo4b	O	Volume signal output 4ch (for Power-IC)
40	Vo5b	O	Volume signal output 5ch (for Power-IC)
41	Vo6b	O	Volume signal output 6ch (for Power-IC)
42	D.GND		Digital GND
43	SDA	I	Microcomputer interface serial data signal input
44	SCK	I	Microcomputer interface serial clock signal input
45	CS	I	Microcomputer interface chip select signal input
46	FCKSEL	I	Select input of VCO oscillation frequency
47	Vee		Power supply
48	NC1		Not used
49	NC2		Not used
50	P.GND		Power GND
51	NC3		Not used
52	Vcc		Power supply
53	ADJ		Adjustment of VCO oscillation frequency
54	S.GND.MU		Signal GND
55	EXi+	I	Monaural source signal input (Balance : Hot)
56	EXi-	I	Monaural source signal input (Balance : Cold)

A

B


C

D


E

F


* PM9009A

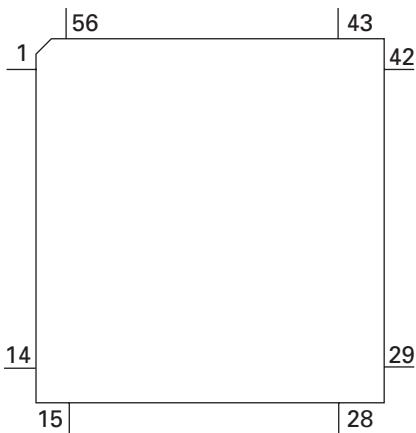

* TC74VHCT08AFTS1

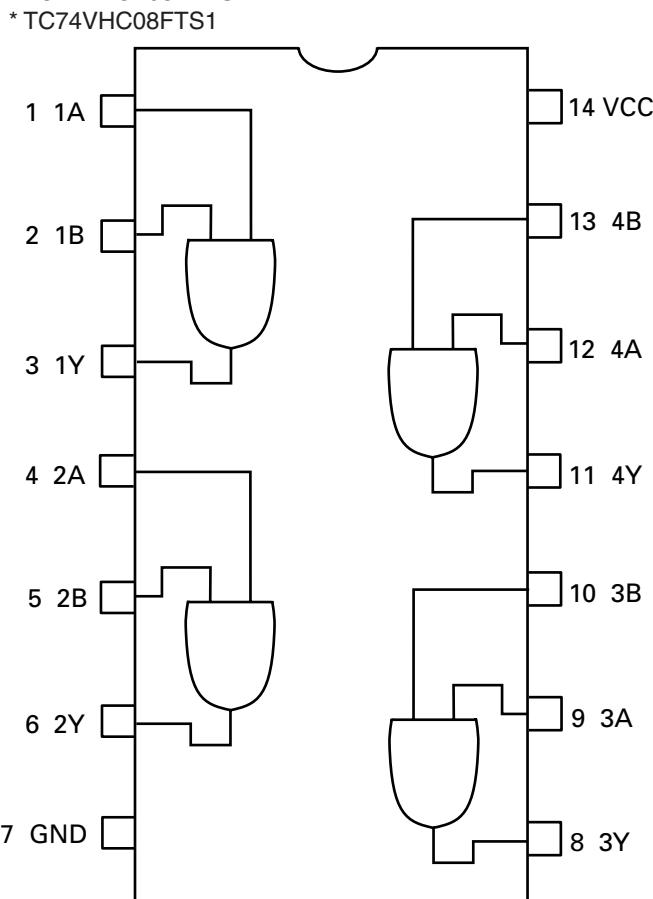

* BR25L320F-W

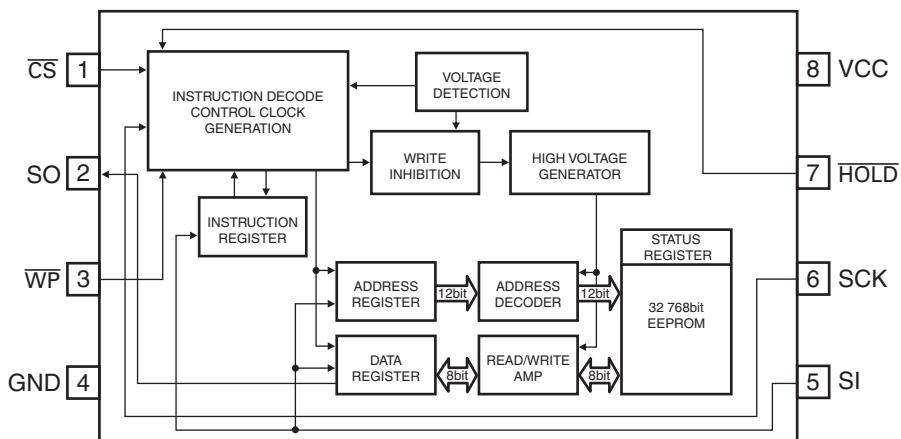

● Pin Functions(PEG178A : UC and ES model, PEG176A : EW5 model)

Pin No.	Pin Name	I/O	Function and Operation
1	TUNPCE1	O	TUNER : Chip enable output (PLL)
2	TUNPCE2	O	TUNER : Chip enable output (EEPROM)
3	DSPOUT	O	DSP, E.VOL : Data output
4	DSPIN	I	DSP : Data input
5	DSPCK	O	DSP, E.VOL : Clock output
6	BYTE	I	External data bus width change input
7	CNVSS	I	Processor mode change input
8	IPPW	O	IP-BUS : Driver power supply control output
9	ASENBO	O	IP-BUS : Slave ACC sense output
10	RESET	I	Reset input
11	XOUT	O	Crystal oscillating element connection output
12	VSS		GND
13	XIN	I	Crystal oscillating element connection input
14	VCC		Power supply
15	NMI		Not used
16	RCK	I	RDS : Clock input (EW)
17	LDET	I	RDS : PLL Lock detect input (EW)
18	AMPPW	O	Power amplifier power supply control output
19	RX2	I	IP-BUS : Data input 2
20	FCKSEL	O	Switch output of VCO oscillation frequency
21	EVOLCS	O	E.VOL : Chip select output
22	PEE	O	BEEP sound output
23	SYSPW	O	System power control output
24	DSPPW	O	DSP : Power control output
25	DALMON	O	For consumption low-current output
26	MUTE	O	Mute output
27	RX	I	IP-BUS : Data input
28	TX	O	IP-BUS : Data output
29	BSO	O	PBUS : Serial data output
30	BSI	I	PBUS : Serial data input
31	BSCK	O	PBUS : Clock output
32	KEYD	I	Wired remote control key input (UC, EW)
33	DPDT	O	GRILLE : Data output
34	KYDT	I	GRILLE : Data input
35	MCKCONT		Not used
36	MCKRQ	I	Master clock request input
37	PCL	O	Output for clock adjustment
38	NC		Not used
39	RDS57K	I	RDS : 57 kHz count pulse input (EW)
40	DSP_RAMCLR	O	DSP : RAM clear output
41	INIT_RESET	O	DSP : System reset output
42	CK_RST	O	DSP : Clock reset output
43	DSPS_RST	O	DSP : System reset output
44	CKM[2]	O	DSP : Clock mode select output
45	AMTPW		Not used
46	DSPRQ	O	DSP : Interface request output
47	DSPRDY	I	DSP : Data write ready input
48	BSRQ	I	PBUS : Communication request output
49	BRST	O	PBUS : Reset output
50	BRXEN	I/O	PBUS : Communication input/output
51	LRCKOK	I	DSP : Clock stability information input
52	JSNSON1	O	"H" output at Jack sense mode (UC, ES)
53	CDRESET	O	CD : Microcomputer reset output
54	DIM_WH	O	Key illumination dimmer output (White)
55	DIM_BL	O	Key illumination dimmer output (Blue)(UC, ES)
56	ILMPW	O	Illumination output
57	SWVDD	O	GRILLE : Chip enable output
58	OELPW	O	OEL : Power supply output
59	MODEL	I	Model select input (UC, ES)
60	VCC		Power supply
61	DSPMOD	I	DSP : STD/NW setting input
62	VSS		GND

A

B

C

D


E

F

A

Pin No.	Pin Name	I/O	Function and Operation
63	ROMCS		OPEN
64	ROMCK		OPEN
65	ROMDATA		Pull up
66	TELIN	I	TEL mute input
67	ROMSCK	O	1day backup : Clock output
68	ROMSO	O	1day backup : Data output
69	ROMSI	I	1day backup : Data input
70	ROMCSB	O	1day backup : Chip select output
71	NC		Not used
72	ASENS	I	ACC sense input
73	BSENS	I	Backup sense input
74	ISENS	I	Illumination sense input
75	ROT1	I	Rotary encoder pulse input 1
76	ROT0	I	Rotary encoder pulse input 0
77	FLPILM	O	Inside of flap illumination output
78	FLPPW	O	Flap motor driver power ON/OFF output
79	FLPOPN	O	Flap motor open output
80	FLPCLS	O	Flap motor close output
81	FOPNSW	I	Flap open sense input
82	FCLSSW	I	Flap close sense input
83	AEQON	O	AEQ ON output (UC, ES)
84	AUXON	O	AUX ON output (UC, ES)
85	JSNSON2	O	"H" output at Jack sense mode (UC, ES)
86	TESTIN	I	Test program input
87	JCKSNS	I	Jack sense input
88	BTIND	I	Battery indicator input
89	RDSLK	I	RDS : Lock signal input (EW)
90	RDT	I	RDS : Data input (EW)
91	DSENS	I	Detach sense input
92	KEYAD	I	Wired remote control key input (UC, EW)
93	ASLIN	I	ASL input (EW)
94	AVSS		Analog GND
95	SL	I	Signal level input
96	VREF		Reference voltage
97	AVCC		Analog power supply
98	TUNPDI	I	TUNER : PLL communication data input
99	TUNPDO	O	TUNER : Data output(PLL)
100	TUNPCK	O	TUNER : Clock output(PLL)

* PEG178A, PEG176A

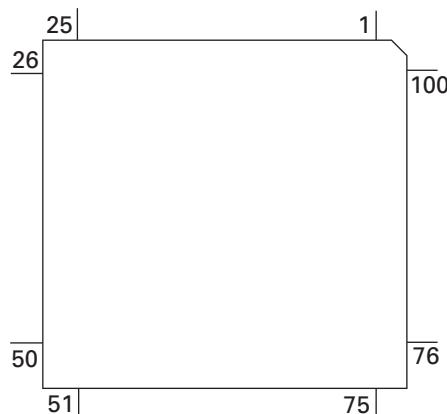


E

F

PAL007B


TAB	1
P-GND2	2
OUT2-	3
STBY	4
OUT2+	5
VCC	6
OUT1-	7
P-GND1	8
OUT1+	9
SVR	10
IN1	11
IN2	12
S-GND	13
IN4	14
IN3	15
AC-GND	16
OUT3+	17
P-GND3	18
OUT3-	19
VCC	20
OUT4+	21
MUTE	22
OUT4-	23
P-GND4	24
SWITCH	25

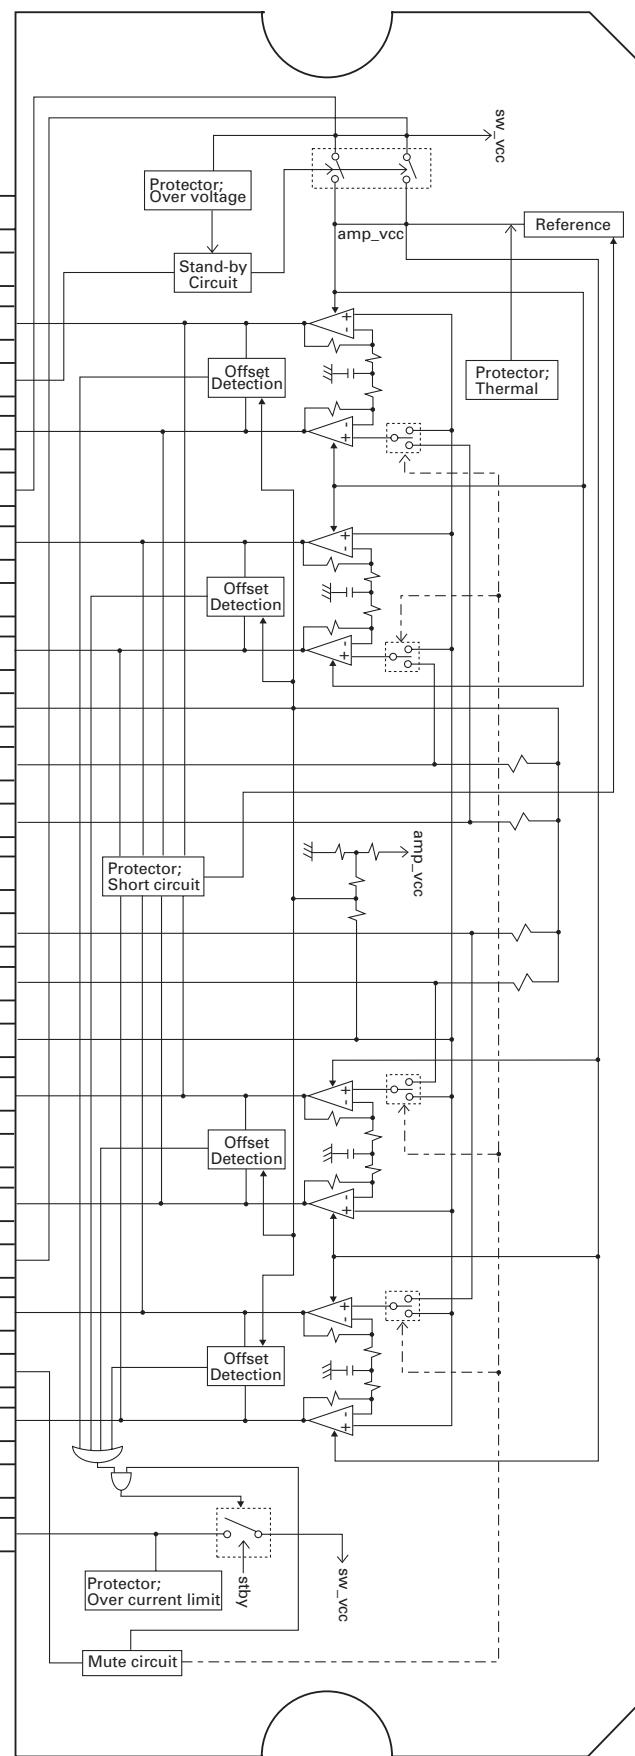

● Pin Functions (PEG179A)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	NC			Not used
2	ROMDT	I/O	C	ROM collection data input/output
3	ROMCS	O	C	ROM collection chip select output
4	REM	I		Remote control reception input
5	ROMCK	O	C	ROM collection clock output
6	BYTE	I		GND connection
7	CNVSS	I		GND connection
8, 9	NC			Not used
10	RESET	I		Pull up
11	XOUT			Crystal oscillating element connection pin
12	VSS1			GND connection
13	XIN			Crystal oscillating element connection pin
14	VCC1			VCC connection
15	NMI	I		NMI input
16	NC			Not used
17-20	KS1-4	O	C	Key strobe output
21	NC			Not used
22	DSEL	O	C	Display data select output
23	NC			Not used
24	CKD	O	C	OEL data transfer and driver clock output
25	NC			Not used
26	LS	O	C	OEL line synchronous signal output
27	DPDT	I		Display data communication input
28	KYDT	O	N	Key data communication output
29,30	ROT1,2	I		Rotary encoder pulse input
31,32	NC			Not used
33	OELD	O	C	Display data output
34	NC			Not used
35	CLK0	I		UART0 clock input
36	NC			Not used
37	RDY	I		RDY signal input
38	NC			Not used
39	HOLD	I		HOLD signal input
40,41	NC			Not used
42	RD	O	C	Read strobe output
43,44	NC			Not used
45-47	BANK2-0	O	C	Bank address output
48	CS0	O	C	External ROM chip select output
49	NC			Not used
50-59	A18-9	O	C	Address bus output
60	VCC2			VCC connection
61	A8	O	C	Address bus output
62	VSS2			GND connection
63-70	A7-0	O	C	Address bus output
71-86	D15-0	I/O	C	Data bus input/output
87	OFFMODE	O	C	LED output for light at the time of mode of display OFF
88	JOYST	I		Rotary encoder AD input
89	WHITE	O	C	White illumination ON output
90	BLUE	O	C	Blue illumination ON output
91-93	KD3-1	I		Key data input
94	AVSS			GND connection
95	KD3-1	I		Key data input
96	VREF			GND connection
97	AVCC			VCC connection
98-100	NC			Not used

* PEG179A

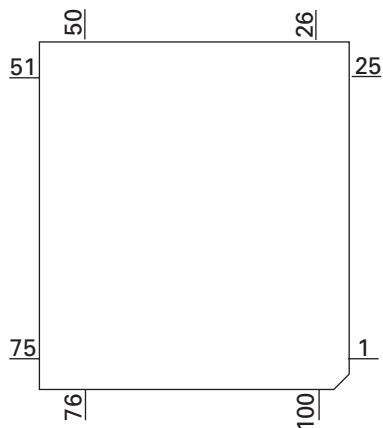

Format	Meaning
C	CMOS
N	Nch open drain

A

* PD8160A



NC	1	44	NC
A18	2	43	A19
A17	3	42	A8
A7	4	41	A9
A6	5	40	A10
A5	6	39	A11
A4	7	38	A12
A3	8	37	A13
A2	9	36	A14
A1	10	35	A15
A0	11	D15/A-1	:Data output/Address input
		A0-A19	:Address input
CE	12	D0-D14	:Data output
OE	13	CE	:Chip enable
VSS	14	OE	:Output enable
		BYTE	:Mode switch
		VCC	:Power supply
		VSS	:GND
		NC	:Not used
D0	15		
D8	16		
D1	17		
D9	18		
D2	19		
D10	20		
D3	21		
D11	22		
		34	A16
		33	BYTE
		32	VSS
		31	D15/A-1
		30	D7
		29	D14
		28	D6
		27	D13
		26	D5
		25	D12
		24	D4
		23	VCC

B

C

D

GP1UX51RK

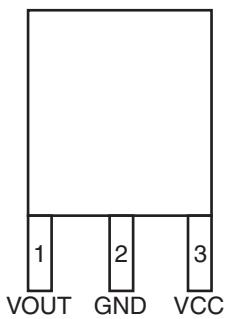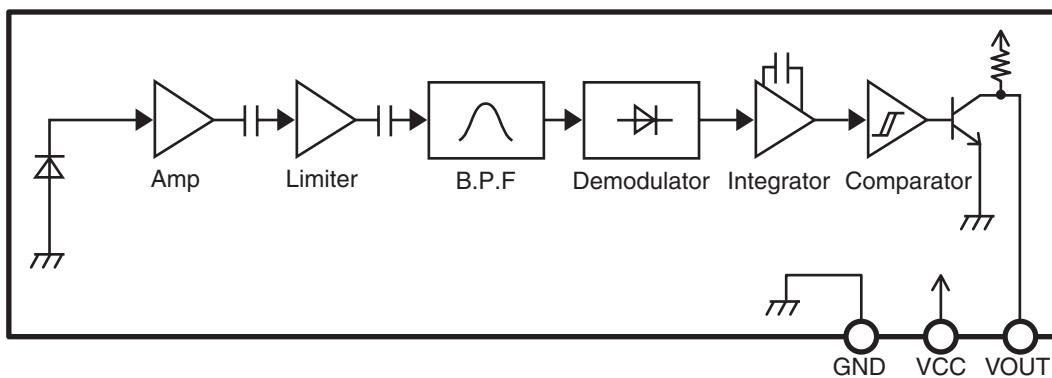● Pin Layout**● Block Diagram**

E


F

● Pin Functions (UPD63763CGJ)

Pin No.	Pin Name	I/O	Function and Operation
1	D.VDD		Power supply for digital circuits
2	D1.GND		Ground for 1.6 V digital circuits
3	RESET	I	Input of reset
4-8	AB12-8	I	Address bus 12-8 from the microcomputer
9-16	AD7-0	I/O	Address/data bus 7-0 to the microcomputer
17	CS	I	Chip selection
18	ASTB	I	Address strobe
19	READ	I	Control signals(read)
20	WRITE	I	Control signals(write)
21	WAIT	O	Control signals(wait)
22	INTQ	O	Interruption signals to the external microcomputer
23,24	IFMODE0,1	I	Switching the microcomputer I/F 0, 1
25	D1.VDD		Power supply for 1.6 V digital circuits
26	DA.VDD		Power supply for DAC
27	ROUT	O	Output of audio for the right channel
28	DA.GND		Ground for DAC
29	REGC		Connected to the capacitor for band gap
30	DA.GND		Ground for DAC
31	LOUT	O	Output of audio for the left channel
32	DA.VDD		Power supply for DAC
33	X.VDD		Power supply for the crystal oscillator
34	XTAL	I	Connected to the crystal oscillator(16.9344 MHz)
35	XTAL	O	Connected to the crystal oscillator(16.9344 MHz)
36	X.GND		Ground for the crystal oscillator
37	VDDREG15		Control of 1.6 V regulator
38	PWMSW0	I	Setup 0 for PWM output(SD, MD)
39-41	TEST3-1	I	Connected to Ground
42	PWMSW1	I	Setup 1 for PWM output(FD, TD)
43	TESTEN	I	Connected to Ground
44	D1.GND		Ground for 1.6 V digital circuits
45	DIN	I	Input of audio data
46	DOUT	O	Output of audio data
47	SCKIN	I	Clock input for audio data
48	SCKO	O	Clock output for audio data
49	LRCKIN	I	Input of LRCK for audio data
50	LRCK	O	Output LRCK for audio data
51	XTALEN	I	Permission to oscillate 16.9344 MHz
52	D1.VDD		Power supply for 1.6 V digital circuits
53	RFCK/HOLD	O	Output of RFCK/HOLD signal
54	WFCK/MIRR	O	Output of WFCK/MIRR signal
55	PLCK/RFOK	O	Output of PLCK/Output of RFOK
56	LOCK/RFOK	O	Output of LRCK/Output of RFOK
57	C1D1/C8M/(RA13)	O	Information on error correction/C8M : 8 MHz
58	C1D2/C16M/(RA12)	O	Information on error correction/C16M : 16 MHz
59	C2D1/RMUTE	O	Information on error correction/Mute for Rch
60	C2D2/LMUTE	O	Information on error correction/Mute for Lch
61	C2D3/SHOCK	O	Information on error correction/Detection of vibration
62	D1.GND		Ground for 1.6 V digital circuits
63	C33M	O	Output of 33.8688 MHz(CLK for SDRAM)
64	(RCS)	O	DRAM CS
65	RA11	O	Output of DRAM address 11
66	(CKE)	O	Output of DRAM CKE
67	RAS	O	Output of DRAM RAS
68	CAS0(LDQM)	O	Output of DRAM lower CAS(LDQM)
69	CAS1(UDQM)	O	Output of DRAM upper CAS(UDQM)

Pin No.	Pin Name	I/O	Function and Operation
70	WE	O	Output of DRAM WE
71	OE(CAS)	O	Output of DRAM OE(CAS)
72	D.GND		Ground for digital circuits
73-88	RDB0-15	I/O	Input/output of DRAM data0-15
89-99	RA0-10	O	Output of DRAM address0-10
100	D.VDD		Power supply for digital circuits
101	FD+	O	Output of focus drive PWM +
102	FD-	O	Output of focus drive PWM -
103	TD+	O	Output of tracking drive PWM +
104	TD-	O	Output of tracking drive PWM -
105	SD+	O	Output of thread drive PWM +
106	SD-	O	Output of thread drive PWM -
107	MD+	O	Output of spindle drive PWM +
108	MD-	O	Output of spindle drive PWM -
109	REFOUTSV	O	REFOUT for servo
110	AD.VDD		Power supply for ADC
111	EFM	O	Output of EFM signals
112	ASY	I	Input of asymmetry
113	ATEST	O	Analog tests
114	RFI	I	Input of RF
115	AD.GND		Ground for the analog system
116	AGCO	O	Output of RF
117	C3T	O	Connection to the capacitor for detecting 3T
118	AGCI	I	Input of AGC
119	RFO	O	Output of RF(AGC)
120,121	EQ2,1	I	Equalizer 2, 1
122	RF2-	I	Reversal input of RF2
123	RF-	I	Reversal input of RF
124	A.GND		Ground for the analog system
125	A	I	Input of A
126	C	I	Input of C
127	B	I	Input of B
128	D	I	Input of D
129	F	I	Input of F
130	E	I	Input of E
131	VREFIN	I	Input of reference voltage
132	A.VDD		Power supply for the analog system
133	REFOUT	O	Output of reference voltage
134	REFC	I	Connected to the capacitor for output of REFOUT
135	FE-	I	Reversal input of FE
136	FEO	O	Output of FE
137	ADIN	I	Input of FE, TE A/D converter
138	TE-	I	Reversal input of TE
139	TEO	O	Output of TE
140	TE2	O	TE2
141	TEC	I	TEC
142	LD	O	Output of LD
143	PD	I	Input of PD
144	D.GND		Ground for digital circuits

* UPD63763CGJ

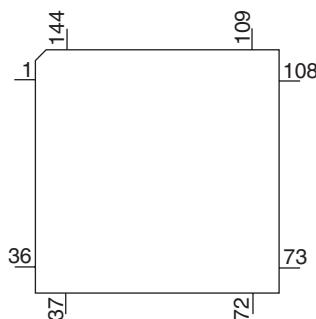


● Pin Functions (PE5561A)

	Pin No.	Pin Name	I/O	Format	Function and Operation
A	1	AVREF			A power supply / Positive power supply(5V)
	2	AVSS			A power supply GND
	3	TESTIN	I		Chip check test program starting input
	4	CLAMP			Not used
	5	EVDD			E power supply / Positive power supply
	6	FMODE			For flash rewriting / L : flash rewriting mode
	7	FLRQ			For flash rewriting / Reset voltage control
	8	IC/FLMDO			IC : VSS direct connection/FLMOD0 : Pull-down
	9	VDD			Positive power supply(5V)
	10	REGC			Connected to the capacity stabilizing output of the regulator
	11	VSS			GND
B	12	X1	I		Oscillator connection for mainclock
	13	X2			Oscillator connection for mainclock
	14	RESET	I		System reset input
	15	XT1	I		Connected to the oscillator for subclock(connected to VSS via the resistor)
	16	XT2			Connected to the oscillator for subclock(Open)
	17	PULLDOWN	I		Connected to EVDD or EVSS via the resistor
	18	EJSW			Not used
C	19	XINT	I	C	CD LSI interruption signal input
	20	NC			Not used
	21	BRST	I		Bus reset input
	22	BSI	I		Bus serial data input
	23	BSO	O	C	Bus serial data output
	24	BSCK	I/O	/C	Bus serial clock input/output
	25	FTxD	O	C	For flash rewriting(transmitted signal)
	26	FRxD	I		For flash rewriting(received signal)
	27	BRXEN	I/O	/C	Bus RX enable input/output
	28	BSRQ	I/O	/C	Bus serial clock input/output
D	29	DSPOK			Not used
	30	DSCSNS	I	C	Disc state sense input
	31	8EJ(S905)	I	C	input of detection of 8 cm disc ejection
	32	12EJ(S904)	I	C	input of detection of 12 cm disc ejection
	33	EVSS			E power supply GND
	34	EVDD			E power supply / Positive power supply
	35,36	SRAMLEVEL0,1	O		SRAM level meter output
	37	EMPH	O	C	Emphasis information output
	38	EMPH			Not used
	39	CDMUTE			Not used
E	40	LOEJ			Not used
	41	CLCONT	O		Driver input switching output
	42	HOME	I		Home SW sense input
	43	ADENA	O	C	A/D reference voltage supply control output
	44	LRCKOK	O	C	(DOUT mute output)
	45	SRAMLEVEL2	O	C	SRAM level meter output
	46	CD3VON(MCKRQ)	O	C	CD + 3.3 V power supply control output(Digital output : MCKRQ)
	47	CONT	O	C	Servo driver power supply control output
	48	XRST	O	C	CD LSI reset control output
	49	VDCONT	O	C	VD power supply control output
F	50	XSI	I		CD LSI serial data input
	51	XSO	O	C	CD LSI serial data output
	52	XCK	O	C	CD LSI serial clock output
	53	XWAIT	I	C	CD LSI wait control signal input
	54	XASTB	O	C	CD LSI address strobe output
	55	AD0	O	C	Address/data Bus 0
	56	INT			Not used


Pin No.	Pin Name	I/O	Format	Function and Operation
57	ROMDATA	I/O		E2PROM data input/output
58	ROMCK	O		E2PROM clock output
59	ROMCS	O	C	E2PROM chip selection output
60,61	NC			Not used
62	CLKOUT			Not used
63	LOCK	I		Spindle lock input
64-68	NC			Not used
69	BVSS			B power supply GND
70	BVDD			B power supply / Positive power supply
71-75	NC			Not used
76	FLMD1	I/O	/C	Address/Data Bus 5
77-90	NC			Not used
91-93	A/D			Not used
94	CSENS			Not used
95	TYPE_A/D			Not used
96,97	NC			Not used
98	TEMP			Not used
99	VDSENS	I		VD power supply short sense input
100	DSCSNS			Not used

* PE5561A

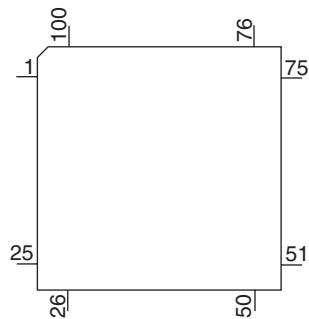


Format	meaning
C	C MOS


* BR93L56RFVM-W

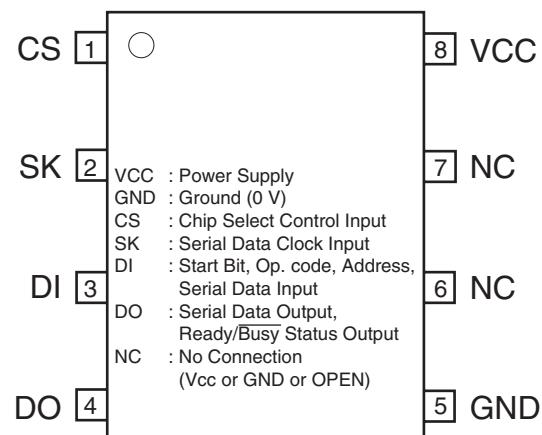

NJM2886DL3-33

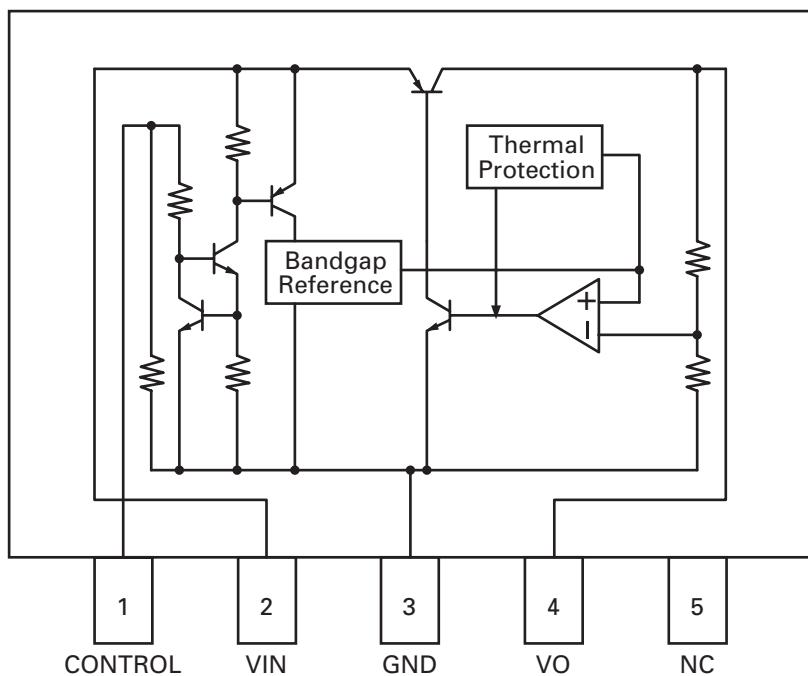


● FM/AM Tuner Unit

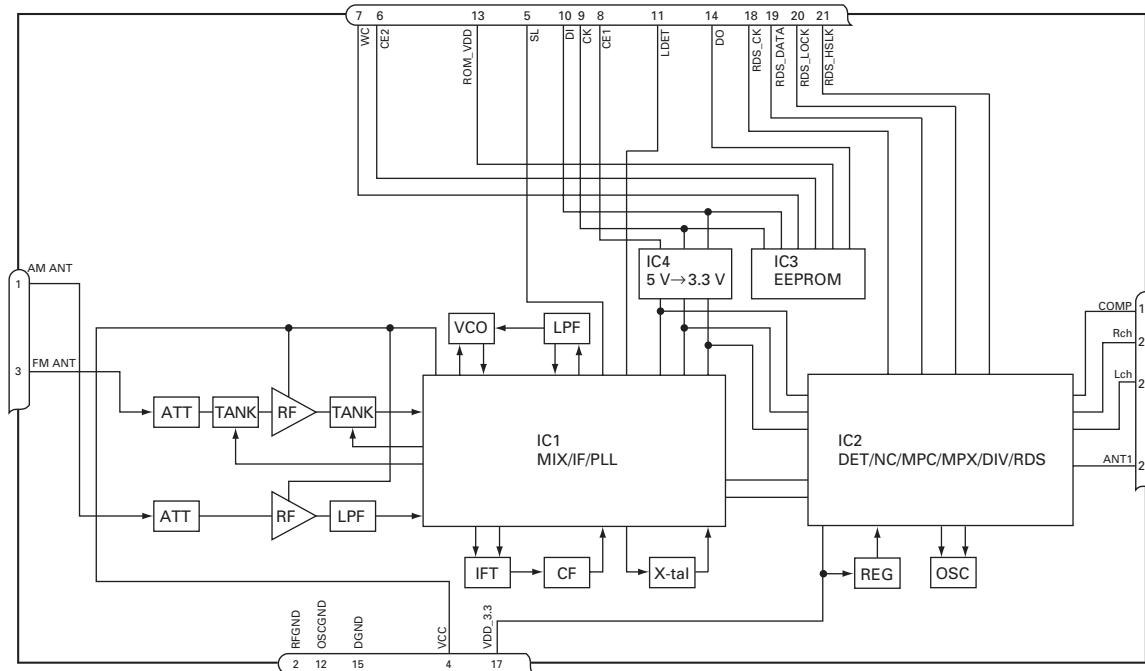


No.	Symbol	I/O	Explain
1	AMANT	I	AM antenna input high impedance AMANT pin is connected with an all antenna by way of 33 μ H. (LAU type inductor) A series circuit including an inductor and a resistor is connected with RF ground for the countermeasure against the hum of power transmission line.
2	RFGND		RF ground
3	FMANT	I	FM antenna input Input of FM antenna 75 Ω Surge absorber is necessary.
4	VCC		power supply The power supply for analog block. D.C 8.4 V \pm 0.3 V
5	SL	O	signal level Output of FM/AM signals level
6	CE2	I	chip enable-2 Chip enable for EEPROM "Low" active
7	WC	I	write control You can write EEPROM, when EEPROM write control is "Low". Ordinary non connection
8	CE1	I	chip enable-1 Chip enable for AF•RF "High" active
9	CK	I	clock Clock data input
10	DI	I	data in Data input
11	LDET	O	lock detector "Low" active
12	OSCGND		osc ground Ground of oscillator block
13	ROM_VDD		power supply Power supply for EEPROM pin 13 is connected with a power supply of micro computer.
14	DO	O	data out Data output
15	DGND		digital ground Ground of digital block
16	COMP	O	composite output FM composite signal output.
17	VDD_3.3		power supply The power supply for digital block. 3.3 V \pm 0.2 V
18	RDS_CK	O	RDS clock Output of RDS clock(2.5 V)
19	RDS_DATA	O	RDS data Output of RDS data(2.5 V)
20	RDS_LOCK	O	RDS lock Output unit "High" active(2.5 V) (RDS_LOCK turns over by the external transistor. "Low" active)
21	RDS_HSLK	O	RDS high speed lock Output unit "High" active(2.5 V)(RDS_HSLK turns over by the external transistor. "Low" active)
22	ANT1		diversity antenna control Antenna switch control signal output. "High" : MAIN, "Low" =SUB
23	L ch	O	L channel output FM stereo "L-ch" signal output or AM audio output
24	R ch	O	R channel output FM stereo "R-ch" signal output or AM audio output

7.3 OPERATIONAL FLOW CHART

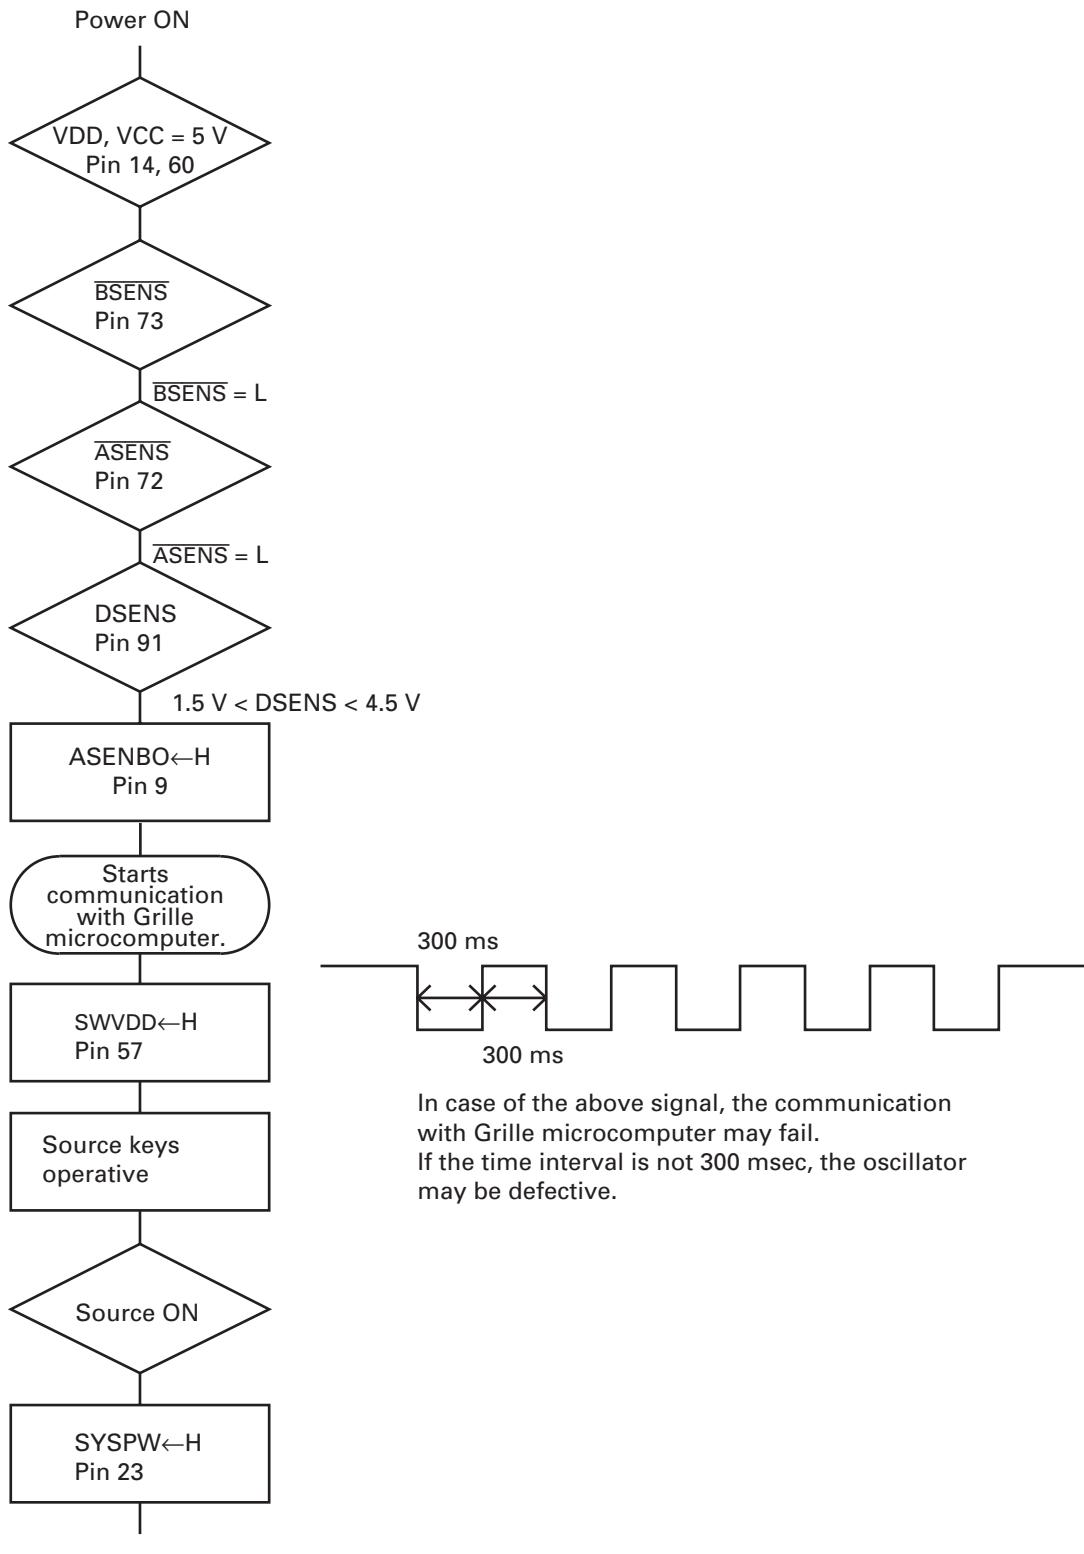

8. OPERATIONS

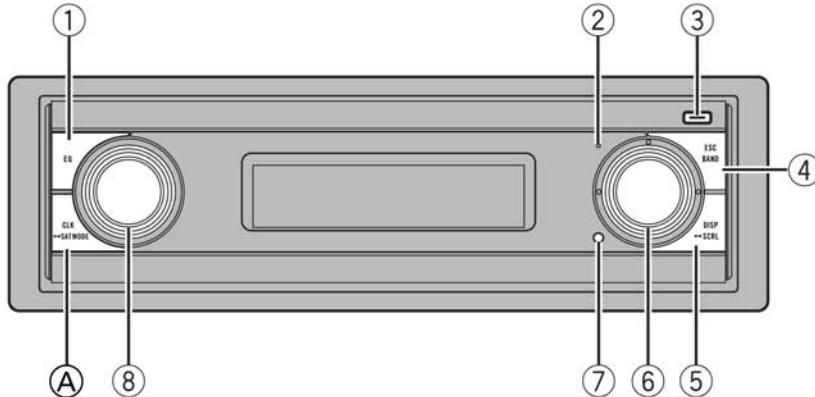

Head unit

① EQ button

Press to select various equalizer curves.

② Display off indicator

Lights up when the display is turned off.

③ EJECT button

Press to eject a CD from your built-in CD player.

Press and hold to open or close the front panel.

④ BAND button

Press to select among three FM bands and one AM band and to cancel the control mode of functions.

⑤ DISPLAY button

Press to select different displays.

⑥ MULTI-CONTROL

Move to perform manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

Turn to display the disc title list, track title list, folder list, file list or preset channel list depending on the source.

⑦ RESET button

Press to reset the microprocessor.

⑧ SOURCE button, VOLUME

This unit is turned on by selecting a source. Press to cycle through all the available sources.

Rotate it to increase or decrease the volume.

Ⓐ CLOCK button (UC, ES)

Press to change to the clock display. □

TA button (EW5)

Press to turn TA function on or off. Press and hold to turn NEWS function on or off. □

Remote control

Operation is the same as when using the buttons on the head unit.

⑨ VOLUME buttons

Press to increase or decrease the volume.


⑩ FUNCTION button

Press to select functions.

⑪ Joystick

Move to perform manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

Press to display the disc title list, track title list, folder list, file list or preset channel list depending on the source.

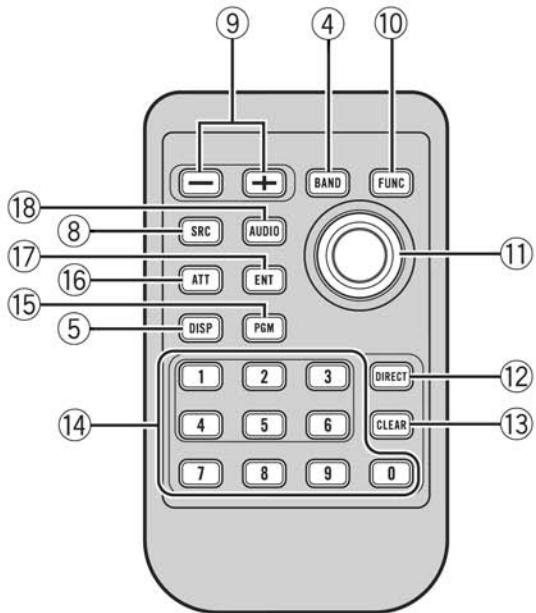

⑯ **AUDIO button**

Press to select various sound quality controls. □

A

⑯ **DIRECT button**

Press to directly select the desired track.

C

⑯ **CLEAR button**

Press to cancel the input number when **0–9** are used.

D

⑯ **0–9 buttons**

Press to directly select the desired track, preset tuning or disc. Buttons **1–6** can operate the preset tuning for the tuner or disc number search for the multi-CD player.

⑯ **PGM button**

Press to operate the preprogrammed functions for each source.

E

⑯ **ATT button**

Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.

⑯ **ENTERTAINMENT button**

Press to change to the entertainment display.

F

Turning the unit on

● Press SOURCE to turn the unit on.

When you select a source, the unit is turned on. □

- When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. □

Selecting a source

You can select a source you want to listen to. To switch to the built-in CD player, load a disc in the unit.

● Press SOURCE to select a source.

Press **SOURCE** repeatedly to switch between the following sources:

XM tuner—SIRIUS tuner—Tuner—Television—DVD player/Multi-DVD player—Built-in CD player—Multi-CD player—iPod—External unit 1—External unit 2—AUX1—AUX2

Notes

- In the following cases, the sound source will not change:
 - When there is no unit corresponding to the selected source connected to this unit.
 - When there is no disc in the unit.
 - When there is no disc in the DVD player.
 - When there is no magazine in the multi-CD player.
 - When there is no magazine in the multi-DVD player.
 - When the AUX (auxiliary input) is set to off.
- External unit refers to a Pioneer product (such as one available in the future) that, although incompatible as a source, enables control of basic functions by this unit. Two external units can be controlled by this unit. When two external units are connected, the allocation of them to external unit 1 or external unit 2 is automatically set by this unit.

Loading a disc


1 Press EJECT to open the front panel.

CD loading slot appears.

- After a CD has been inserted, press **SOURCE** to select the built-in CD player.

2 Insert a CD into the CD loading slot.

Front panel is closed automatically, and playback will start.

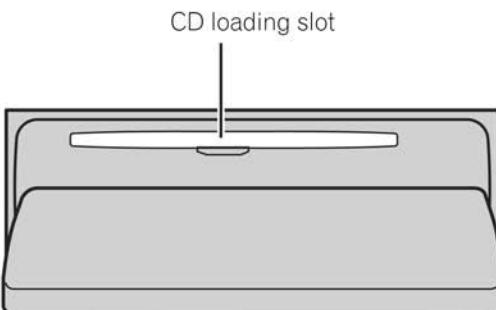

- You can eject a CD by pressing **EJECT**.

Notes

- The built-in CD player plays one standard, 12-cm or 8-cm CD at a time. Do not use an adapter when playing 8-cm CDs.
- Do not insert anything other than a CD into the CD loading slot.
- There is sometimes a delay between starting up CD playback and the sound being issued. When being read, **Format read** is displayed.
- If you cannot insert a disc completely or if after you insert a disc the disc does not play, check that the label side of the disc is up. Press **EJECT** to eject the disc, and check the disc for damage before inserting it again.

- When the CD loading or ejecting function does not operate properly, you can eject the CD by pressing and holding **EJECT** while opening the front panel.

A

Adjusting the volume

- Use **VOLUME** to adjust the sound level.

With the head unit, rotate **VOLUME** to increase or decrease the volume.

With the remote control, press **VOLUME** to increase or decrease the volume.

B


Turning the unit off

- Press **SOURCE** and hold until the unit turns off.

C

Fixing the front panel

If you do not operate the removing and attaching the front panel function, use the supplied fixing screw and fix the front panel to this unit.

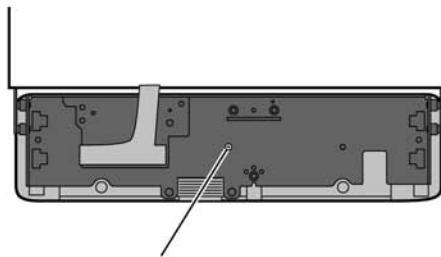


D

Fixing screw (JPZ20P060FTB)

E

● CONNECTION DIAGRAM (UC)

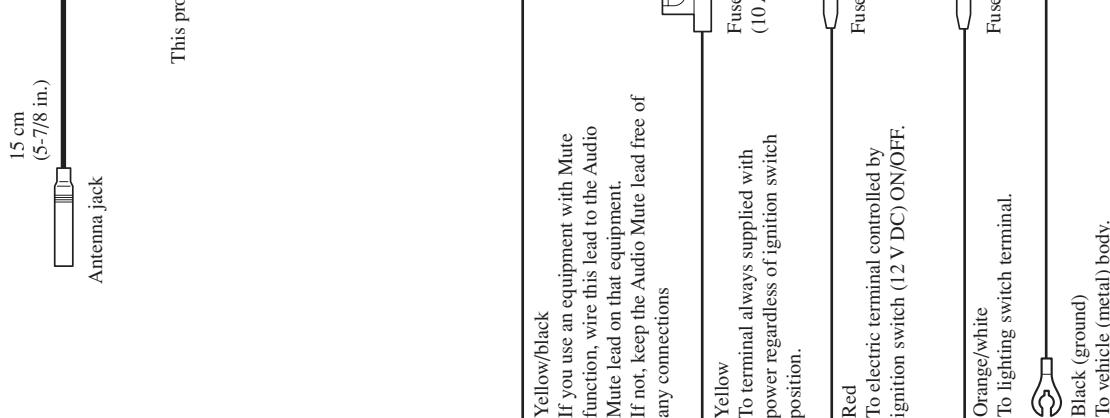

1

2

3

4

A

B


C

D


E

F

Power cable connection diagram

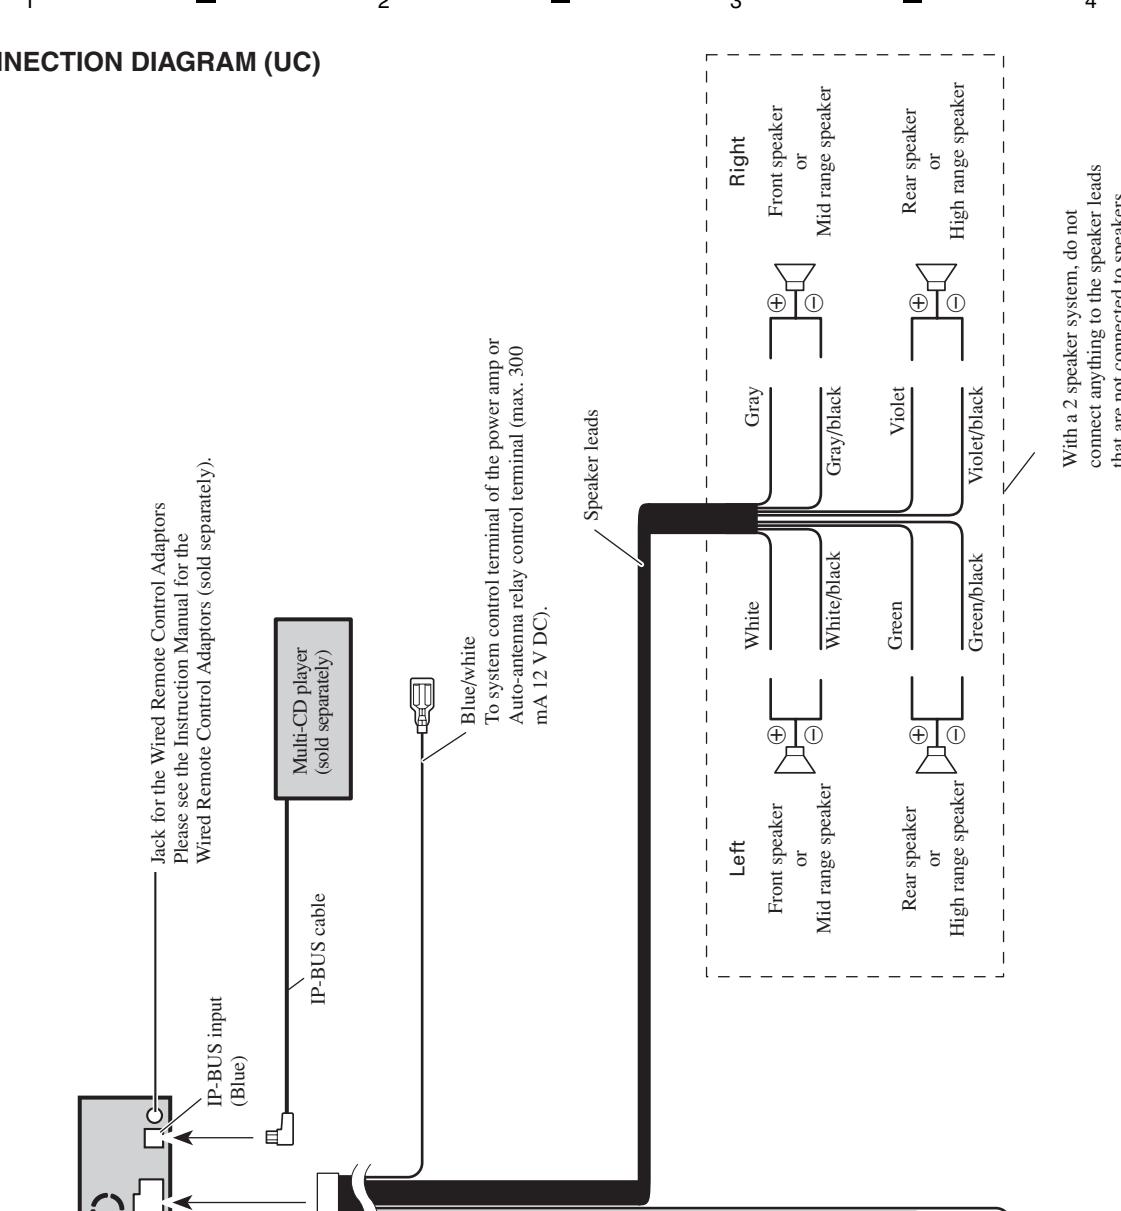


Connection diagram for standard mode without internal amp

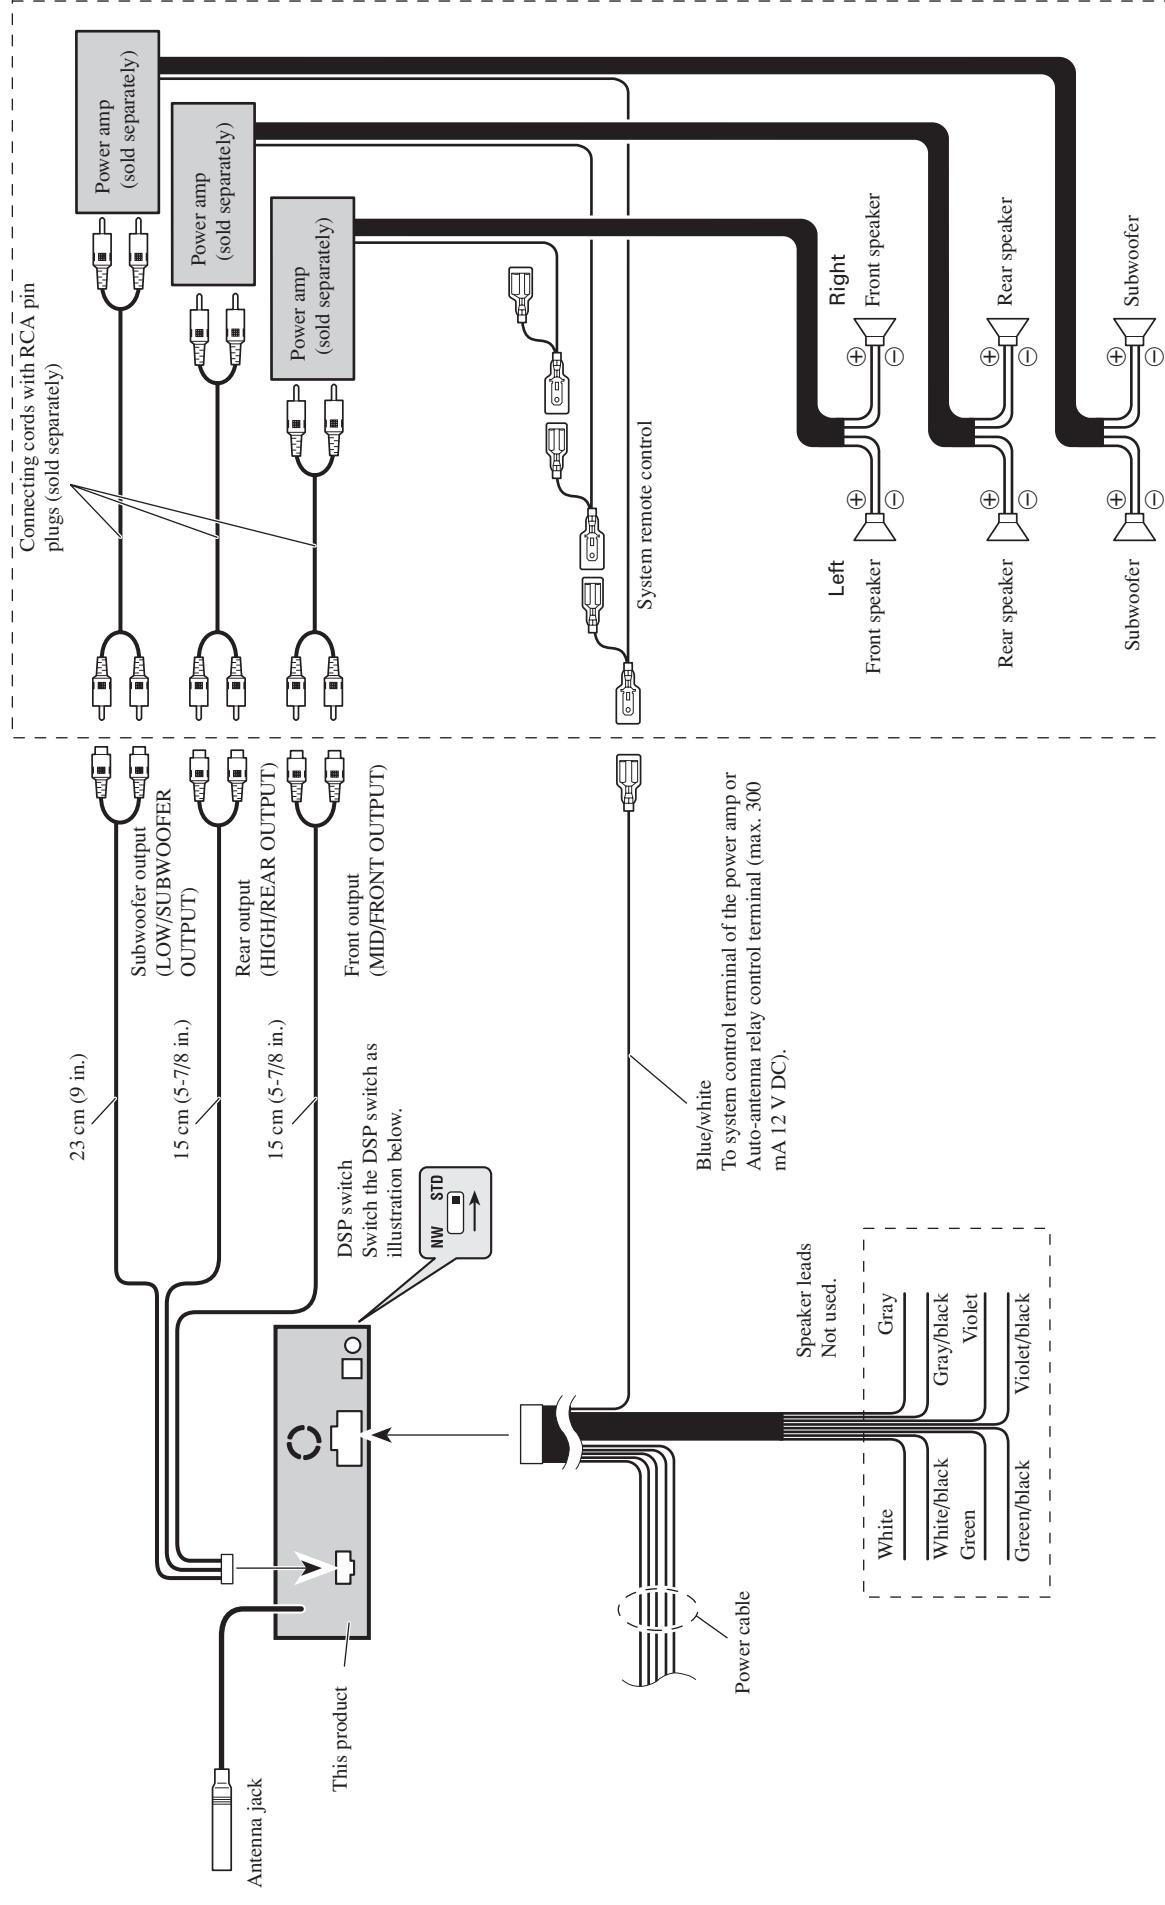


● CONNECTION DIAGRAM (EW5)


Power cable connection diagram

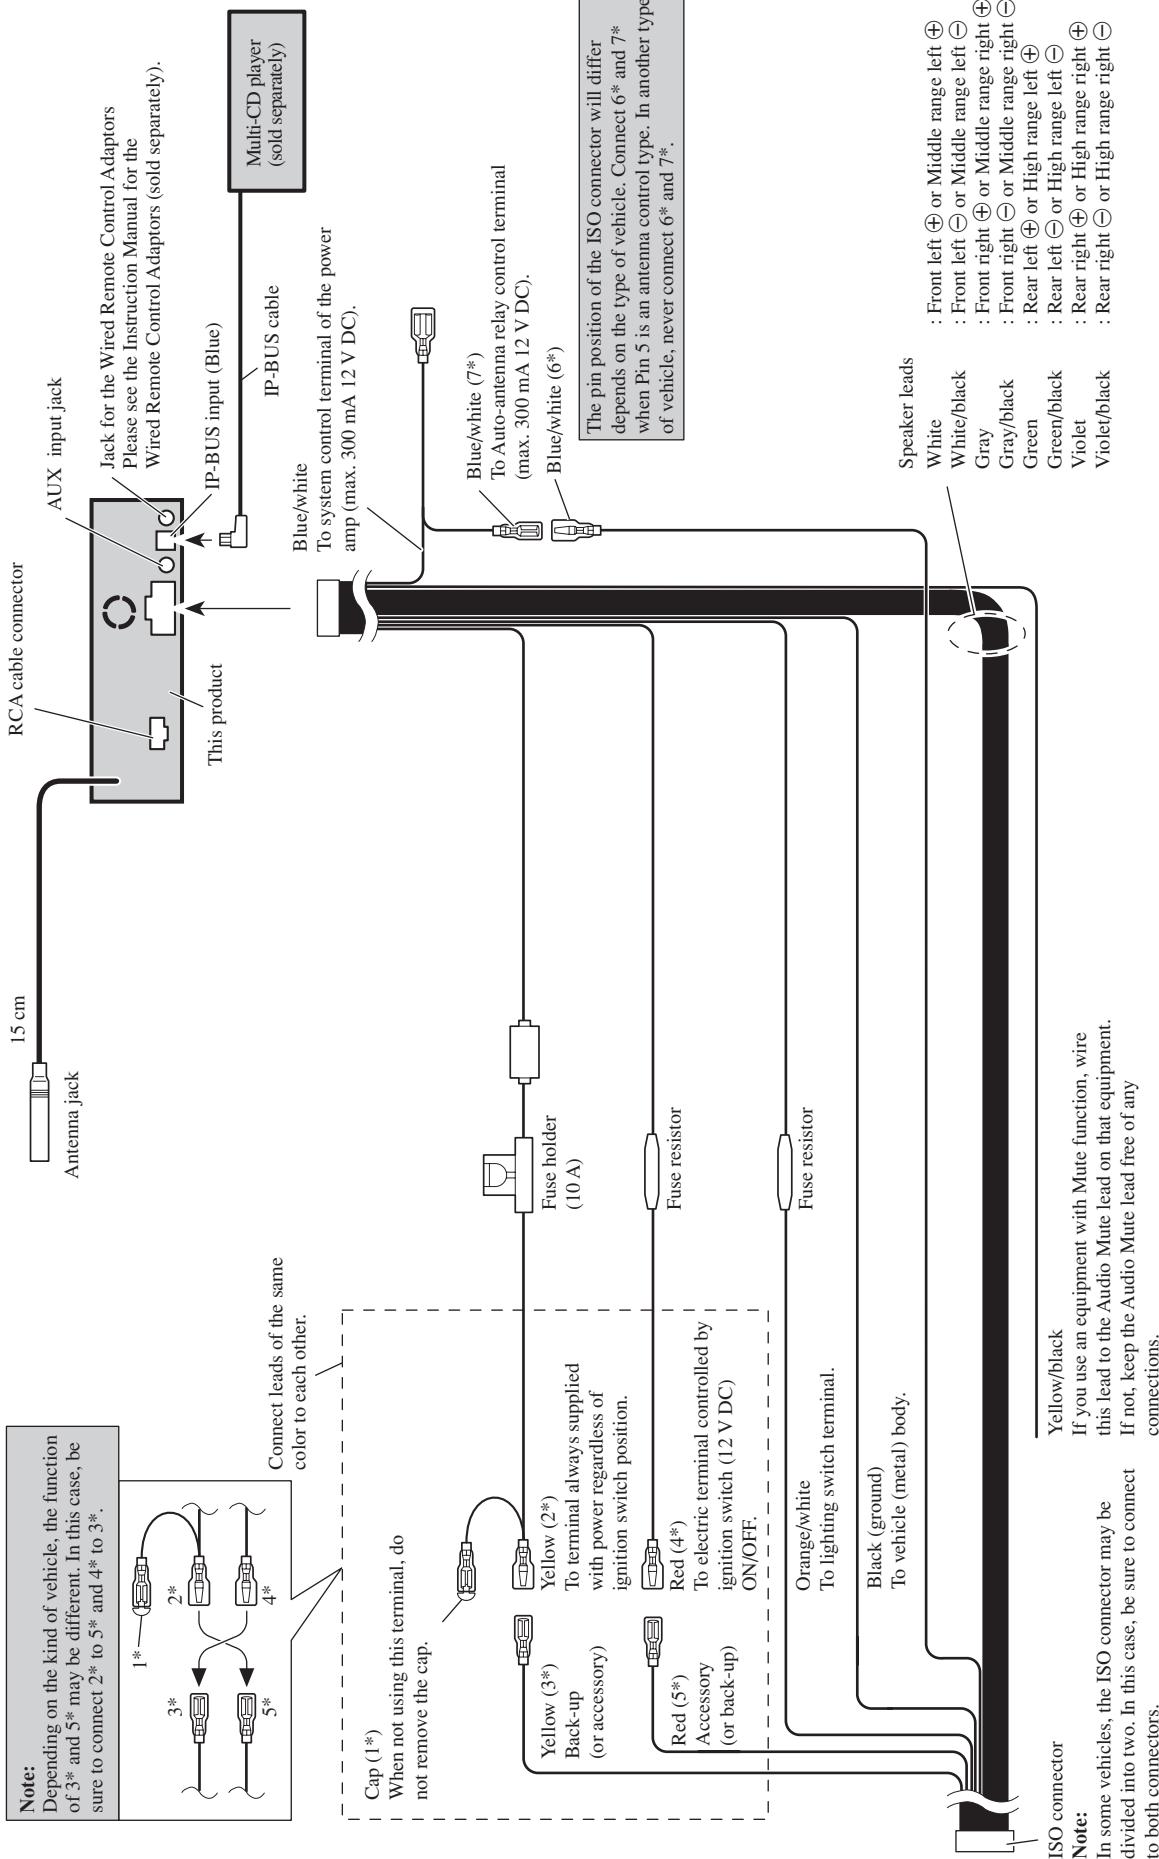


Connection diagram for standard mode without internal amp

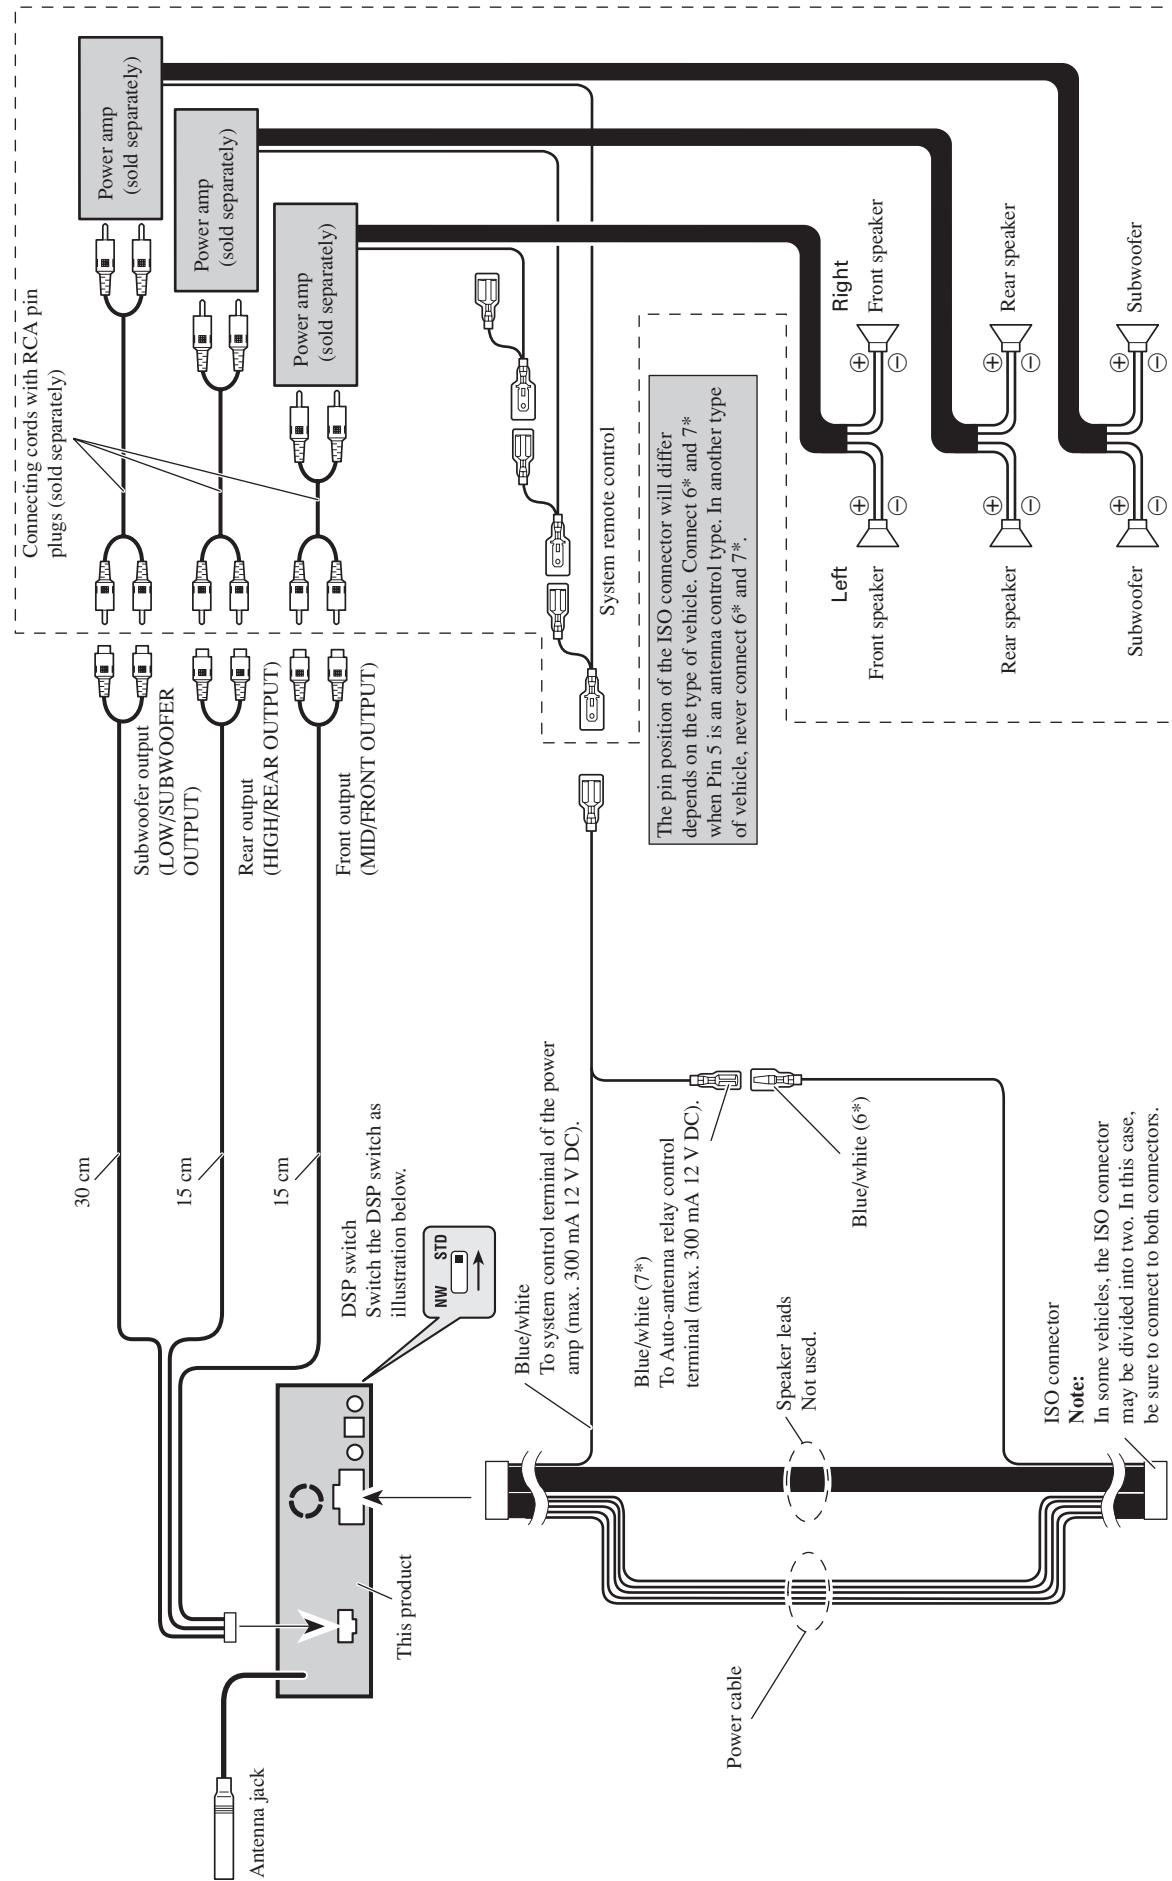

● CONNECTION DIAGRAM (ES)

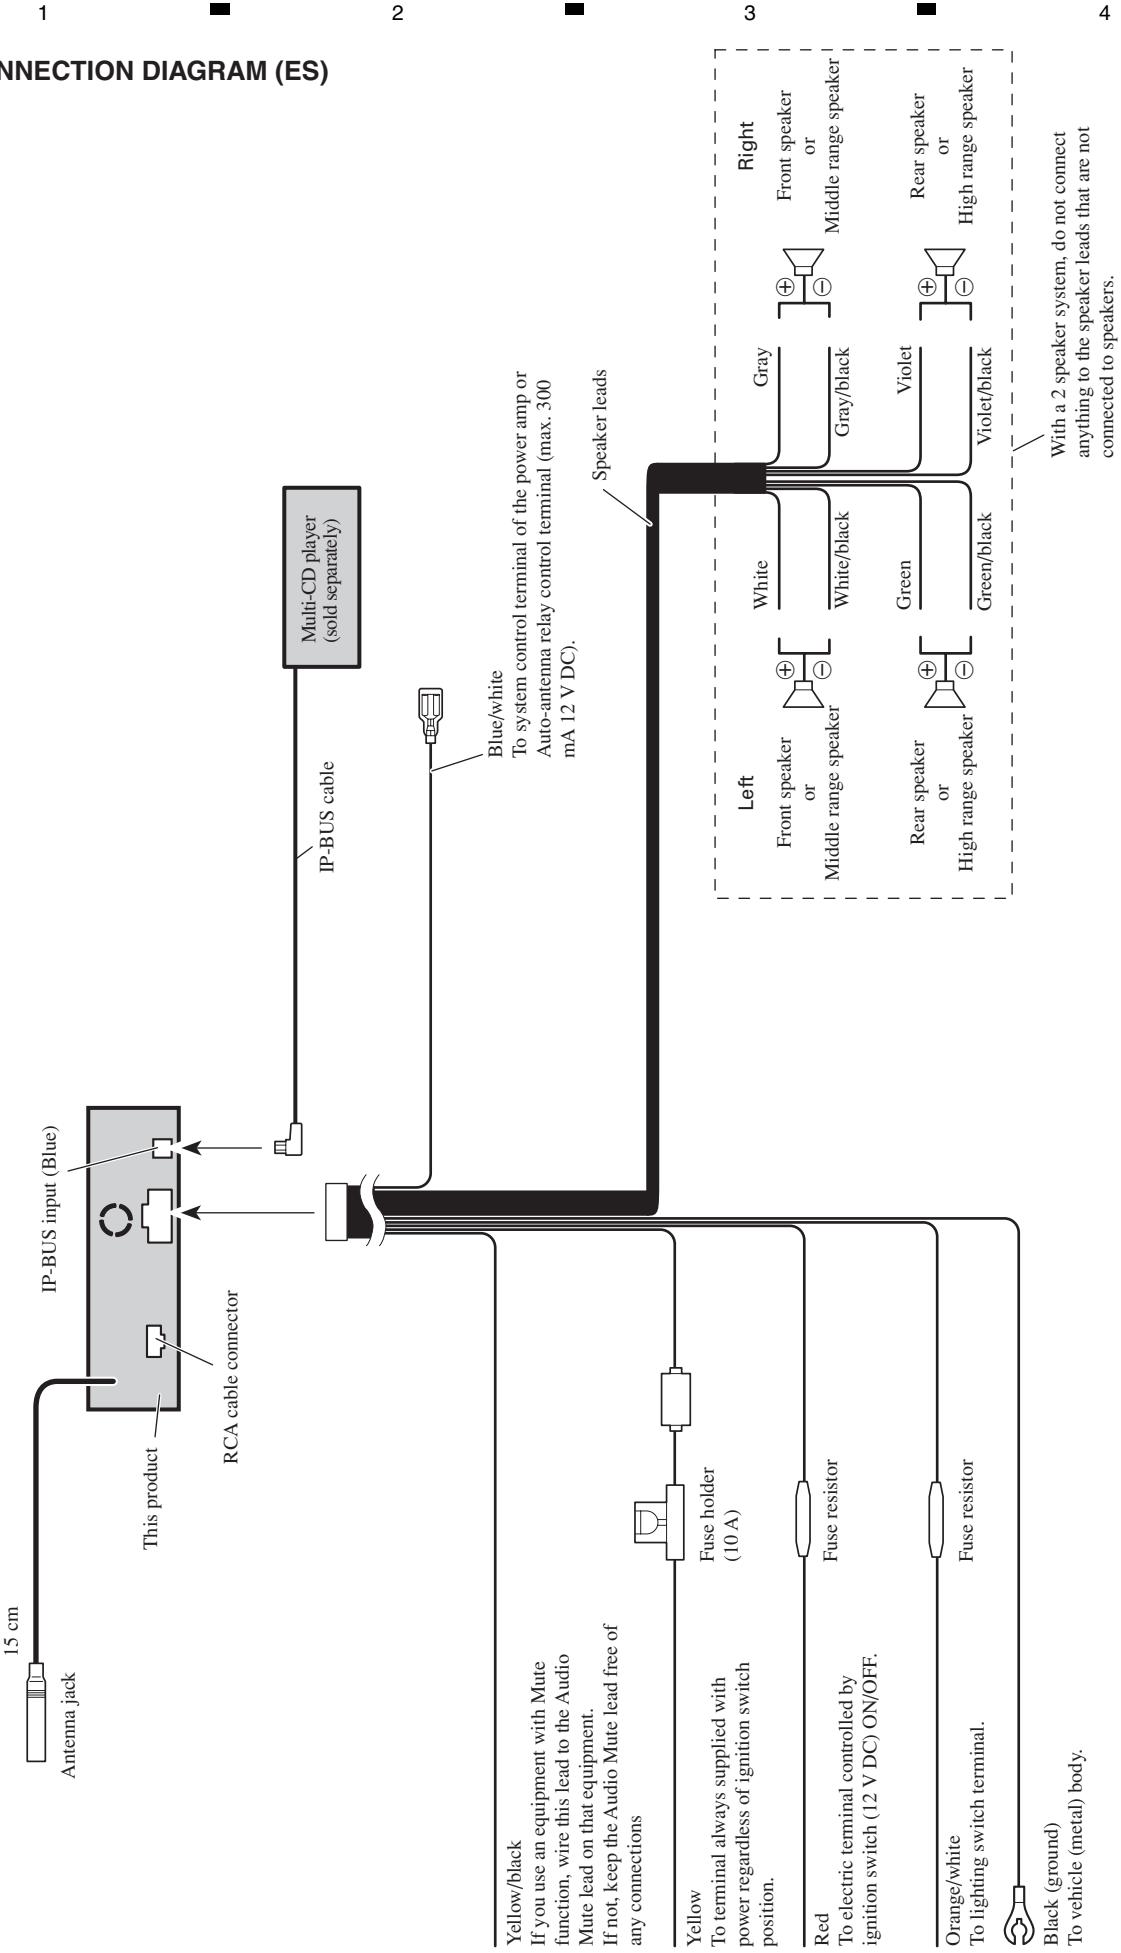

Connection diagram for standard mode without internal amp

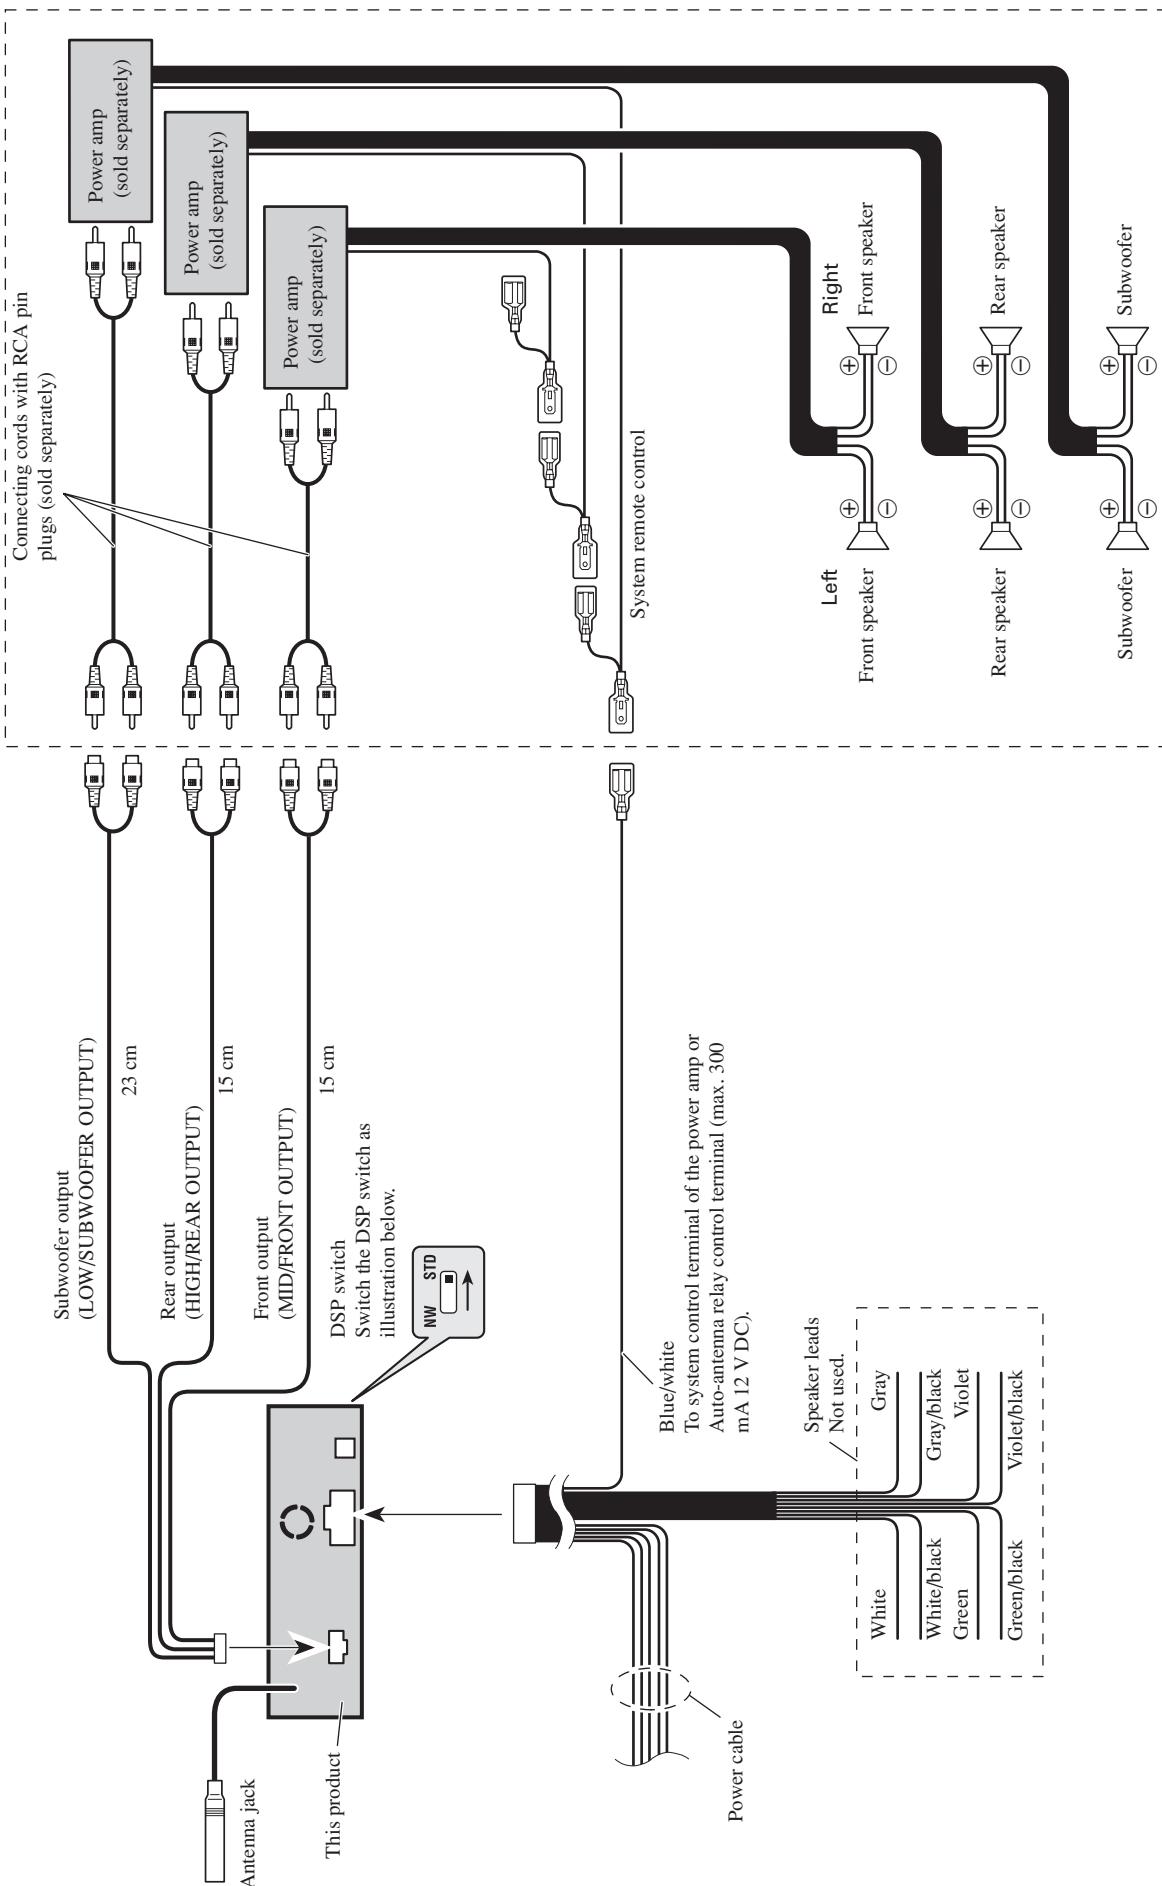

● Jigs List

Name	Jig No.	Remarks
Test Disc	TCD-782	Checking the grating
L.P.F.		Checking the grating (Two pieces)

● Grease List

Name	Grease No.	Remarks
Grease	GEM1024	Drive Unit, CD Mechanism Module
Grease	GEM1045	CD Mechanism Module



Before shipping out the product, be sure to clean the following portions by using the prescribed cleaning tools:

Portions to be cleaned	Cleaning tools
CD pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008
Portions to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

C

D

E

F